


CHANGING COMBS ON THE CHLOE LOOM

MIRRIX LOOMS

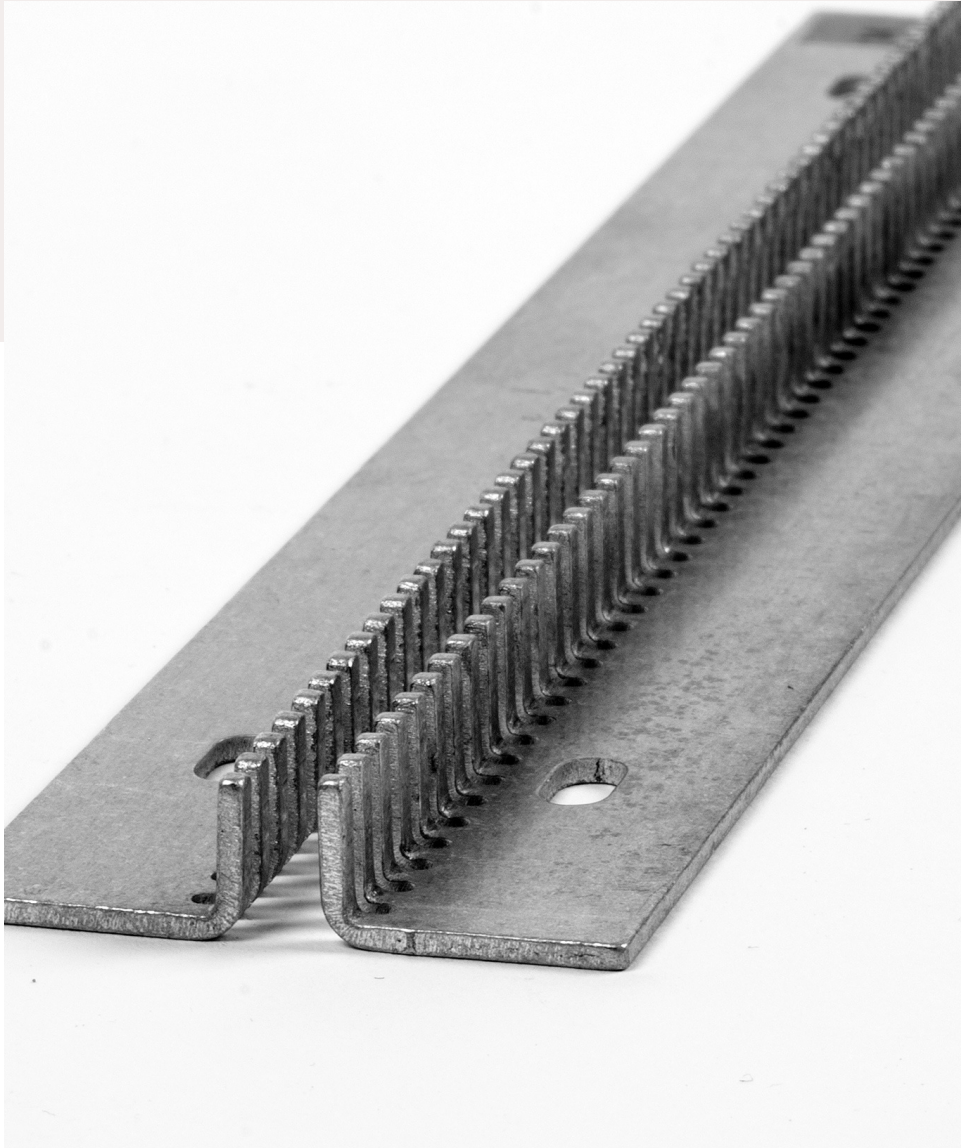

THE AUTHOR'S NAME


TOOLS NEEDED:

Phillips head screwdriver

Remove all four black end caps from the aluminum top and bottom beams. If you can't get them out with your fingers, a butter knife will help.




Place your finger inside of the aluminum square and on top of the little nut to stop it from turning.

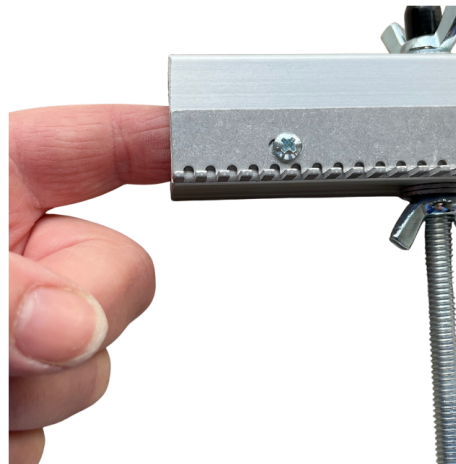

Using your opposite hand, loosen the bolt on the outside of the comb with the screwdriver until it comes completely out.



Do this on all four bolts and remove each comb.

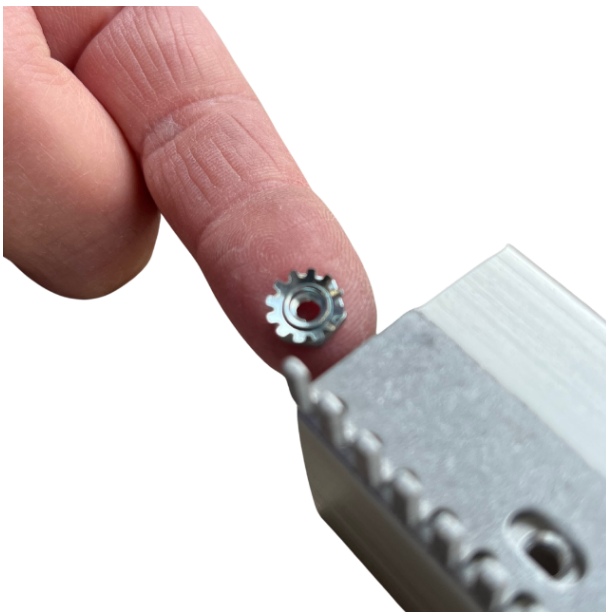

To replace the combs, line up the holes in the comb to the holes on the beam. Make sure that the tines are on the edge of the beam. Slide the nut inside the square tube on your finger tip until you can see it is lined up with the hole. Screw in the bolt while holding the nut until snug. Helpful tip, wrap a piece of tape, sticky side up, on your finger to hold the nut.

When replacing the combs you want to make sure they are centered on the beam. Once you have the combs centered on the beam, tighten the screws. Now you may replace all the black caps.