


# Mirrix Tapestry and Bead Looms

## Warping and Set-Up Instructions (Long Instructions)

*For the Mirrix Saffron Pocket Loom*

### Your Loom Comes With:

- One top and one bottom beam with metal combs
- One threaded rod
- Three wing-nuts
- Four star washers
- One cap nut
- One plastic cap

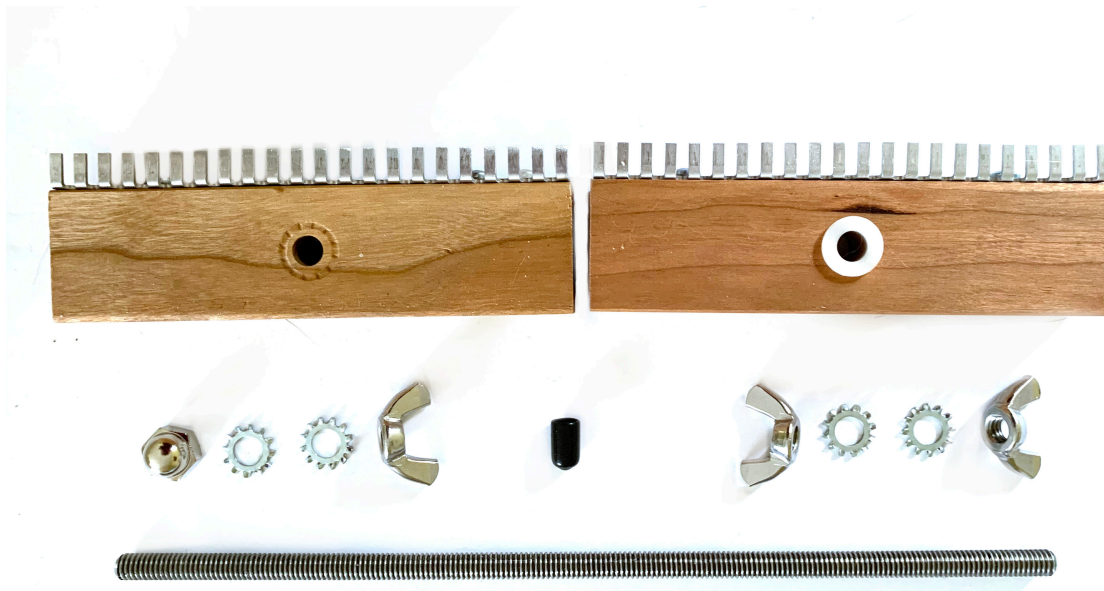


### Setting Up Your Mirrix Loom:


Screw a wing-nut onto the threaded rod with the wings of the nut facing towards the center of the rod. It should be about 1 1/2 inches from the end of the rod. Place a star washer on top of the wing-nut.



Position the top beam of the loom (this can be identified by the white bushing in the center hole of the beam) so the tines are on the bottom of the beam facing the center of the threaded rod and slide it onto the threaded rod on top of the star bushing and wing-nut. Place a star washer on top of the beam. Secure the beam to the threaded rod with a wing-nut.

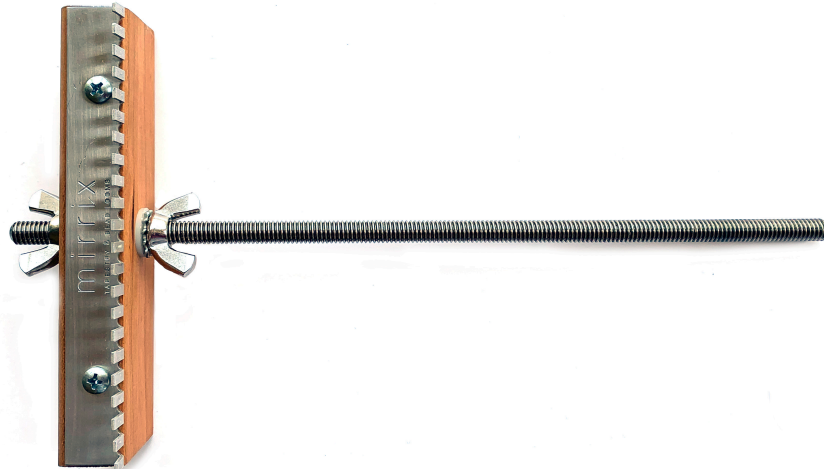

Screw another wing-nut onto the other side of the threaded rod with the wings of the nut facing towards the center of the rod. It should be about 1 1/2 inches from the end of the rod. Place a star washer on top of the wing-nut. Position the bottom beam of the loom so the tines are on the top of the beam facing the center of the threaded rod and slide it onto the threaded rod on top of the star washer and wing-nut. Place a star washer on top of the beam. Screw on the cap nut and then secure the beam by turning the wing-nut down to the bar.

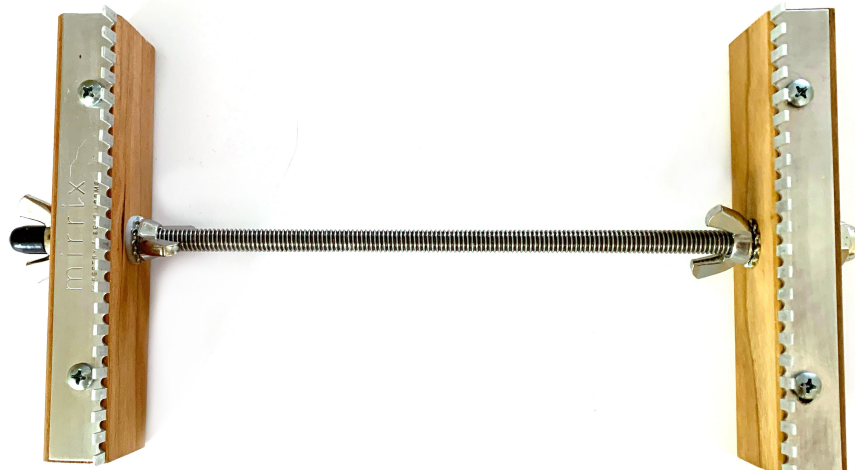


### Warping Instructions:


*Make sure to warp your loom with the piece centered on the loom or with two thin pieces balanced on each side. The top of the loom is the side with two wing-nuts.*

Set the height of your loom by turning the wing-nuts on either side of your top beam to move it up or down on the loom.

Tie your warp thread to one of the tines on the loom. We recommend using a slip-knot.

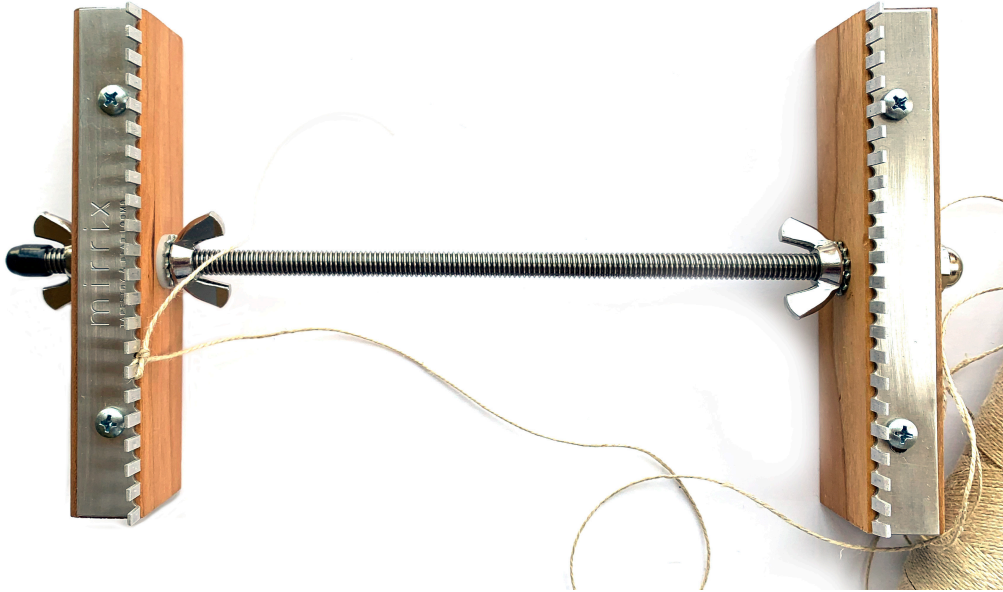


Zig-zag your warp around subsequent tines, alternating tines on the top and bottom of the loom.

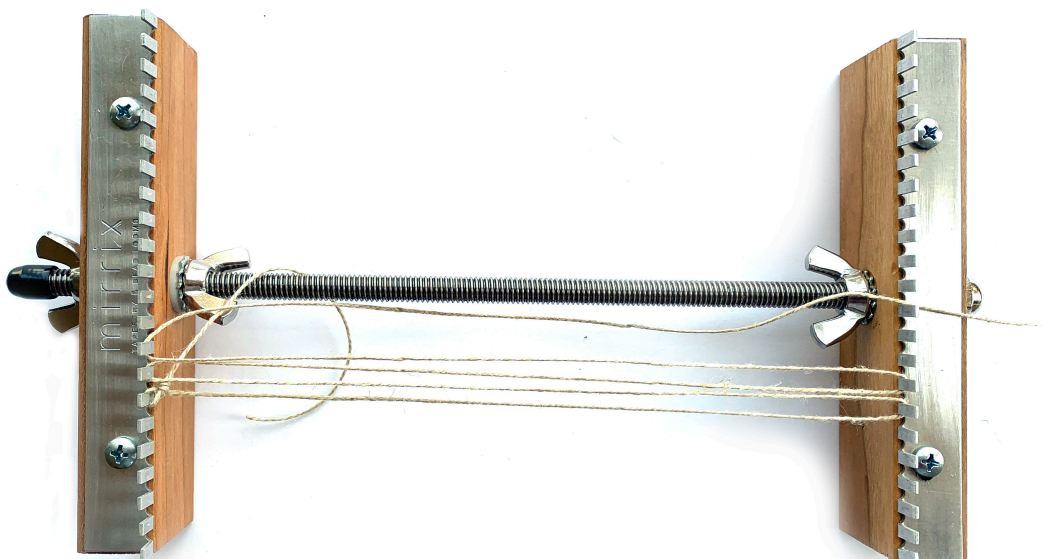

When you have warped as wide as you require, tie off (again, using a slip-knot) onto whatever tine you are on.

Tighten the tension by adjusting the wing-nuts on the loom. Tension can be adjusted as you weave as well.

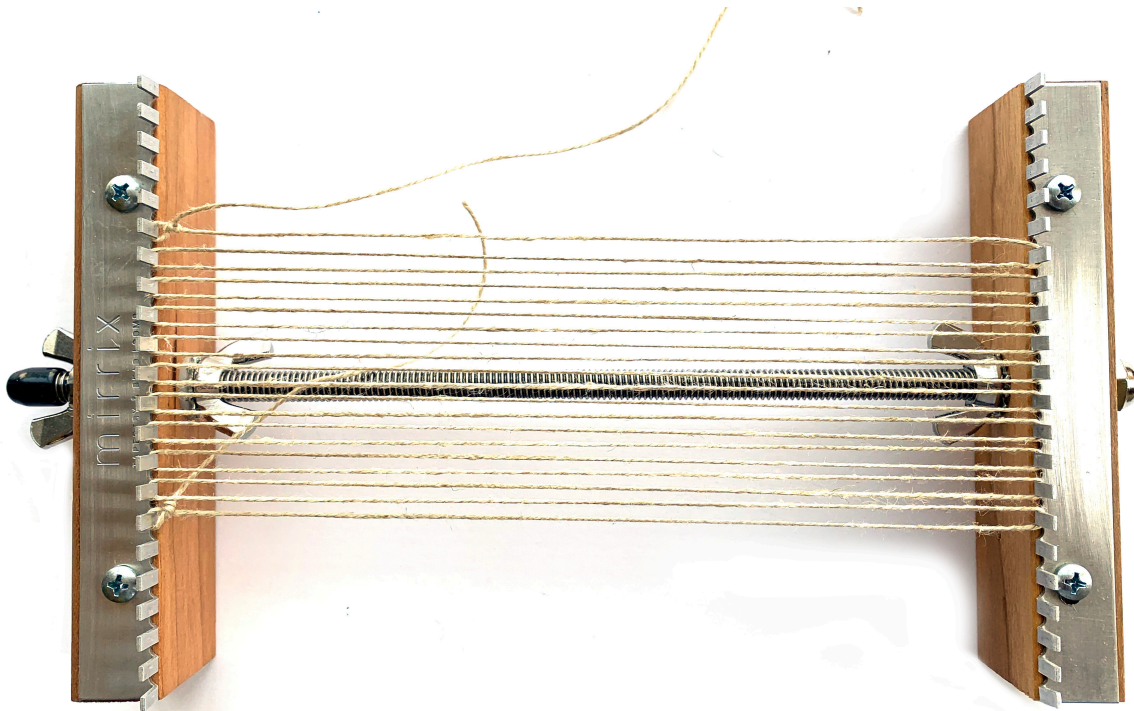

### **Weaving Tips:**

- Begin weaving at the bottom of the loom
- To adjust the tension to make it tighter, loosen the upper wing-nut and tighten the lower wing-nut.
- To adjust the tension to make it looser, loosen the lower wing-nut and tighten the upper wing-nut.
- If you weave from the very bottom to the very top of the loom, you will have a four-selvedge piece.