


Please read all instructions and safety information carefully before use and assembly.




On an assembled adjustable base, lift the head and/or foot of the base to the maximum position.

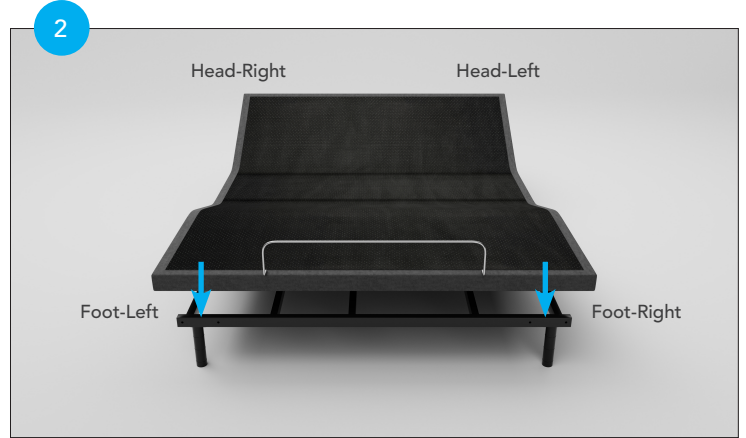

Locate the pre-drilled holes on the adjustable base frame next to each leg. Brackets are labeled according to your orientation, either at the foot looking up to the head, or at the head looking down toward the foot.



Find the best alignment for the Brackets and T-connectors for the headboard and/or footboard.

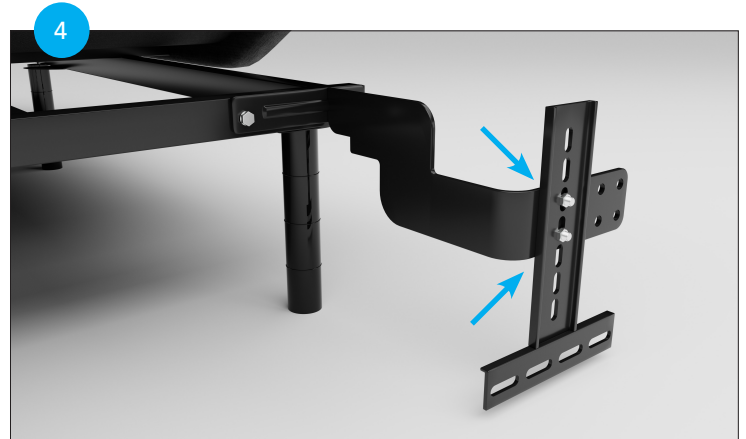

Attach the T-Connector to the Bracket using (x2) Short Bolts, (x2) Nuts, and (x2) Washers.



Repeat this step on the other side.



Attach the headboard and/or footboard to both the T-connectors with the remaining hardware. Check that all brackets and furniture are secured prior to use.