


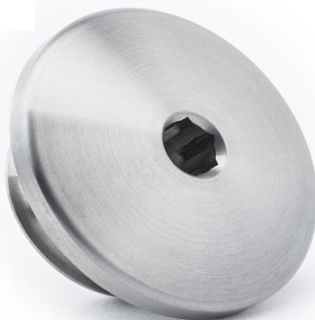

Stainless Allen Oil Plug

BC104-002



Parts Needed:

- 1 BC Stainless Allen Oil Plug

Weekend Project Category:

- Appearance

Fits The Following Motorcycles:

- Triumph Street Twin

Difficulty:



Tools Required:

- Crescent wrench
- 6 mm Allen wrench

Time Required: 1 minute

WARNING: Laws concerning this product vary from state/province to state/province. Your state/province may prohibit its use on public roads or restrict its use to novelty, show use, off-road areas, or race facility areas only. In some states/provinces off-road uses are also prohibited. The manufacturer and retailer assume no responsibility for any use or application of this product in violation of any applicable law. Before installing this product, please check your state/province and

WARNING: It is recommended that this kit be installed by a certified Triumph technician, following the Triumph service manual to aid in proper fitting. Verify all torque specs in Triumph service manual.

Other Items We Think You May Like



ACG and Clutch Badges



Off-Road Footpegs



Predator Pro Slip-Ons



Vintage Rear Sprocket

Stainless Allen Oil Plug

BC104-002



Step 1:

Use crescent wrench or hands to remove stock oil plug.




Step 2:

Remove stock oil plug.



Step 3:

Place supplied O-ring on BC oil plug.

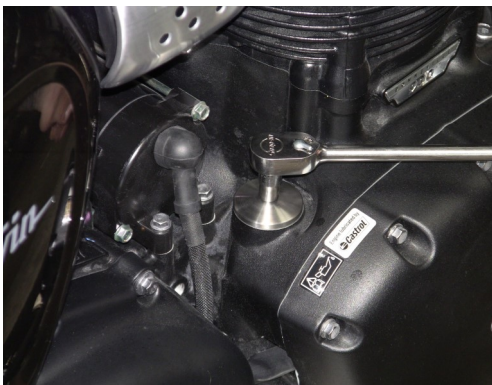

Step 4:

Install BC oil plug with 6mm Allen wrench. Tighten until snug to complete installation.