




BRITISH CUSTOMS

Front Sprocket Cover Install

BC704-004 & 005

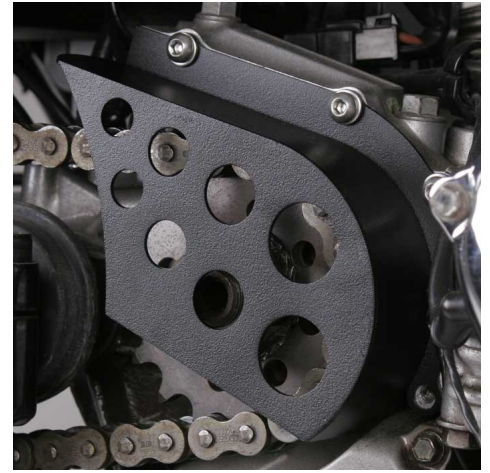

Parts Needed:

- Front sprocket cover

Weekend Project Category:

- Driveline

Fits The Following Motorcycles:

- Triumph Modern Classics
- America & Speedmaster

Difficulty: BEGINNER

Tools Required:

- 8 mm wrench
- 4 mm Allen wrench

Time it Takes to Install:

- 10 minutes

WARNING: Laws concerning this product vary from state/province to state/province. Your state/province may prohibit its use on public roads or restrict its use to novelty, show use, off-road areas, or race facility areas only. In some states/provinces off-road uses are also prohibited. The manufacturer and retailer assume no responsibility for any use or application of this product in violation of any applicable law. Before installing this product, please check your state/province and

WARNING: It is recommended that this kit be installed by a certified Triumph technician, following the Triumph service manual to aid in proper fitting. Verify all torque specs in Triumph service manual.

Related Weekend Projects Upgrades



Retro Rear Sprocket



Retro Chain Guard



Countershaft Sprocket



Passenger Peg Block Offs



BRITISH CUSTOMS


Front Sprocket Cover Install

BC704-004 & 005



Step 1:

Remove the OEM front sprocket cover by removing the mounting screws with a 8mm socket ratchet & extension.

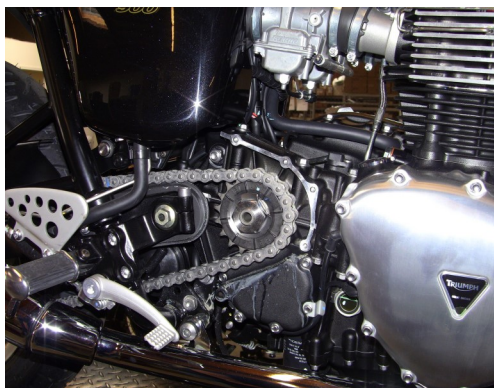

Step 2:


Clean off debris and dirt around the front sprocket and case for a clean appearance. This step will also allow access for needed maintenance of the front sprocket or installation of a new front sprocket such as our British Customs Front Sprocket.



Step 3:

Note: Apply medium strength thread locker or blue Loctite to screws prior to installing.

Line up the British Customs Front Sprocket Cover to the mounting holes for installation. Using the supplied M6 screws & washers, Hand start each screw into the mounting holes and tighten down with a 4mm allen to 9 Nm.

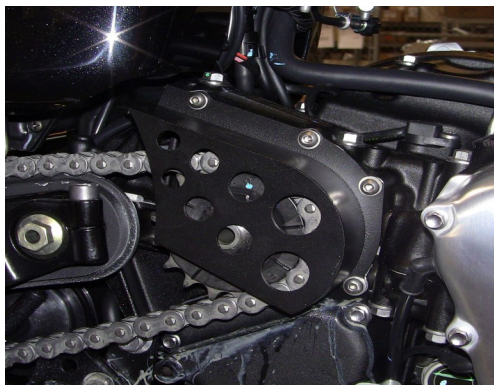

Step 4:

Please note: Do not over-tighten the mounting screws as this can cause damage to the product finish, screw threads, and button head.

Congratulations! You have successfully completed the installation of your new British Customs product.