

HEX OIL FILLER CAP FOR T120

BC104-001-B



TIME REQUIRED:

5 MINUTES

DIFFICULTY:



TOOLS REQUIRED:

- Large flathead screwdriver
- 10mm socket wrench

Recommended related upgrades



SLAMMER SEAT



T120 TRIM PACKAGE



SLEEPER PRO SLIP-ONS




BATES FOOT PEG PACKAGE

WARNING: Laws concerning this product vary from state/province to state/province. Your state/province may prohibit its use on public roads or restrict its use to novelty, show use, off-road areas, or race facility areas only. In some states/provinces off-road uses are also prohibited. The manufacturer and retailer assume no responsibility for any use or application of this product in violation of any applicable law. Check applicable laws and regulations before installing products.


WARNING: It is recommended that this kit be installed by a certified Triumph technician, following the Triumph service manual to aid in proper fitting. Verify all torque specs in Triumph service manual.



PREP: You will need a large flathead screwdriver and a 10mm socket wrench for this installation.

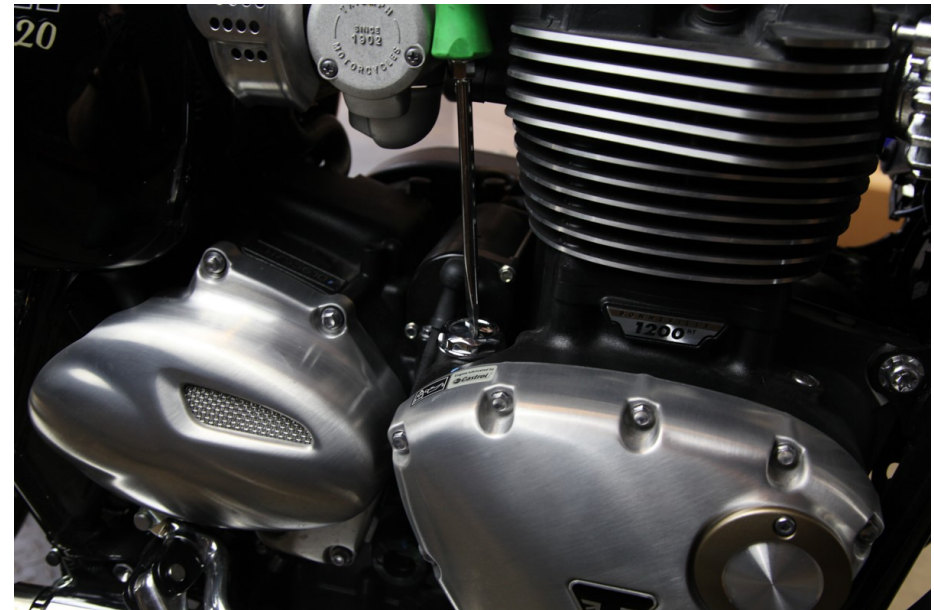

STEP 1: Use a large flathead screwdriver to remove the stock oil filler cap and o-ring.

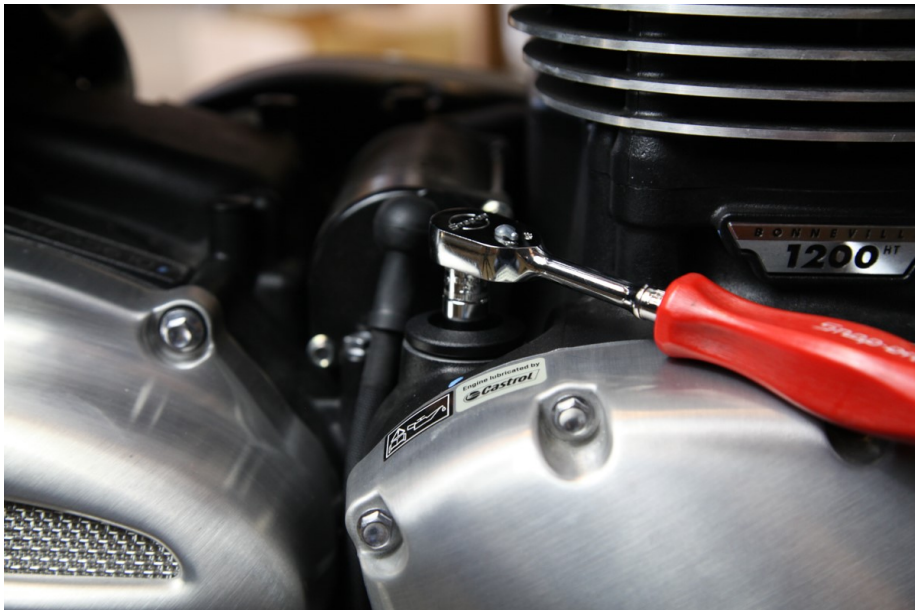

STEP 2: Use a 10mm socket wrench to install your new Hex Oil Filler Cap and o-ring. Tighten until snug; do not overtighten.