



BRITISH CUSTOMS

Shock Mount License Plate



Parts Needed:

- Shock Mount License Plate
- Supplied bolt

Fits The Following Motorcycles:

- Triumph Street Twin
- Triumph Modern Classics

Tools Required:

- 10 mm wrench
- 5 mm Allen wrench

Weekend Project Category:

- Appearance

Difficulty:



Time Required: 10 minutes

WARNING: Laws concerning this product vary from state/province to state/province. Your state/province may prohibit its use on public roads or restrict its use to novelty, show use, off-road areas, or race facility areas only. In some states/provinces off-road uses are also prohibited. The manufacturer and retailer assume no responsibility for any use or application of this product in violation of any applicable law. Before installing this product, please check your state/province and

WARNING: It is recommended that this kit be installed by a certified Triumph technician, following the Triumph service manual to aid in proper fitting. Verify all torque specs in Triumph service manual.

Other Items We Think You May Like



Shock Bolt Dress Up Kit



Performance Tips




Off Road Foot Pegs




Vintage Rear Sprocket

Shock Mount License Plate

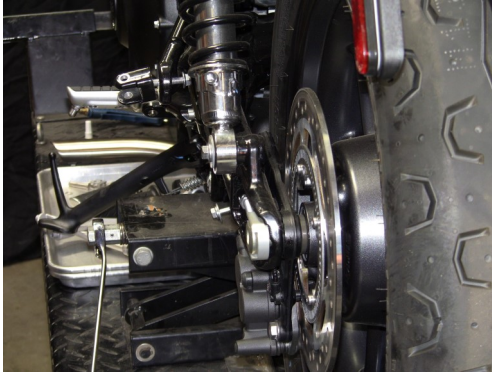


Step 1:

Place a jack underneath the bike.

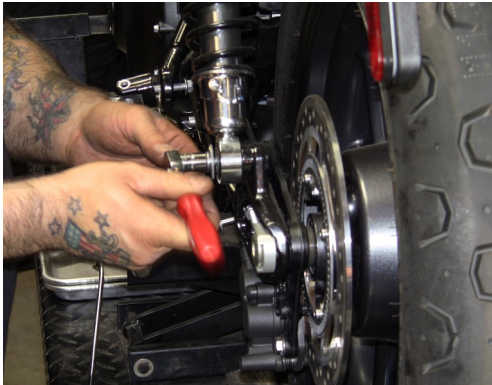

Step 2:

Use a 10mm wrench to remove the left shock's lower mount bolt.

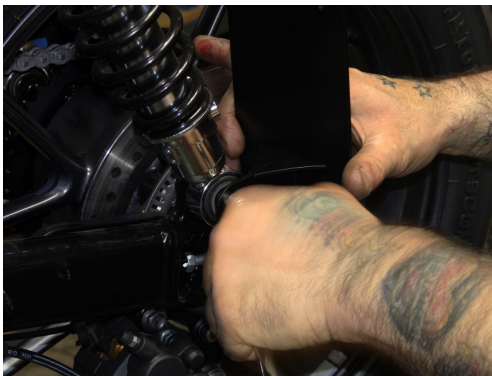

Step 3:

Position BC Shock Mount License Plate over lower shock mounting point.




Step 4:

Use a 5mm Allen wrench and supplied bolt to secure BC Shock Mount License Plate.



BRITISH CUSTOMS

Shock Mount License Plate

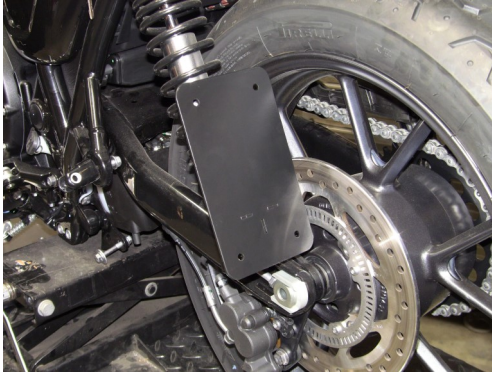

Installation Complete!

Your BC Shock Mount License Plate has been successfully installed!