



BRITISH CUSTOMS

Predator Pro for Thruxton and Bonneville

Please visit our online Resource Center for more detailed information

At <http://www.british-customs.com/resource-center>



Includes:

- 2 Predator Pro slip-on mufflers
- Mounting hardware

Fits The Following Motorcycles:

- Triumph Bonneville 2011-2015
- Triumph Thruxton 2011-2015

Tools Required:

- Allen wrenches: 6mm, 8mm
- Socket wrenches: 12mm, 17mm

Weekend Project Category:

- Performance

Difficulty:



Time It Takes To Install: 30 minutes

WARNING: Laws concerning this product vary from state/province to state/province. Your state/province may prohibit its use on public roads or restrict its use to novelty, show use, off-road areas, or race facility areas only. In some states/provinces off-road uses are also prohibited. The manufacturer and retailer assume no responsibility for any use or application of this product in violation of any applicable law. Before installing this product, please check your state/province and local/municipal laws and regulations.

WARNING: Before proceeding with installation, it is important that you understand and agree to our terms and conditions. Support we provide is intended only as a guide. We believe all of our customers should always coordinate any installs directly with their local certified Triumph dealer and that the proper safety checks including torque specifications are completed by them before you ride. While we do our best to ensure that all our products will meet certain fitment specifications, we do not guarantee that they will work on all makes, models, and VIN numbers due to factors outside our control.

Related Weekend Project Upgrades



Air Box Removal Kit



Air Injection Removal Kit



Stage 1 Cam Service



Café Racer Seat



BRITISH CUSTOMS

Predator Pro for Thruxton and Bonneville

Please visit our online Resource Center for more detailed information

At <http://www.british-customs.com/resource-center>



Step 1:

Begin with the left side. Loosen exhaust clamp with 6mm Allen wrench.



Step 2:

Use a 12mm wrench to remove passenger footpeg nut.



Step 3:

Remove passenger footpeg.



Step 4:

Remove left stock muffler.



BRITISH CUSTOMS

Predator Pro for Thruxton and Bonneville

Please visit our online Resource Center for more detailed information

At <http://www.british-customs.com/resource-center>



Step 5:

Note the direction that the exhaust clamp holding the muffler onto the mid-pipe is mounted, because the exhaust clamp will have to be mounted onto the Predator Pro mufflers in the same direction. Remove stock exhaust clamp and place on Predator Pro exhaust inlet facing the same way as they were on the stock mufflers. Reuse the stock nut.



Step 6:

Remove rubber kickstand bumper from stock bracket.



Step 7:

Locate the plastic bag containing the supplied mounting hardware. This bag contains two sets of muffler spacers and a kickstand bumper bracket. Mount the stock rubber kickstand bumper to the supplied kickstand bumper bracket by popping the bumper into the supplied bracket.



Step 8:

Install Predator Pro kickstand bumper bracket with a 17mm wrench and 8mm Allen wrench so that the bumper faces away from the motorcycle frame.



BRITISH CUSTOMS

Predator Pro for Thruxton and Bonneville

Please visit our online Resource Center for more detailed information

At <http://www.british-customs.com/resource-center>



Step 9:

Locate the zip-tied hardware bundles in the supplied plastic bag that contained the rubber kickstand bumper. Mount supplied rubber grommet to Predator Pro muffler mounting bracket. The metal spacer with a collar inserts into the side of the rubber grommet facing the frame. The other metal spacer without a collar will be used on the side of the rubber grommet facing away from the frame.




Step 10:

Make sure the exhaust clamp is still on the left muffler and insert the muffler into header pipe. The back side of the passenger foot peg bracket is recessed. Place the other metal spacer into the recessed space on the back side of the passenger foot peg bracket.



Step 11:

Slide passenger foot peg back into place and reinstall it with a 12mm wrench.

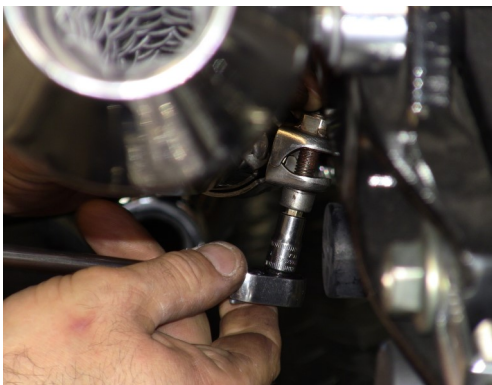

Step 12:

Use a 6mm Allen wrench to make exhaust clamp snug. Adjust all clearances before tightening clamp. Make sure the bolt faces inward to keep the appearance clean.



BRITISH CUSTOMS

Predator Pro for Thruxton and Bonneville

Please visit our online Resource Center for more detailed information

At <http://www.british-customs.com/resource-center>



Step 13:

Congratulations! You have successfully installed your left-side muffer!



Step 14:

Repeat steps 1-13 on the right side (except for those involving the kickstand bracket) to remove right-side stock muffer and install right-side BC Predator Pro muffer.



Installation complete!

Congratulations! You have successfully installed your British Customs Predator Pro mufflers!

For a digital version of this instruction guide with zooming images, please visit the British Customs Resource Center at <http://www.british-customs.com/resource-center>