

Read through this entire instruction manual BEFORE using Scorpion Rising 3D Wind Up Puzzles.

Images may vary from actual product

PARTS Scorpion Rising 3D Wind Up Puzzles

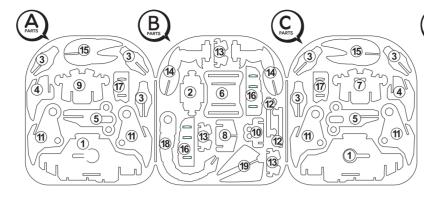


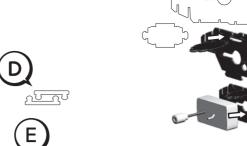

1 A1 + B2 + E

Attach piece B2 onto one of the larger pieces (A1).

Note: Make sure all pieces are pressed in all the way in order to securely interlock and leave room for later pieces.




2 + C1

Attach motor E and secure it by sliding it forward into the narrower portion of the cutout. Attach C1 to frame the motor.


For additional instructions and to check out other cool models, visit us at 3DWindUp.com!





3 A3 + A4 + C4 Attach pieces A3 to

A4 and C4.



4 A5 + C5 + Combo from 3 Attach pieces A5 and C5 to combination built in step 3.

ASSEMBLY



Combo from 2 + Combo from 4

through holes on the legs.


Attach piece B6 to bottom.

(i) + B6


(E) + B13

Attach pieces B3 to top.

Hold arm horizontally and push onto hinge joint. Rotate arm downward to lock into place. Note that the spokes on the motor will poke




7 + C7 Attach piece C7 to the top. Make sure it is fully locked into place.




(1) + B8 Attach piece B8 by pushing down.



(2) + A9 Attach piece A9 to the top. Make sure it is fully locked into place.



10 + B10 Attach piece B10 to the top. Make sure it is fully locked into place.



Combo from 10 + Combo from 11 These attach in the same way as the legs do from

A3 + A11 + C3 + C11

Attach pieces A3 and C3 to A11

Hold back legs horizontally and insert onto hinge joint. Rotate leg downward to lock into place.



Attach piece B18 to B19





Combo from 11 +

step 12.

Combo from 12

These attach in the same

way as the legs do from


Hold front legs horizontally and insert onto hinge joint.


Rotate leg downward


to lock into place.

Attach pieces B12 and D12 to the scorpion. B12 and D act as connecting leg muscles, pulling the scorpion along. See Fig.1 and Fig.2. Please note each side uses two connectors.




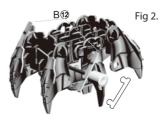

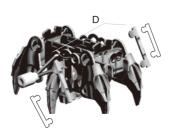


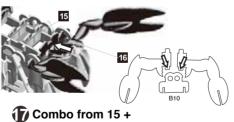


Combo from 16 Attach arms from step 16. Note that the arms must first slip through the holes



16 A15 + B14 + C15 Attach pieces A15 and C15 to pieces B14 to create arms.

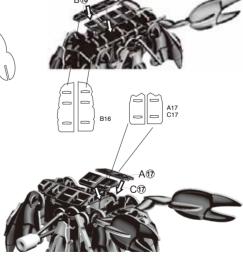

Attach pieces B16 to the back of the scorpion, and attach pieces A17 and C17 to the front.

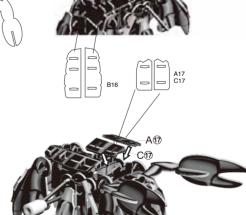

18 B16 + A17 + C17

Wind puzzle to walk.