

# HIGHWAY PEG MOUNT

Catalog # 08-643

Fits front engine guard with 1-1/4" tubing.  
Works with all H-D style male-mount footpegs.

NOTE: Use blue loctite on all fasteners.


1. Tighten 3/8" bolt 1st to obtain flush fit.
2. Tighten 5/16" bolt 2nd, gap provided for max. clamping force.

## Footpeg Installation

Uses stock footpeg spring (OEM # 50912-74). Provided with brackets.

Blue Loctite 3/8-16 flat head screw.

Pegs can be rotated 360°

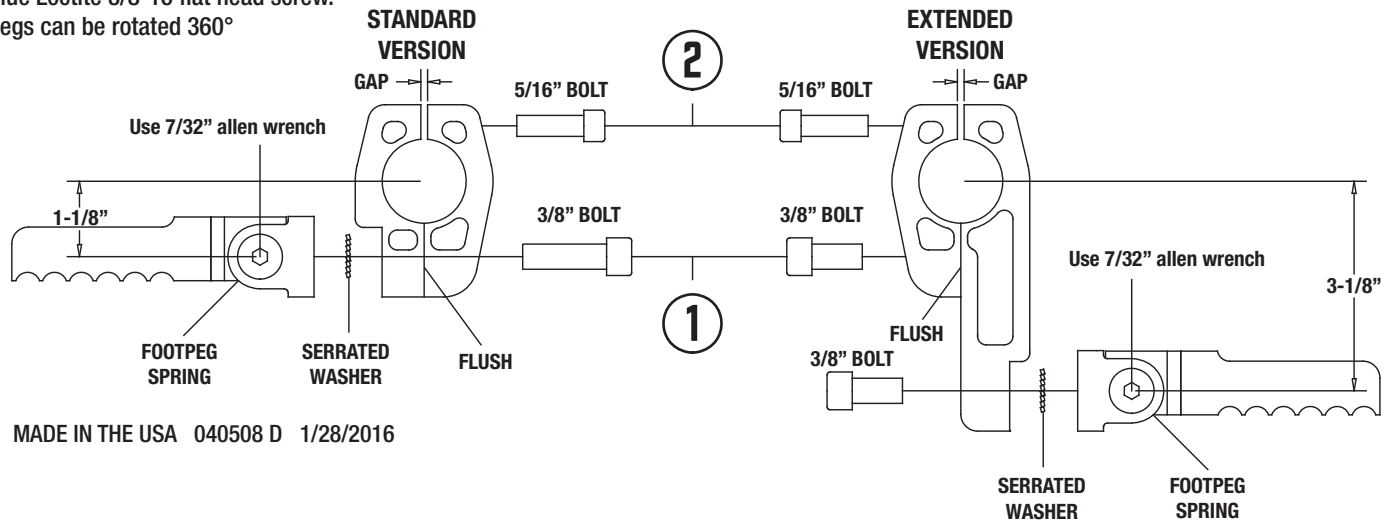

MADE IN THE USA 040508 D 1/28/2016



Tools needed:

- 1/4" allen wrench
- 5/16" allen wrench
- 7/32" allen wrench
- Blue Loctite

Torque Specs:

- 3/8"-16 socket head: dry 49 ft-lbs, oiled 39 ft-lbs
- 5/16"-18 socket head: dry 29 ft-lbs, oiled 23 ft-lbs

# HIGHWAY PEG MOUNT

Catalog # 08-643

Fits front engine guard with 1-1/4" tubing.  
Works with all H-D style male-mount footpegs.

NOTE: Use blue loctite on all fasteners.


1. Tighten 3/8" bolt 1st to obtain flush fit.
2. Tighten 5/16" bolt 2nd, gap provided for max. clamping force.

## Footpeg Installation

Uses stock footpeg spring (OEM # 50912-74). Provided with brackets.

Blue Loctite 3/8-16 flat head screw.

Pegs can be rotated 360°

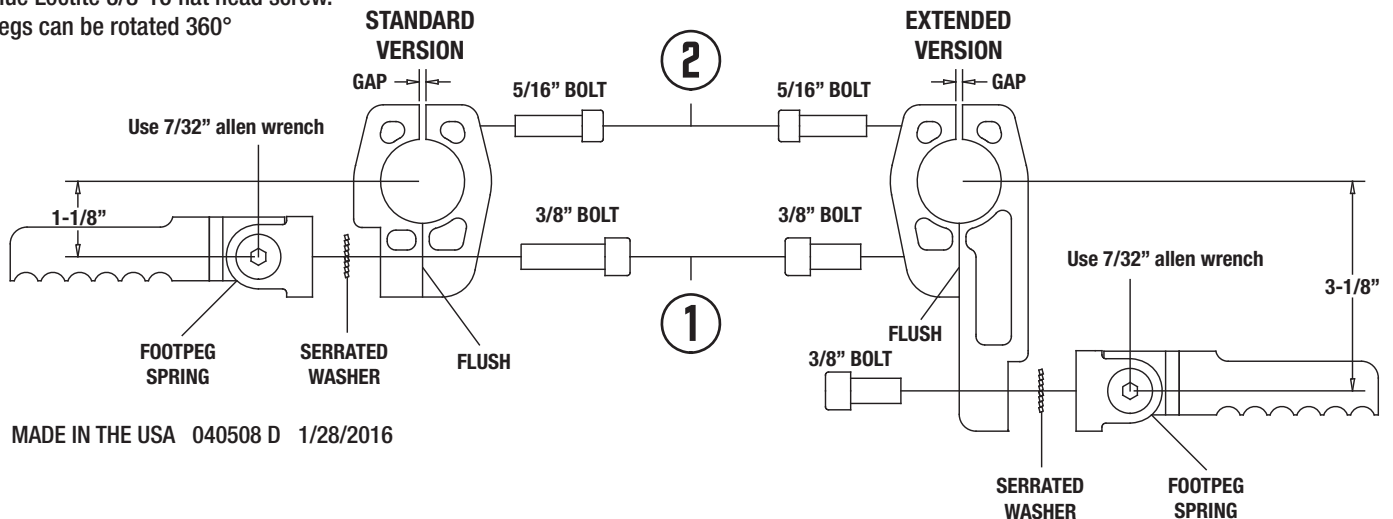

MADE IN THE USA 040508 D 1/28/2016



Tools needed:

- 1/4" allen wrench
- 5/16" allen wrench
- 7/32" allen wrench
- Blue Loctite

Torque Specs:

- 3/8"-16 socket head: dry 49 ft-lbs, oiled 39 ft-lbs
- 5/16"-18 socket head: dry 29 ft-lbs, oiled 23 ft-lbs