



INDIAN PASSENGER PEGS INSTALLATION

For technical support contact Joker Machine

2245 Kiowa Blvd N. Ste. 100, Lake Havasu City, AZ 86403
PHONE: 909-596-9690, FAX: 909-596-9693
sales@jokermachine.com, www.jokermachine.com

**NOTE: USE MEDIUM THREAD LOCKER ON ALL
HARDWARE**

**DISCLAIMER: Joker Machine denies any responsibility for
any issues that may be caused from failure to use liquid
thread locker on all hardware listed below**

TOOLS NEEDED

- 5/16 12 Point Wrench
- 1/8 Allen Key/Driver
- 5/32 Allen Key/Driver
- 6mm Allen Key/Driver
- 13mm Socket
- Blue Loctite
- Retaining Ring Pliers

PROVIDED WITH PEGS

- (2) M8 - 1.25 Socket Head Cap Screw
- (2) M8 - 1.25 Nylock Nut
- (2) Aluminum Spacer
- (2) 10-24 Socket Head Cap Screw (pre-assembled to footpeg mount)


**Installation is easier in some cases if you remove the
footpeg from mount first.**

1. Install footpeg to stock footpeg mount using the hardware Joker Machine provided.
2. Loosen 1/4" set screws found on the bottom of some footpegs, and 5/16" 12 point screw if footpeg is still together after step 1. This will allow you to adjust the peg.
3. Adjust footpeg to desired position and firmly tighten down 5/16" 12 point screw or 1/4" set screws.
4. Adjust pitch adjustment screw found behind footpeg mount as needed.

Enjoy



Assembly

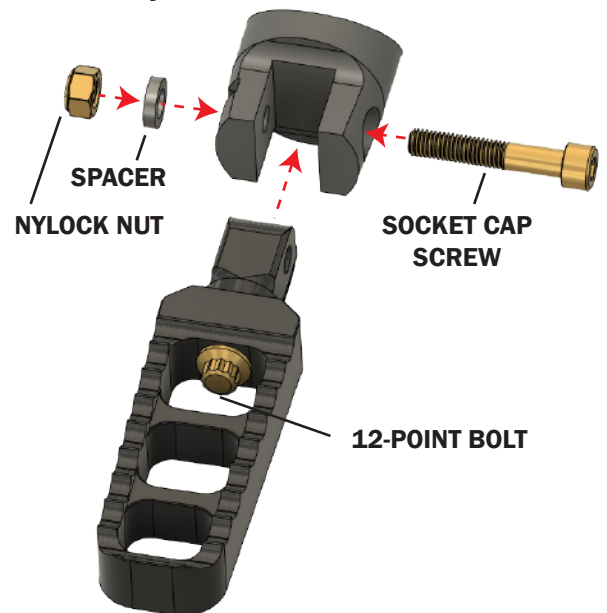

Pitch Adjustment Screw

