

## INDIAN SCOUT FOOT CONTROL EXTENSION KIT

**PART NO. 30-580**


For technical support contact Joker Machine  
 2245 Kiowa Blvd N. Ste. 100, Lake Havasu City, AZ 86403  
 PHONE: 909-596-9690, FAX: 909-596-9693  
 sales@jokermachine.com, www.jokermachine.com

### NEEDED FOR INSTALLATION

- M10 Wrench
- M17 Wrench
- Ratchet
- M8 Socket with Extension
- M6 Allen Wrench
- M8 Allen Wrench
- Blue Loctite

### INSTALLATION

1. Remove brake control and loosen brake line clamp so you can extract more brakeline.
2. Install Foot Control Extension Plate.
3. Install brake control and tighten brake line clamp.
4. Remove clutch control
5. Install Foot Control Extension Plate.
6. Install clutch control.
7. Assemble shift rod with OEM rod ends. Left thread side is marked with a line.
8. Install forward side of shift rod using diagram as reference. Use blue loctite on mounting bolt.
9. Install rear side using diagram. Use blue loctite on mounting bolt.
10. Adjust shift rod. Use jam nuts to tighten in place.

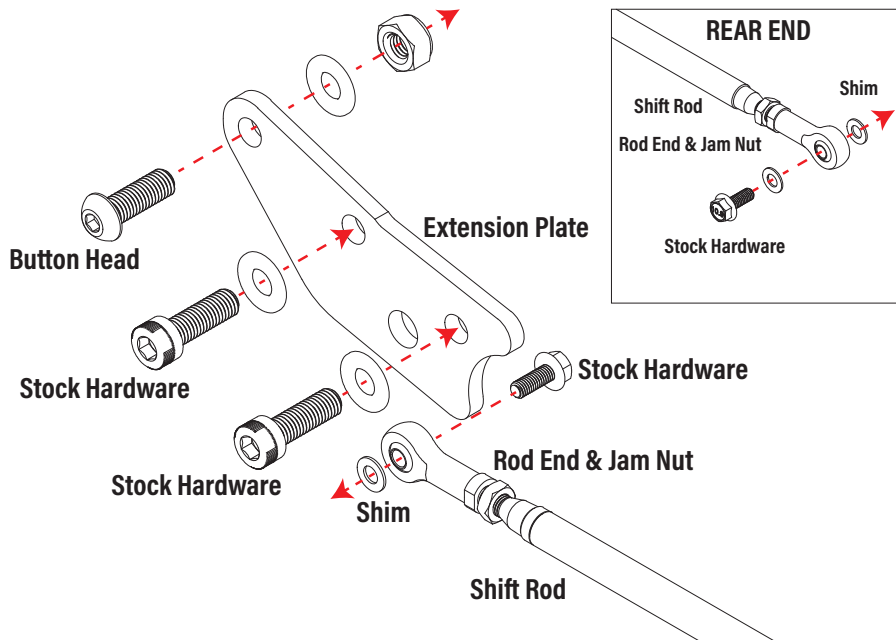

**CLUTCH SIDE**



**BRAKE SIDE**

