
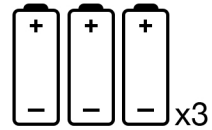


P Alert Meth Alarm Configuration Guide

Please use this guide to assist when setting up your Meth Alarm.

- Meth Alarm
- 1 SIM card (**MUST BE A SPARK SIM**)
- 3 x AA Batteries (**Ultra Long Life Battery ER14505M**).

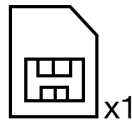

SIM Card

- 1 - Make sure the SPARK SIM provider has activated the SIM (**very important**)
- 2 - Make sure SPARK SIM has credit (**very important**)
- 3 - Fit SIM card into SIM cradle and push to lock cradle (**ensure the SIM is fitted correctly**)

Configuration

A config message is required to pair your mobile phone to the Meth Alarm.
This sets up for all SMS text messages to go from the Meth Alarm to your mobile phone.
This config message must be sent from your mobile phone to the Meth Alarm SIM.
IMPORTANT: UPPER CASE ONLY, NO SPACES. Use comma's between each setting.

CFG,MOBILENUMBER,05,30,168,TAMP,END

[Config Message],[Your number],[Trip Level],[Scan Period],[Report Period],[Tamper Config],[End of message]

Meth Alert

- 1 - Send config message.
- 2 - Push wiring loom connector into socket. Make sure the connector is fitted correctly.
- 3 - **Wait for "Confirm Config" message** (30sec - 1 minute)
- 4 - Once you have received "Confirm Config" you are now paired with the Meth Alarm.
- 5 - In your mobile phone go to **contacts**, add **Meth Alarm Activated** as a new contact also add the property address to this contact.
For example: P Alert activated 123 noname street.

Your Meth Alarm configuration is now complete and is ready to install.

Technical Support

For technical support contact us on the following:

www.palert.co.nz