Hoist-A-Top... Hand Crank Installation Instructions






Loosen bolts on either side of hand crank unit




Remove bolt and set spool of wire-cable aside.

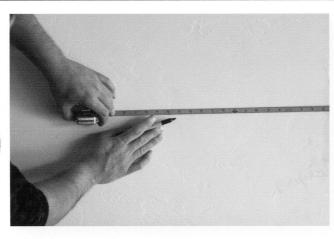


Measure and mark wall studs. (Hint: Visit


for more information about wallstud finding.)

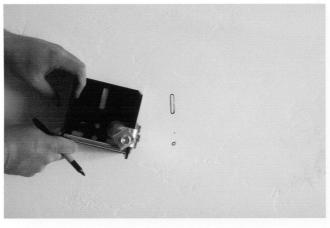


Using the metal frame as a template mark your holes in the center of the stud line.

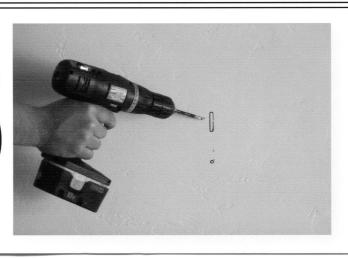


Using the metal frame as a template mark your holes in the center of the stud line.

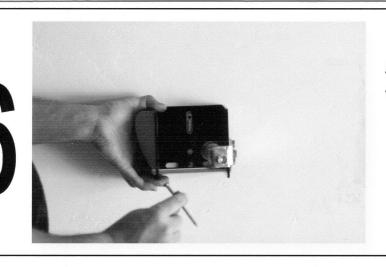


Attach the spool less metal frame to the wall using the supplied lag screws and washers. Center the frame before completely securing lag screws. Do not overtighten.

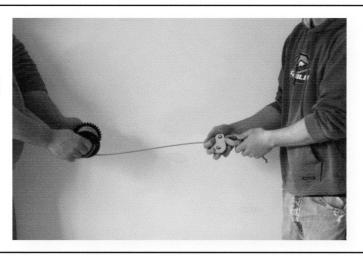

With a helper unwind the cable from the spool. This is done to reverse the direction of the cable as shown in step 8.

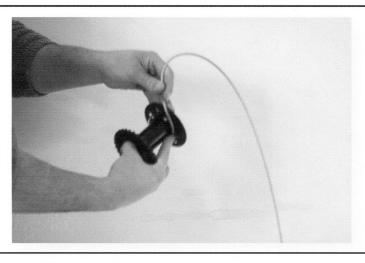

Wrap the cable in the opposite direction.

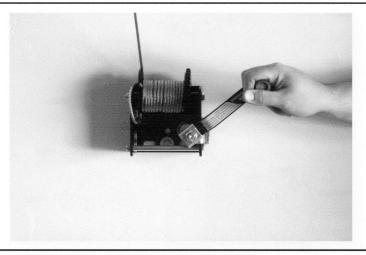

With the cable coming straight up out of the frame as shown, reattach the spool. Then attach the supplied turning handle.