

Addendum for JL Jeep Hoists

This is to explain the procedure to put the rear hook on the Jeep top. Due to the unique shape, and tolerances between the glass and the top edges of the window frame the rear hook must be set in place before attaching to the frame.

Step 1: After assembling your frame and attaching it to the lifting mechanism Place the assembled frame on the top of the Jeep WITHOUT the patented rear JL hook attached.

Step 2: With the window open, take the hook under the window and through the gap carefully with the threads up (fig 1.) Put threads through the hole in the frame (fig. 2.)

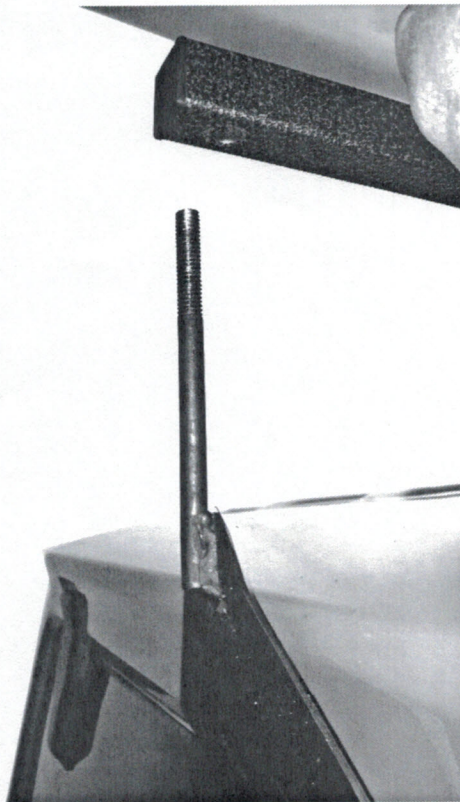


Fig. 1



Fig. 2

Step 3: Using the wing-nut thread it on the hook until you can see three to four threads out of the top of the wing-nut. Do not over tighten this causes uneven lifting.

IMPORTANT ADDENDUM TO INSTRUCTIONS

There is also a change with the foam from the instructions. The JL foam pieces need to be put in front of the lifting blade as pictured here instead of the back of the lifting blade, also to note is the front foam is shaped slightly different than the pictured foam in the instructions. If looking at the back of the frame the small slot on the foam should be oriented on the left, or driver side.

