



## Included



## Not included




**1.** Apply the Glue on the back of the acoustic panel, near the edges. Do not wait longer than 10 minutes after applying the glue to attach the panel to the wall.

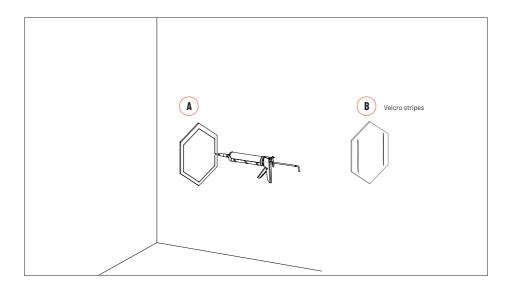




**2.** Place the panel on the suitably chose position on the wall. Once in the desired place, press firmly against the wall for 15 seconds.

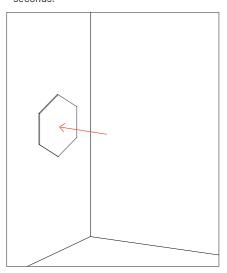

**3\_** Measure the desired distance between panels and apply the remaining panels.

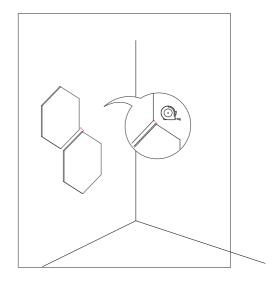

!

For the installation of Vixagon VMT on the ceiling, we recommend using Flexi Glue Ultra. To ensure that you maximise the strength of the glue, don't make any adjustments to the panel after bonding.

Do not apply VixagonVMT behind radiators or too close to a heat source.

# Main Office, R&D & Logistics

Avenida do Pólo 3, № 159, Carvalhosa 4590-137 Paços de Ferreira, Portugal



## Office

Rua Quinta do Bom Retiro Nº 16, Armazém 9 2820-690 Charneca da Caparica, Portugal T (+351) 212 964 100

## Info and Sales

E sales@vicoustic.com

www.vicoustic.com

© Vicoustic, 2023 | V1

No parts of this document might be copied and/or published without written consent of Vicoustic.