


VicBooth **Ultra**

Installation Manual


V/COUSTIC

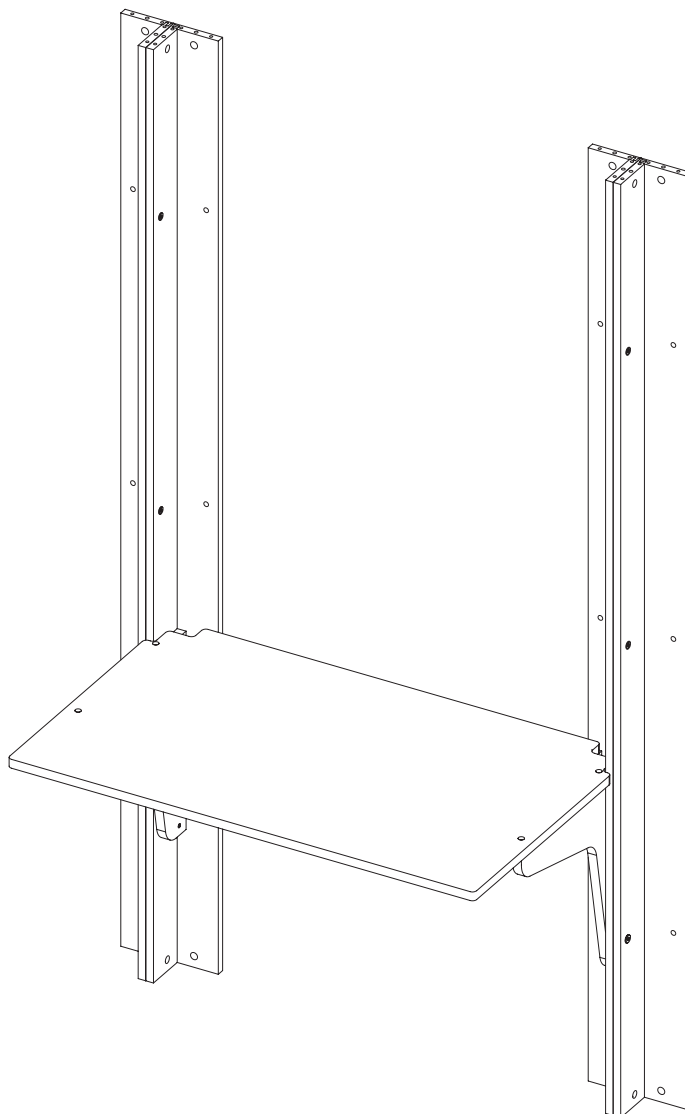


VicBooth
Desk
Model C

Material Needed


Included

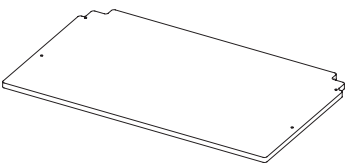

Desk | 1 uni.

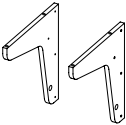

Support bracket | 2 uni.



Reinforcement Bar | 1 uni.



Connection plate | 1 uni.




Hole covers



Screws




Not included






6mm Phillips Screwdriver

- 1
- Center the largest hole of the bracket with the flat head that is fixed on the structure.


The bracket should rest against the rear part of the structure. Fix the screws with a screwdriver or electric screwdriver. Repeat the step for the remaining bracket.

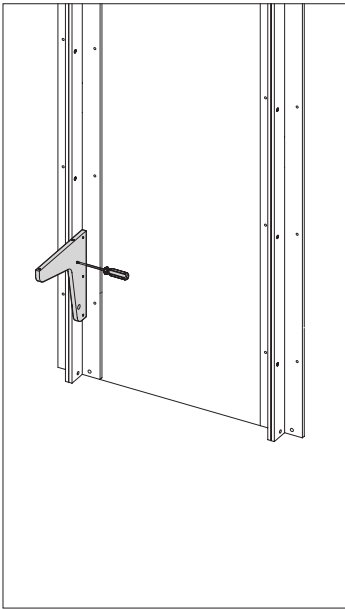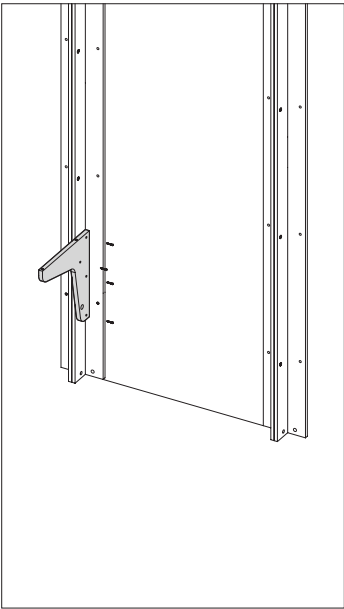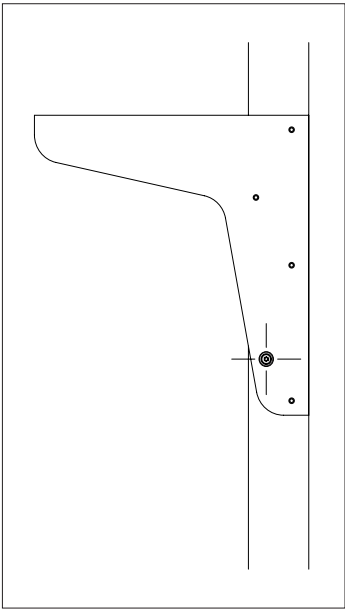

2 Fix the desk top using the supplied screws. Apply the hole covers.

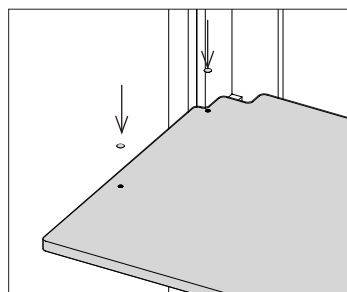
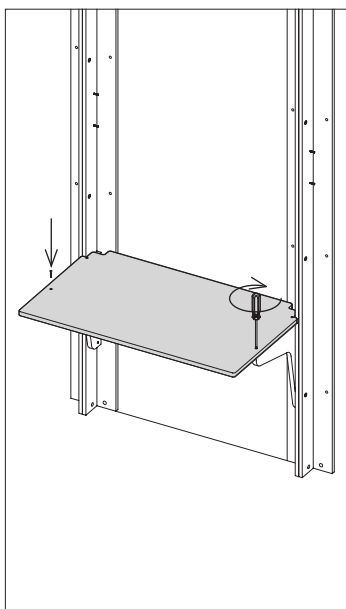
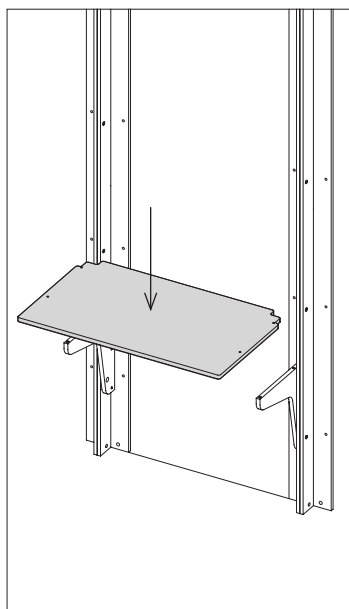


Step's Material



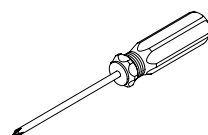


6mm Phillips Screwdriver

3 Fix the reinforcement bar under the desk top by screwing it to the structure.

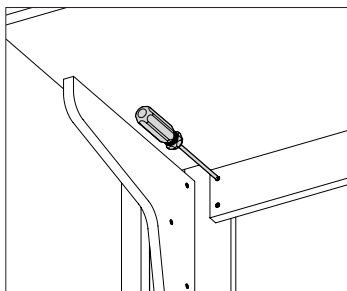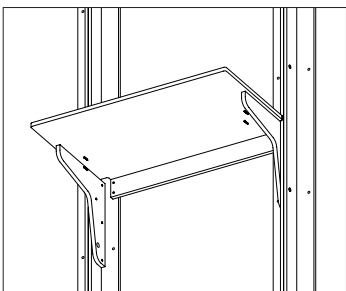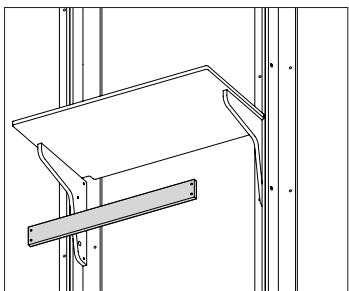

4 If you have chosen to buy two desktops, join them together with the help of the connection plate supplied.

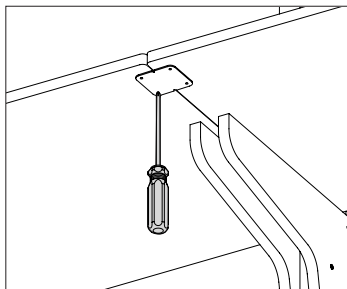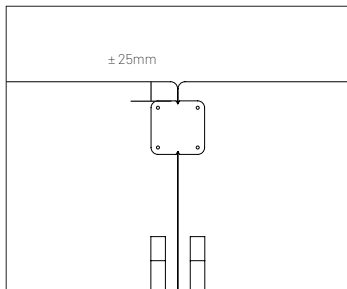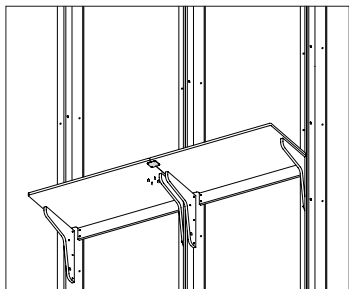

Main Office, R&D & Logistics

Avenida do Pólo 3, N.º 159, Carvalhosa
4590-137 Paços de Ferreira, Portugal

Office

Rua Quinta do Bom Retiro N.º 16, Armazém 9
2820-690 Charneca da Caparica, Portugal
T (+351) 212 964 100

Info and Sales

E sales@vicoustic.com

www.vicoustic.com

© Vicoustic, 2021 | V1

No parts of this document might be copied and/or
published without written consent of Vicoustic.