


ASSEMBLY INSTRUCTIONS  
STASH RACK PARKING STAND

**PART LIST**

**10 FRAME TUBES**

**5 WHEEL ARM  
BINDERS**

**20 SCREWS**

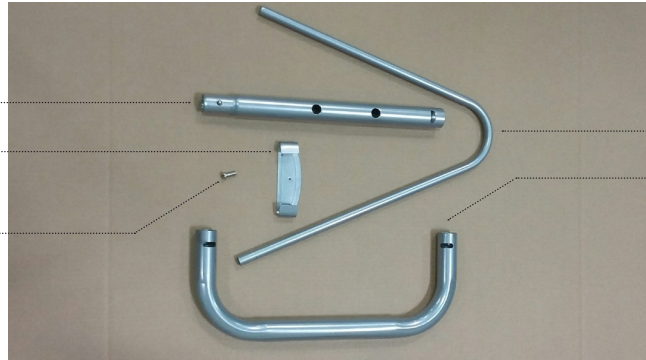

**10 WHEEL ARMS**

**2 FRAME TUBE  
ENDS**

Your Stash Rack is modular and can be assembled to accommodate as few as one bike or as many as five bikes by assembling the number of wheel support sections that are needed.

To assemble the rack start by piecing together the frame tubes (five for each side). Fit the small end of one tube into the larger end of the next tube by pressing down on the chrome button and inserting until the button snaps out in the long slot at the end of the tube. Complete the frame assembly by inserting the frame tubes into each end of the curved frame tubes ends. **(FIG 1)**

Figure 1



Assemble the wheel arms by inserting one end into the large hole in the frame tube and threading a screw on the opposite side through the small hole.

**Note:** the wheel arms have one side shorter than the other. Make sure you are assembling them to match each other as well as the other pairs on the frame. **(FIG. 2)**

Figure 2



Install the wheel arm binders to the back side of other arms by squeezing the arms together at the top & then sliding the binders down to the bottom of the arms.

**(FIG 3 & 4)**

Figure 3



Figure 4



**Warranty:**

- For any information regarding Retrospec bicycle warranties please refer to the Westridge Outdoors website:

**<https://westridgeoutdoors.com/pages/critical-cycles-warranty>**

**Contact:**

CRITICAL CYCLES - Customer Service

213 • 744 • 1555

Team@criticalcycles.com