
SwiftyONE MUDGUARDS


Please read these instructions carefully. If you have any queries relating to the safe assembly of your scooter mudguards do not hesitate to contact us.

SwiftyHQ tel: +44 (0)161 848 8695 Email: support@swiftyscooters.com

TOOLS NEEDED FOR ASSEMBLY

Tools to assemble the mudguards are provided. An 8mm spanner (for the nuts) and a 3mm Allen key (for the hex bolts) is provided. You will need a 15mm spanner for the wheel nuts, the wheel tool that comes with your scooter is ideal.

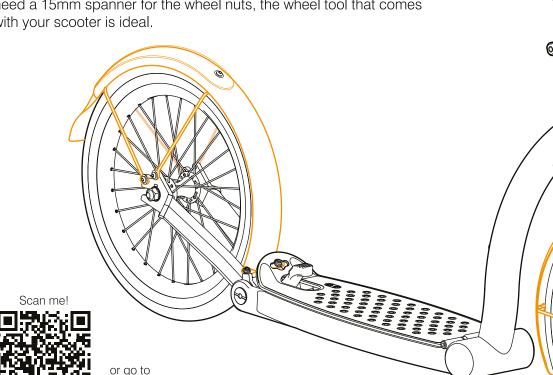

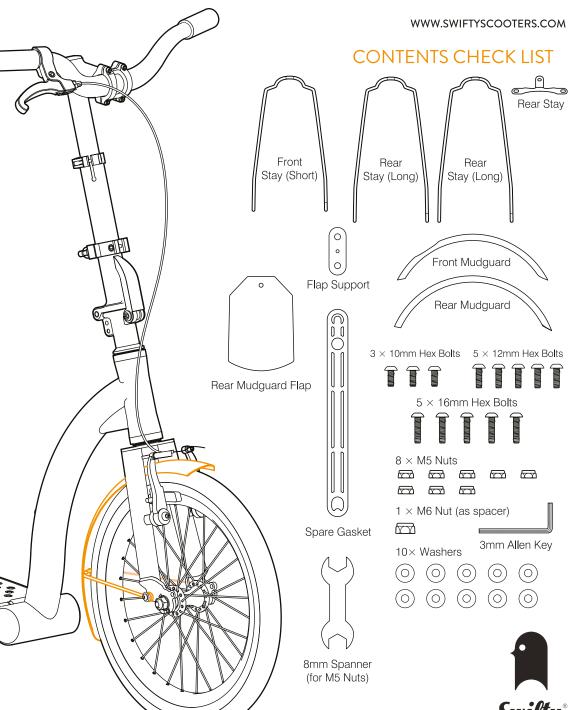



Let the good times ride and roll!
Share your story and follow us @swiftyscooters

swiftyscooters.com/assembly-guides

for more information online

ASSEMBLY GUIDE

Prepare your scooter by disconnecting the brakes and removing both wheels.

Assemble Wire Stays, rear Mudguard Flap and Flap Support to the correct Mudguards as shown in the diagram. Use 10mm, 12mm and 16mm Bolts, Nuts, and Washers as shown. Tighten fully.

Secure rear mudguard to the frame with 12mm Bolts. Tighten fully.

Secure rear wire stays to the rear dropout with 16mm Bolts, Nuts, and Washers. Tighten fully.

