
Chantilly Valance

9210

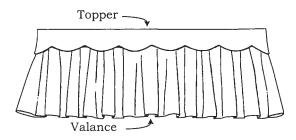

This valance is cut in a circular shape. This allows the valance to hang with plenty of fullness at the bottom. There are no pleats or gathers where the valance attaches to the mount board.

The finished depth of the valance can be 12", 15, or 18". Other depth may be achieved. Depth of valance is restricted by width of fabric. Also included are three topper patterns. Toppers are made separately. Valance and topper attach to the same board.

Fabric Suggestions: Fabrics with body will be easier. Stripes, plaids, directional patterns and fabrics with nap, are not suitable. Use solids or busy "all over" small prints. A little of the lining may show along bottom edge. You may want to use a lightweight trim on the bottom edge. Heavy trims may cause the valance to sag in some areas where the fabric has been cut on the curve. The toppers are suitable for most all fabrics. Plan to self line unless your fabric is especially bulky. The lining may show slightly around the bottom edge.


YARDAGE

Select your yardage according to the following chart. Prints cannot be matched. Your finished width should include the ends of the board.

Finished Widtl	hs 12" Depth	15" Depth	18" Depth
	(Fabric must be at least 42" wide)	(Fabric must be at least 48" wide)	(Fabric must be at least 54" wide)
up to 47"	1 1/8 yards	1 3/8 yards	1 1/2 yards
48" to 70"	1 3/4 yards	2 yards	2 1/4 yards
71" to 94"	2 1/4 yards	2 5/8 yards	3 yards
95" to 117"	2 7/8 yards	3 1/4 yards	3 5/8 yards
118" to 141"	3 3/8 yards	3 7/8 yards	4 3/8 yards
142" to 164"	4 yards	4 1/2 yards	5 1/8 yards
165" to 188"	4 1/2 yards	5 1/8 yards	5 7/8 yards
	-	5 3/4 yards	5

For a 20" depth, fabric must be at least 58" wide. For a 22" depth, fabric must be at least 62" wide.

Toppers have no fullness. Figure for the finished width (include ends of board) plus any necessary seams. Can be cut upright or lengthwise. Lengthwise means the selvage would run horizontal of the window and would eliminate seams.

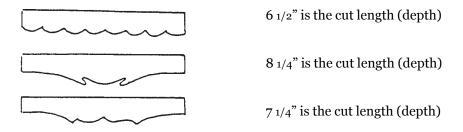

The same amount of lining is needed for the valance and the toppers.

Purchase 11/2 wide ribbon to be used as a band to attach the valance to the mount board. The toppers do not need ribbon.