

INSTRUCTIONAL SHEET

How to adjust the length of your cut-to-fit strap



SWISS + MADE



1.

- Measure your wrist size using the ruler found on the end of this document.
- Print this page in its original size (100%) and cut out the ruler.
- Measure your wrist and add a tolerance of 5mm to your wrist size to ensure you have a long enough strap.

i.e: If your wrist is 18cm long, add +5mm tolerance for a final measurement of 18.5cm total length.

You can adjust the final strap length with the deployment buckle at the end.



2.1



2.2

2.

- Remove the deployment buckle from both ends of the strap by using a strap changing tool or other suitable device.
- Press the spring bars inwards to release the deployment buckle.
- Remove the spring bars and safely store them as they are small and can be easily misplaced.
- Strap changing tools can be purchased on luminox.com



3.1




3.2

3.

- Attach the strap to your watch case by using the quick release spring bars which can be operated without a tool.
- The strap part with the LUMI spelling must be attached to the 6 o'clock side of the watch case.
- The strap part with the NOX spelling must be attached to the 12 o'clock side of the watch case.

4.1

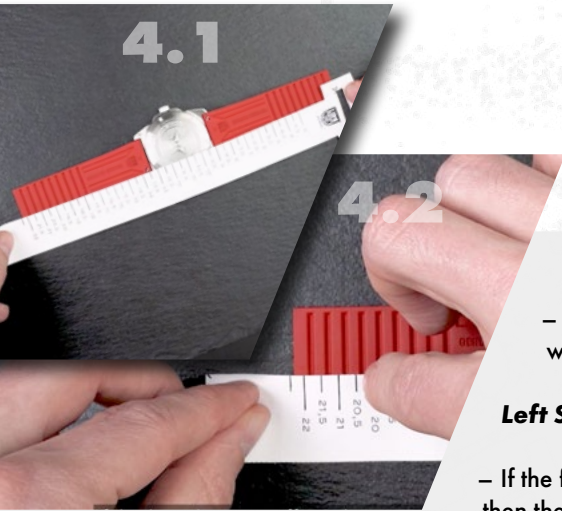


4.2

4.

- Lay the watch and strap flat on a surface. Use the ruler found on the end of this document to measure the entire length of the watch and strap.
- Ensure you use the same ruler to measure your wrist and the total length of the watch and strap.

Left Strap + watch case + right strap = total length

- If the full watch and strap is 22.5cm long and your measured wrist is 18.5cm, then the strap is 4cm too long which you will have to cut off.
- Always try and cut off the same amount on both sides of the strap so that the watch case is centered in the middle of both strap sides.
- If the length to cut results in an even number (for example if you have to cut off 4cm) Cut 2cm off from the LUMI spelling side and 2cm off from the NOX spelling side of the strap.
- If the length to cut results in an odd number (in this case 4.5cm) cut off more on the LUMI spelling side. For this example, cut off 2.5cm on the LUMI spelling side and 2cm off on the NOX spelling side of the strap.
- Always cut along the designated slots which are each 5mm long.

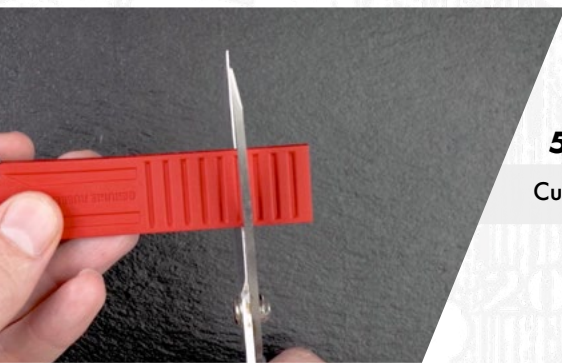


5.

Cut the strap in the designated slots with sharp scissors.



6.

- To re-assemble the strap, watch case and deployment buckle you first have to remove the watch case.
- De-tach the watch case from the strap using the quick release spring bars.

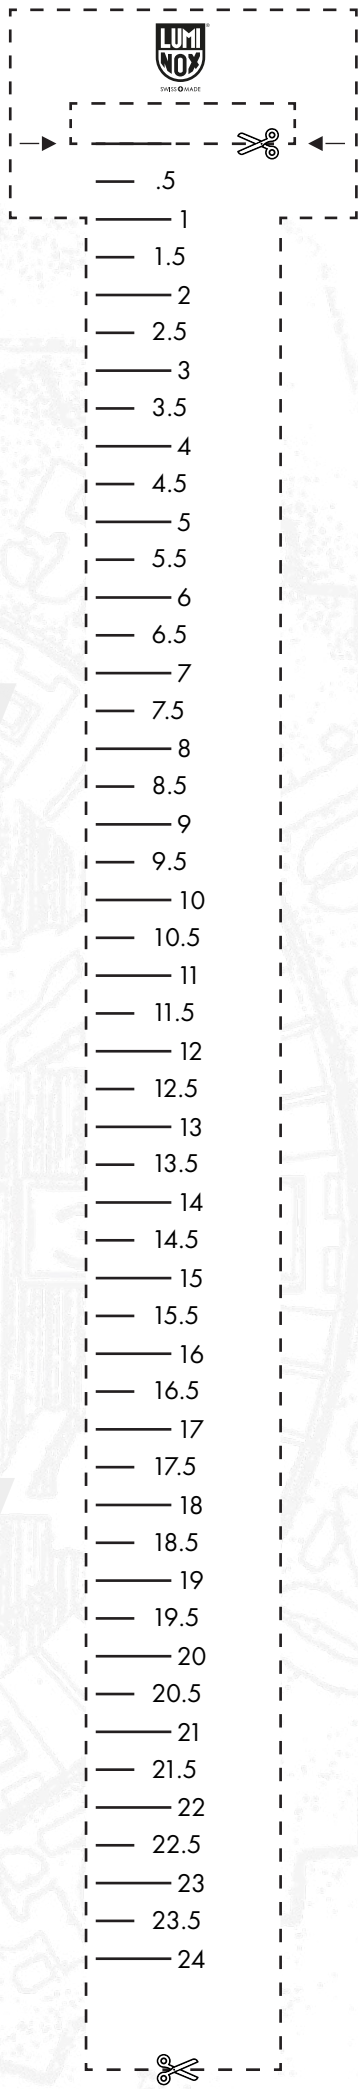

7.1



7.2



7.3

7.

- Place the spring bars into the ends of both strap sides.
- Using the strap changing tool, push each strap end into the deployment buckle and secure the spring bars into place.
- The less wide side of the strap fits into the deployment buckle opening.
- The security clasp should open in the direction of the LUMI spelling side of the strap. The NOX spelling side of the strap should be closest to the Luminor logo part of the security clasp.



8.1



8.2

8.

- Attach the watch case to the strap and deployment buckle using the quick release spring bars.
- The strap part with the LUMI spelling must be attached to the 6 o'clock side of the watch case.
- The strap part with the NOX spelling must be attached to the 12 o'clock side of the watch case.