


Page (Base) Bed Frame

Assembly Instructions



Recommended Tools



Power Drill with Phillips Head Driver Bit

Included Hardware




**Keyhole Bed Rail
Bracket**
8 pcs.





**1 1/4" Phillips Head
Screws**
4 cs.


Included Components

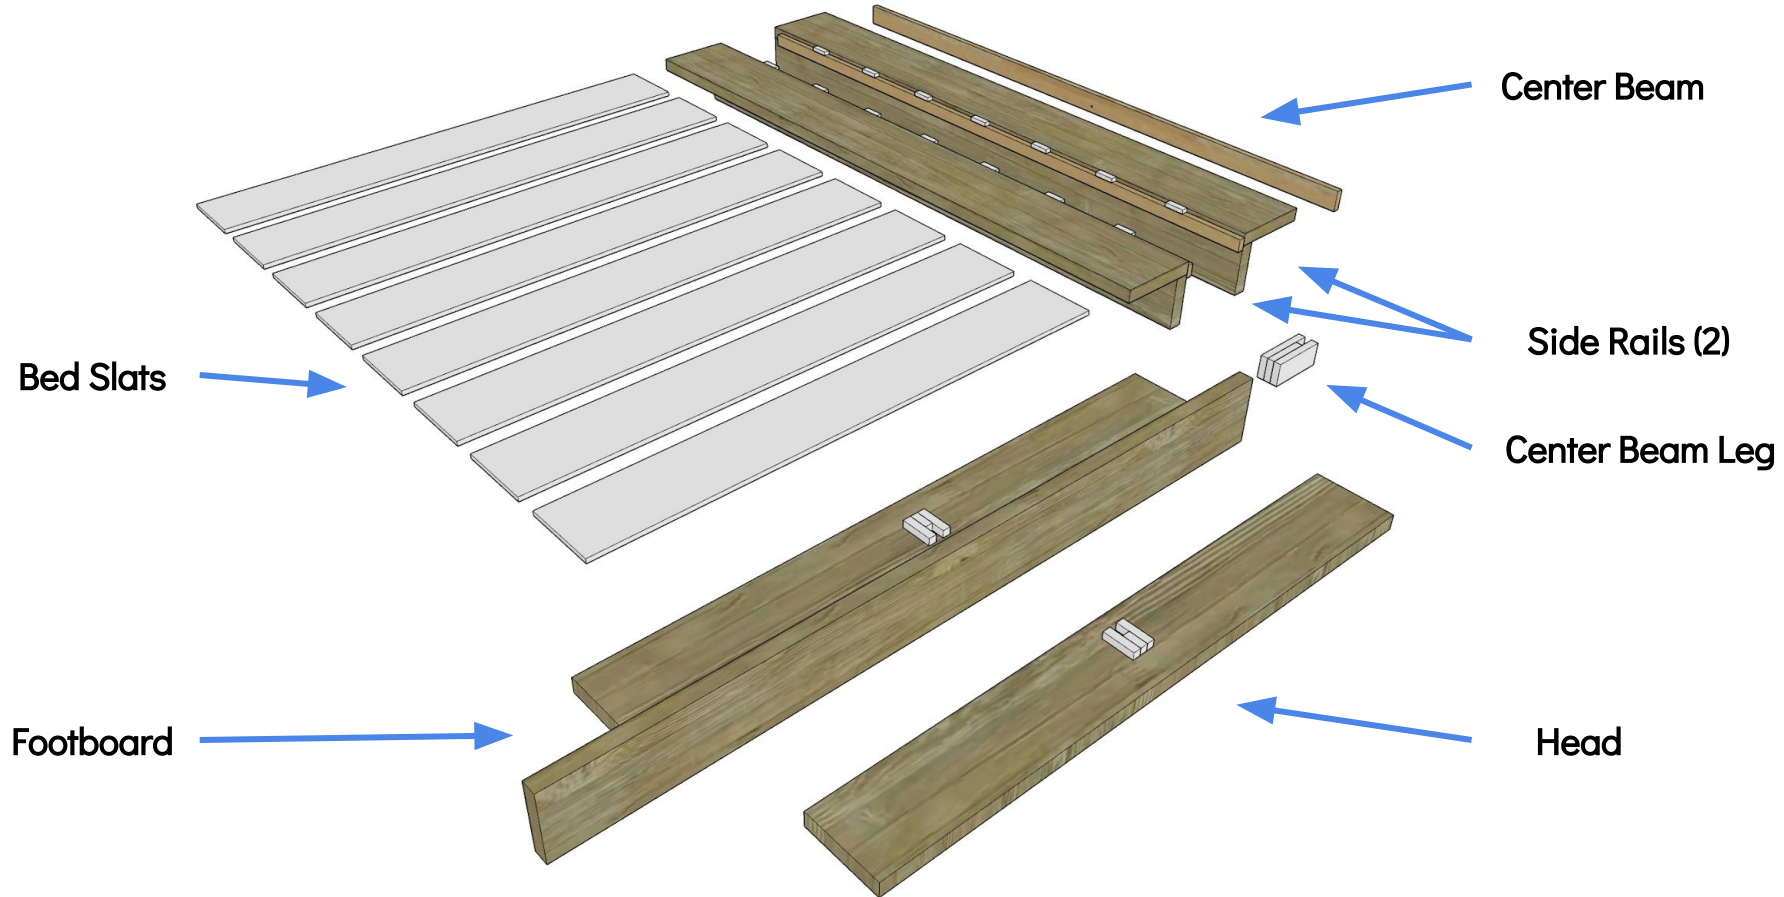


Bed Frame

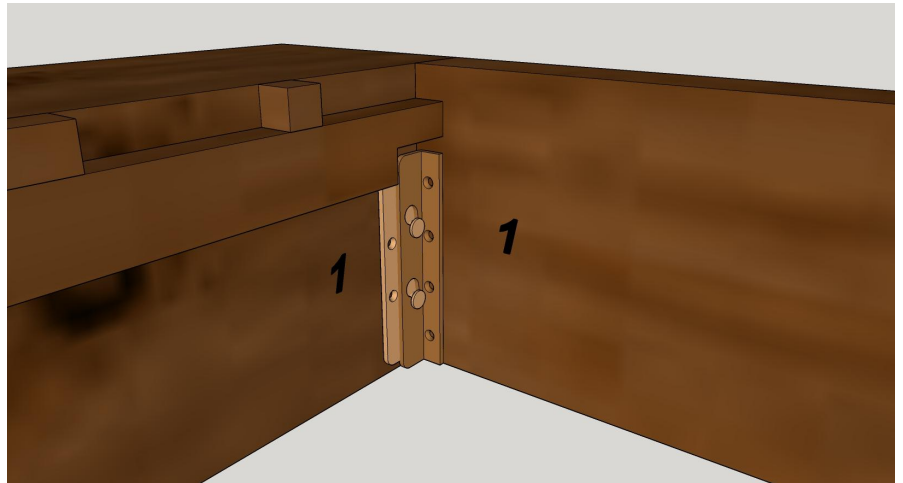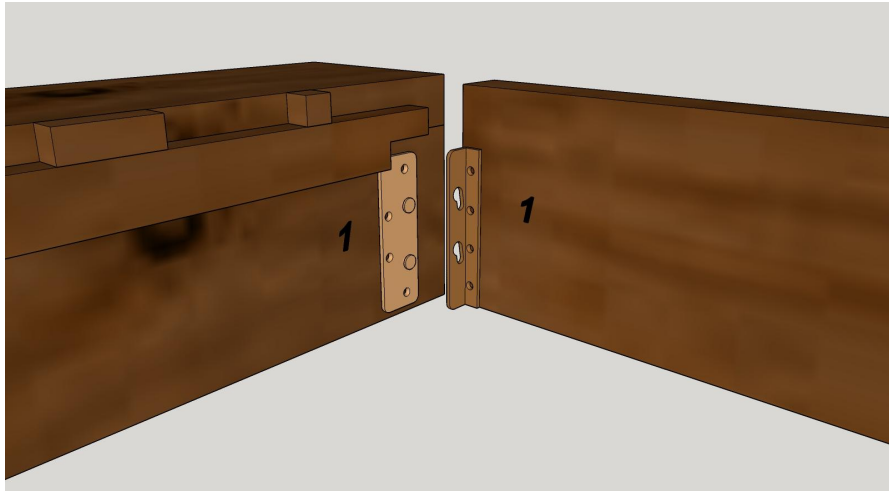


Attach the side rails, marked 'L' for Left side and 'R' for Right side to the headboard by sliding the pins from the side rail bracket into the keyhole, then pushing downward to lock. Repeat for all corners.

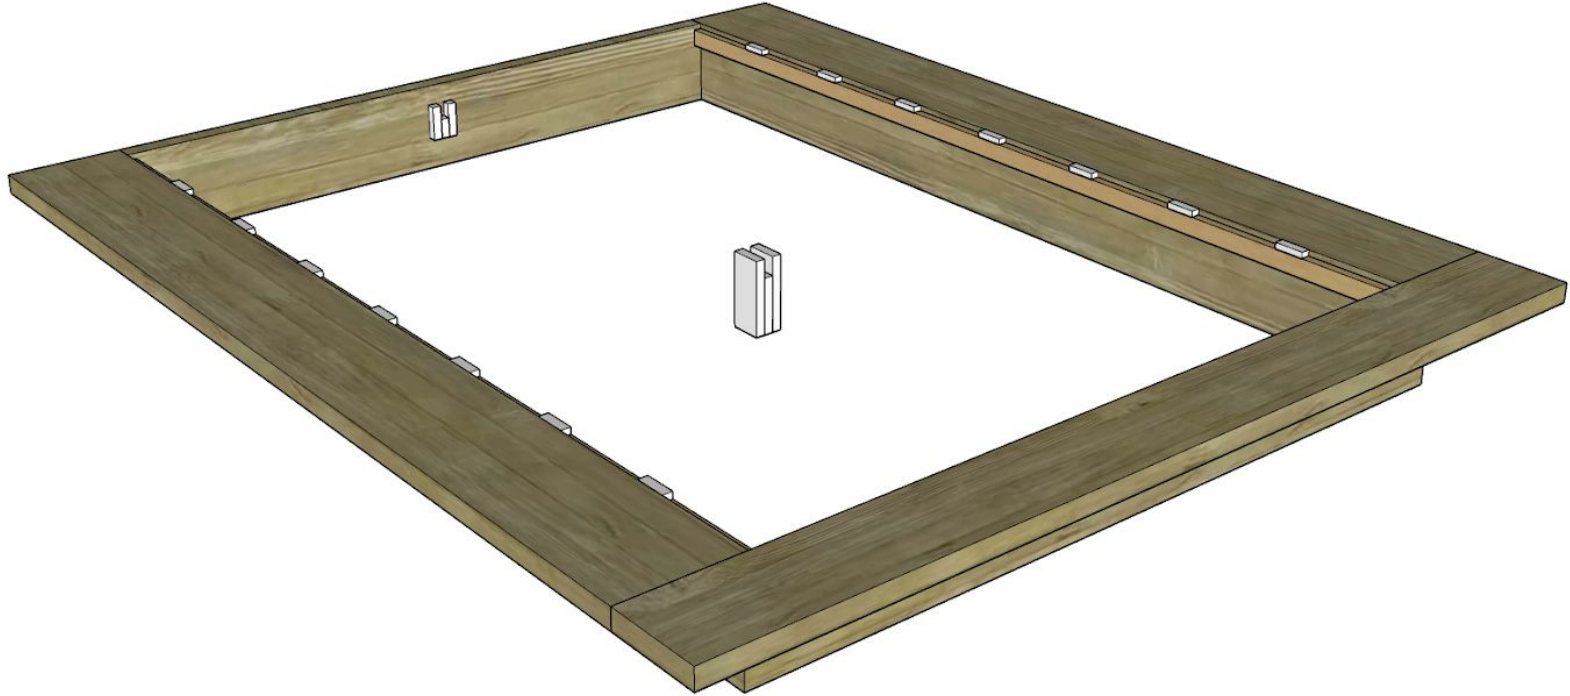

Position Center Beam Leg

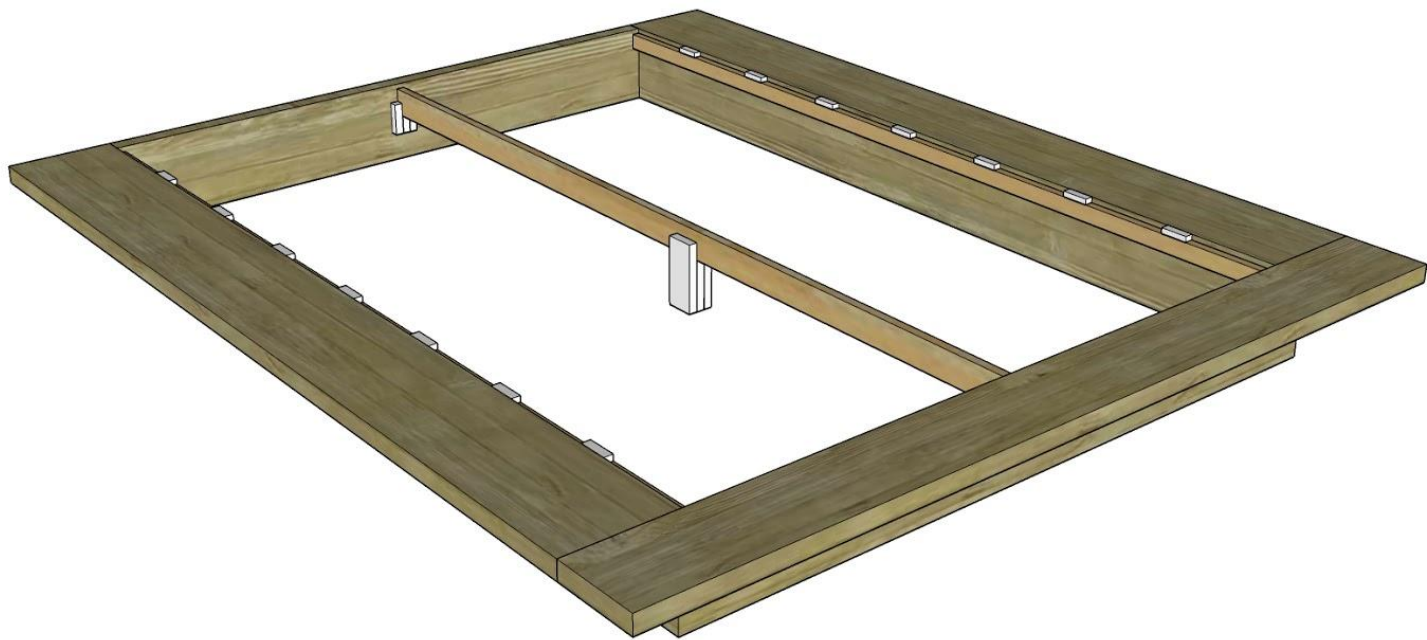

Lower Center Beam Into Place

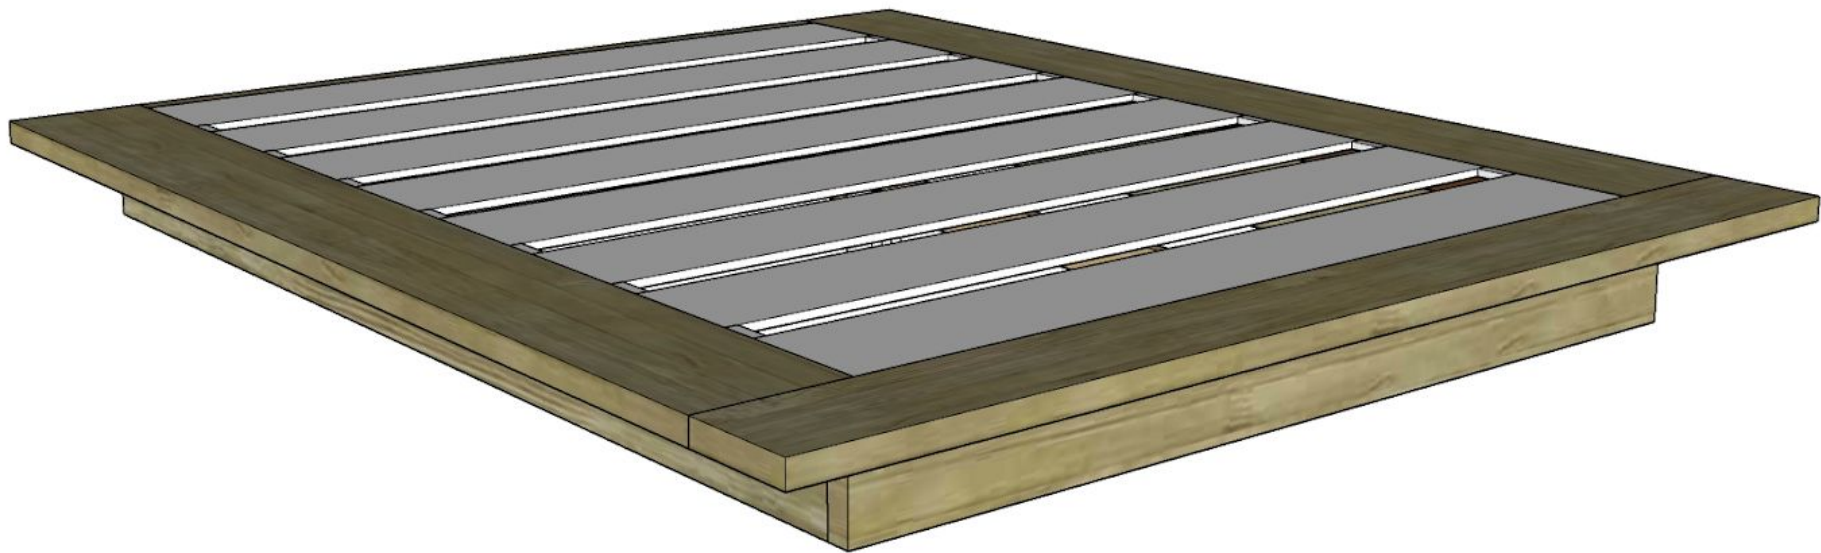

Lower the slats into place