


## SDRK SERIES ASSEMBLY INSTRUCTIONS

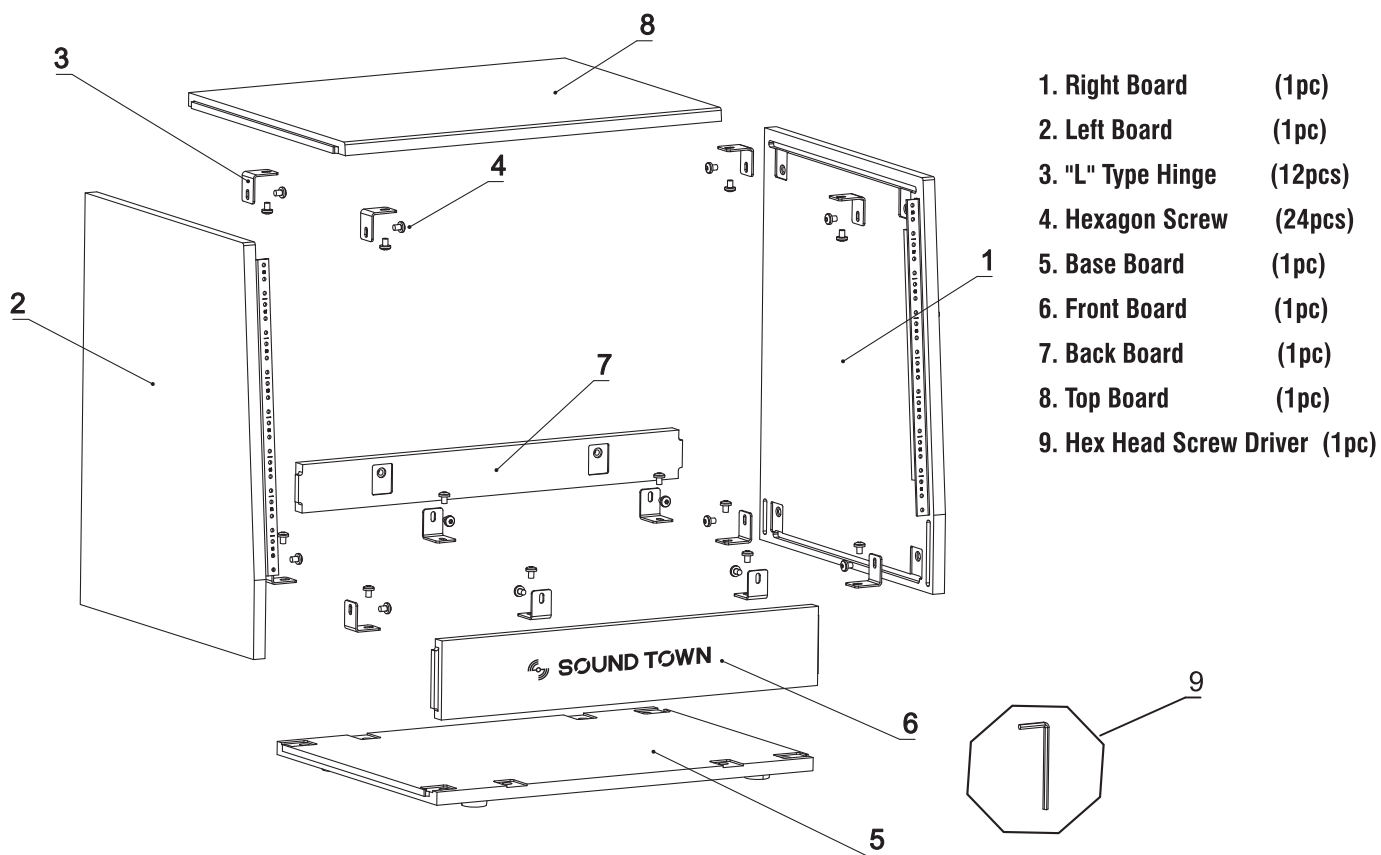

1. With the Base Board (#5) flat on the ground, align the 8 hinges (#3) to the pre-cut groove, using the Hex-screws (#4) to screw on one side each of the 8 hinges.
2. Install the Front Board (#6) and Back Board (#7), fix them on the base board by screw on the other side of the hinges.
3. Align the Left Board (#2) and fix it to the base board by screw on the hinges.
4. Rotate and put the Left Board (#2) flat on the ground, install the Top Board (#8), fix the hinges by screws.
5. Align the Right Board (#1) and fix all the hinges.
6. Installation completed.

## How can we help you?

CONTACT OUR US-BASED SUPPORT TEAM

Simple or complex, your questions are important to us. For service, support or more information, please contact the Sound Town support team:

Email: [support@soundtown.com](mailto:support@soundtown.com)



soundtown website