



Installation Tips

Jeep Wrangler Transmission Cooler Lines

Fits: 1997-2002 Jeep Wrangler TJ 2.4L & 4.0L

SKUs: WTC9709OM & WTC9709SS


IMPORTANT: This guide is not intended to be used as step by step instructions for the installation of the product, it is only intended to answer frequently asked questions and provide installation tips to guide the installation of the product.

CAUTION: Improper installation of the product can cause damage to the vehicle or bodily harm, do not attempt installation without proper safety equipment and experience.

Installation Tips

1. The two small pre-bent lines pictured below will need to be threaded into your radiator in the same place that the factory lines were removed from.

Tip #1: Radiator Lines

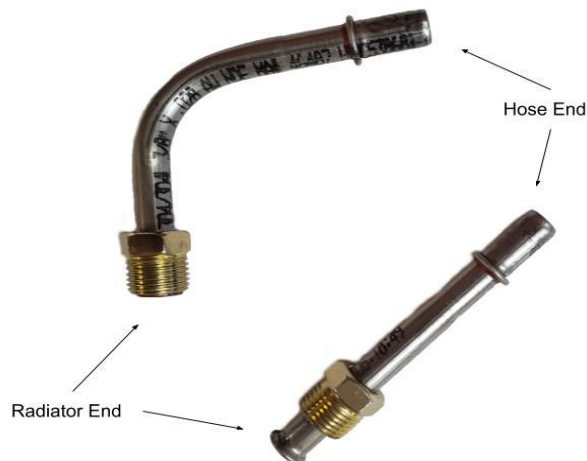

2. Included in your kit there are two brass fittings that need to be threaded into the transmission, they are pictured below. Please note that the old fittings will need to be removed first.

Tip #2: Transmission Fittings



3. Pictured below are the two long pre-bent lines included in your kit, one end needs to be threaded into the fittings installed in Tip #2, the flared end will be discussed in the next tip.

Tip #3: Hard Lines



4. There are two braided stainless steel hoses with a female quick disconnect fitting on either end. These will be used to connect the hard lines from Tip #1 to the hard lines in Tip #3. They are pictured below: ***NOTE:** The stainless steel braided lines are similar in size but one of them is longer than the other!

Tip #4: Braided Hoses



5. Pictured below are the mounting clips for installing the lines.

Tip #5: Mounting Clips



Final Note

We are currently in the process of making installation videos and instructions for as many of our products as possible, but for now we hope that this guide has been helpful in the process of replacing your transmission lines. As always, if you have any further questions or concerns please feel free to call us at (330) 334-3800 or email us at support@moderndaymuffler.com