



SDHQ Motorsports
190 S McQueen Rd
Ste 109 Gilbert, AZ 85233
Phone: 480-633-2929

Product Packing List

Product: SDHQ-00-1130-U1-9100

Description: **Universal Switch Pros Keypad Mount**

_____ (1) SDHQ 9100 Keypad Bezel	SDHQ-00-1130-U1-9100-A
_____ (1) ¼" Acrylic Backer	SDHQ-00-1130-U1-9100-B
_____ (1) Hardware Package	SDHQ-00-1130-U1-HP
_____ (4) #6 - 32 x ¾" S.S. Button Head Bolt	
_____ (4) #6 S.S. Washer	
_____ (4) #6 - 32 S.S. Nylock Nut	

Inspected and Packaged By: _____ **Date:** _____

For questions or help with the installation, please call SDHQ Offroad @ 480-633-2929
Mon.-Fri. 8:00am-5:30pm and Sat. 8:00am-3:30pm Arizona Time. www.sdhqoffroad.com



For questions or help with the installation, please call SDHQ Offroad @ 480-633-2929
Mon.-Fri. 8:00am-5:30pm and Sat. 8:00am-3:30pm Arizona Time. www.sdhqoffroad.com
Page 2 of 6



SDHQ Motorsports
 190 S McQueen Rd
 Ste 109 Gilbert, AZ 85233
 Phone: 480-633-2929

INSTALLATION INSTRUCTIONS

Product: SDHQ-00-1130-U1-9100


Description: Universal Switch Pros Keypad Mount



Parts List	Hardware List	Required Tools
(1) SDHQ 9100 Keypad Bezel SDHQ-00-1130-U1-9100-A (1) ¼" Acrylic Backer SDHQ-00-1130-U1-9100-B (1) Hardware Package SDHQ-00-1130-U1-HP	(4) #6 – 32 x ¾" S.S. Button Head Bolts (4) #6 S.S. Washers (4) #6 – 32 S.S. Nylock Nuts	Sharp Pick Razor Blade 8mm wrench 5/64" Allen Drive Fine Tip Sharpie 5/32", ¾" Drill Bits Drill

Tech Notes

The recommended install location is in the headliner of your vehicle.
 Cutting/Drilling is required for install.
 For use with Switch Pros 9100 Keypad.
Approx. Install Time: 1 Hour

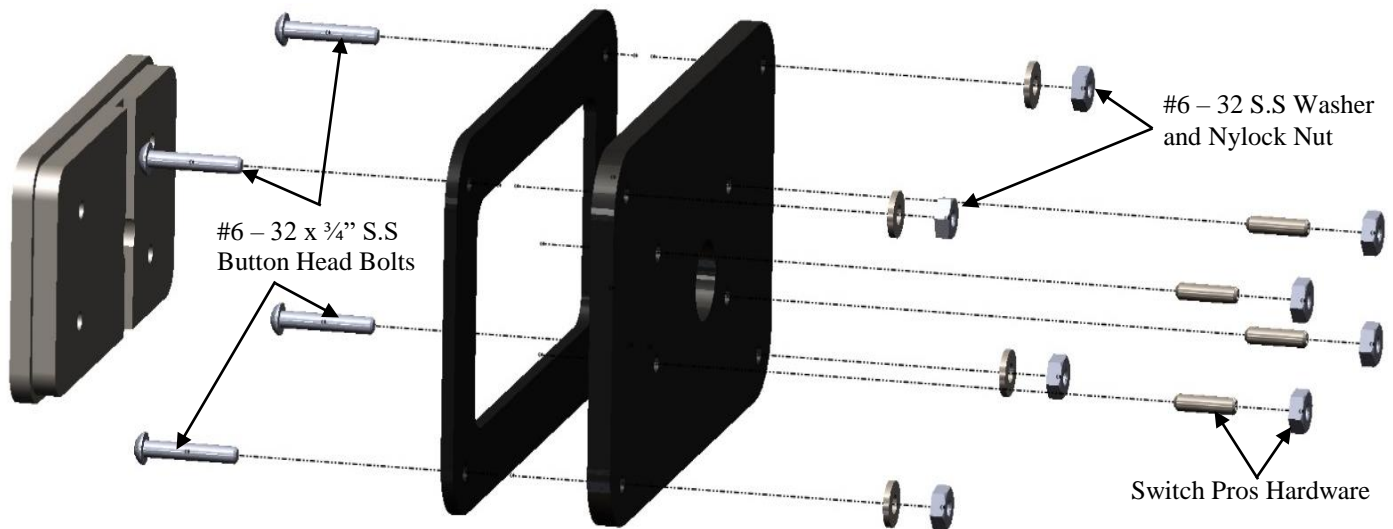

*****READ ALL INSTRUCTIONS THOROUGHLY FROM START TO FINISH BEFORE BEGINNING INSTALLATION!*****

Installation Instructions:

1. Unbox all parts. Familiarize yourself with the parts and the diagram above.
2. If you are installing the Keypad into the headliner of a vehicle with an overhead console, it will need to be removed before installation. If you are installing the Keypad into another location you will need to verify the Keypad, Bezel and Backer all fit without any interference. Begin planning out your wiring once fitment is verified.
3. In your vehicle, align the Acrylic Backer on your headliner. Double check clearance behind the headliner to mount and wire the Switch Pros Keypad. Mark the (8) mounting holes and Switch Pros Keypad harness hole as shown right.



4. Use a sharp pick to create the holes for mounting the Keypad. Use a razor blade to cut the hole for the harness. Use the 5/32\"/>



5. Install the Switch Pros supplied threaded studs into the back of the Keypad. Install the Keypad into the SDHQ Keypad Bezel. Pull the Keypad harness through the hole and align the Keypad and Bezel.



6. Align the Acrylic Backer behind the headliner and pull the Keypad Harness through the hole. Place the Acrylic Backer over the threaded studs on the Keypad. Use the Switch Pros Nylock nuts to secure the backer.
7. Insert the (4) supplied #6 bolts through the mounting holes on the SDHQ Bezel. Use the supplied washers and nylock nuts to secure the bezel to the backer. Tighten all hardware.



8. Finish wiring your Switch Pros. Enjoy your new SDHQ Switch Pros Keypad Mount!

*****Double check all hardware is installed correctly and tight*****

*****Re-torque ALL bolts after 100 miles*****



190 S McQueen Rd
Ste 109 Gilbert, AZ 85233
Phone: 480-633-2929 | Fax: 480-633-1791
www.sdhqoffroad.com

Follow us on:



Facebook



Instagram

For questions or help with the installation, please call SDHQ Offroad @ 480-633-2929
Mon.–Fri. 8:00am–5:30pm and Sat. 8:00am–3:30pm Arizona Time. www.sdhqoffroad.com