



SDHQ Motorsports
190 S McQueen Rd
Ste 109 Gilbert, AZ 85233
Phone: 480-633-2929

Product Packing List


Product: SDHQ-00-1130-U1-RCR12

Description: Universal Switch Pros RCR-12 Keypad Mount

- | | |
|--|-------------------------|
| _____ (1) SDHQ RCR-12 Keypad Bezel | SDHQ-00-1130-U1-RCR12-A |
| _____ (1) ¼" Acrylic Backer | SDHQ-00-1130-U1-RCR12-B |
| _____ () Hardware Package | SDHQ-00-1130-U1-HP |
| _____ (4) #6 - 32 x ¾" S.S. Button Head Bolt | |
| _____ (4) #6 S.S. Washer | |
| _____ (4) #6 - 32 S.S. Nylock Nut | |

Inspected and Packaged By: _____ **Date:** _____

For questions or help with the installation, please call SDHQ Offroad @ 480-633-2929
Mon.-Fri. 8:00am-5:30pm and Sat. 8:00am-3:30pm Arizona Time. www.sdhqoffroad.com

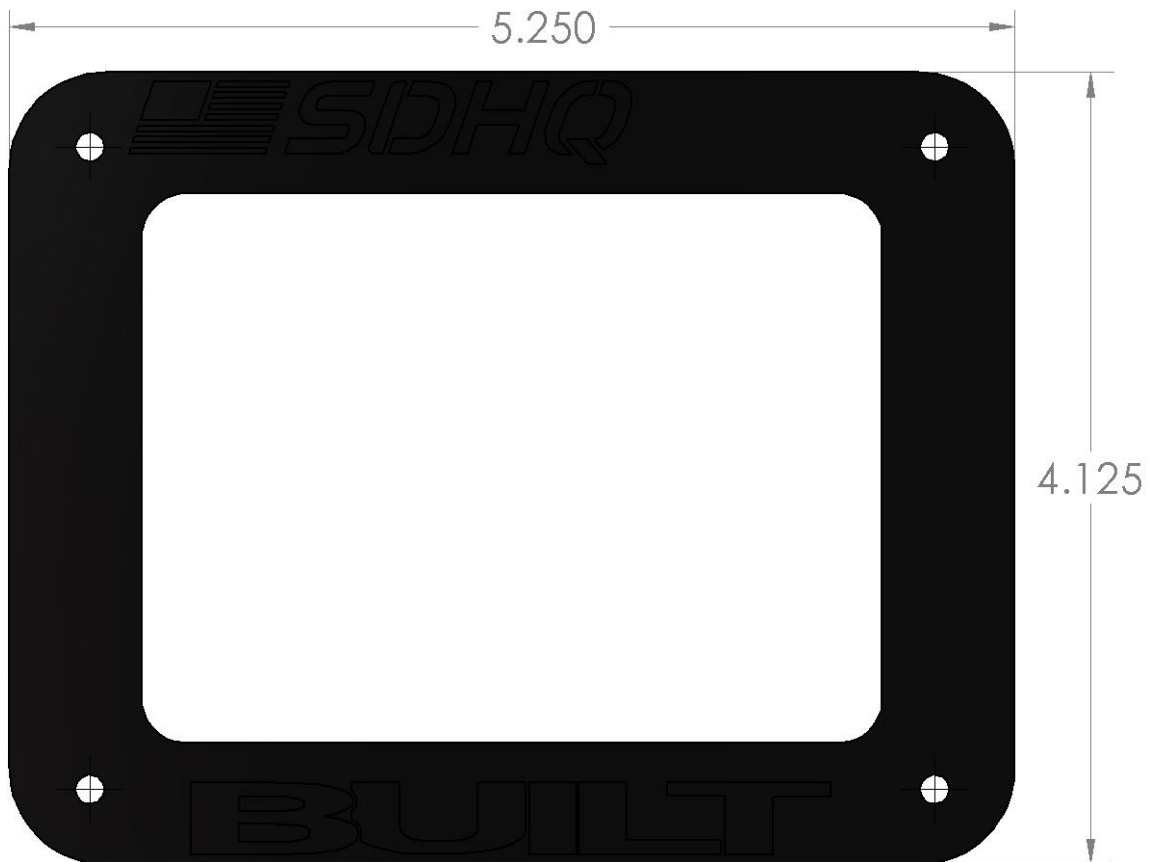

For questions or help with the installation, please call SDHQ Offroad @ 480-633-2929
Mon.-Fri. 8:00am-5:30pm and Sat. 8:00am-3:30pm Arizona Time. www.sdhqoffroad.com



SDHQ Motorsports
 190 S McQueen Rd
 Ste 109 Gilbert, AZ 85233
 Phone: 480-633-2929

INSTALLATION INSTRUCTIONS

Product: SDHQ-00-1130-U1-RCR12

Description: Universal Switch Pros RCR-12 Keypad Mount




Parts List	Hardware List	Required Tools
(1) SDHQ RCR12 Keypad Bezel SDHQ-00-1130-U1-RCR12-A (1) ¼" Acrylic Backer SDHQ-00-1130-U1-RCR12-B (1) Hardware Package SDHQ-00-1130-U1-HP	(4) #6 – 32 x ¾" S.S. Button Head Bolts (4) #6 S.S. Washers (4) #6 – 32 S.S. Nylock Nuts	Sharp Pick Razor Blade 8mm wrench 5/64" Allen Drive Fine Tip Sharpie 5/32", ¾" Drill Bit Drill

Tech Notes

The recommended install location is in the headliner of your vehicle.
 Cutting/Drilling is required for install.
 For use with the Switch Pros RCR-Force-12.
Approx. Install Time: 1 Hour

For questions or help with the installation, please call SDHQ Offroad @ 480-633-2929
 Mon.–Fri. 8:00am–5:30pm and Sat. 8:00am–3:30pm Arizona Time. www.sdhqoffroad.com

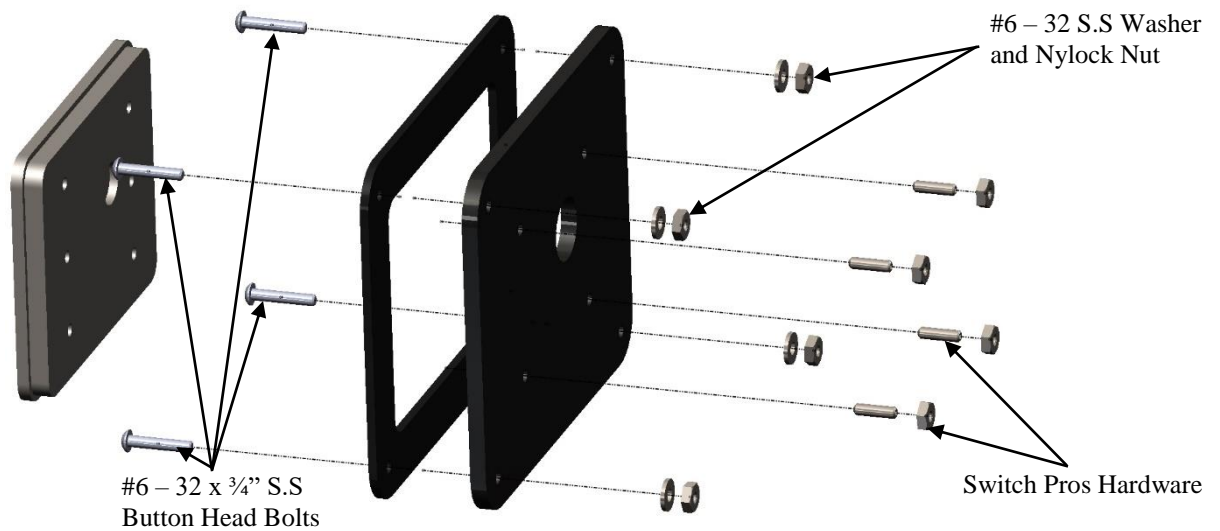

*****READ ALL INSTRUCTIONS THOROUGHLY FROM START TO FINISH BEFORE BEGINNING INSTALLATION! *****

Installation Instructions:

1. Unbox all parts. Familiarize yourself with the parts and the diagram above.
2. If you are installing the Keypad into the headliner of a vehicle with an overhead console, it will need to be removed before installation. If you are installing the Keypad into another location, verify the Keypad, Bezel and Backer all fit without any interference. Begin planning out your wiring once fitment is verified.
3. In your vehicle, align the Acrylic Backer on your headliner. Double check clearance behind the headliner to mount and wire the Switch Pros Keypad. Mark the (8) mounting holes and Switch Pros Keypad harness hole as shown right. (9100 backer shown)



4. Use a sharp pick to create the holes for mounting the Keypad. Use a razor blade to cut the hole for the harness. Use the 5/32\"/>



For questions or help with the installation, please call SDHQ Offroad @ 480-633-2929
 Mon.-Fri. 8:00am-5:30pm and Sat. 8:00am-3:30pm Arizona Time. www.sdhqoffroad.com

5. Install the Switch Pros supplied threaded studs into the back of the Keypad. Install the Keypad into the SDHQ Keypad Bezel. Pull the Keypad harness through the hole and align the Keypad and Bezel.



6. Align the Acrylic Backer behind the headliner and pull the Keypad Harness through the hole. Place the Acrylic Backer over the threaded studs on the Keypad. Use the Switch Pros Nylock nuts to secure the backer.
7. Insert the (4) supplied #6 bolts through the mounting holes on the SDHQ Bezel. Use the supplied washers and nylock nuts to secure the bezel to the backer. Tighten all hardware.



8. Finish wiring your Switch Pros. Enjoy your new SDHQ Switch Pros Keypad Mount!

*****Double check all hardware is installed correctly and tight*****

*****Re-torque ALL bolts after 100 miles*****



190 S McQueen Rd
Ste 109 Gilbert, AZ 85233
Phone: 480-633-2929 | Fax: 480-633-1791
www.sdhqoffroad.com

Follow us on:



Facebook



Instagram

For questions or help with the installation, please call SDHQ Offroad @ 480-633-2929
Mon.–Fri. 8:00am–5:30pm and Sat. 8:00am–3:30pm Arizona Time. www.sdhqoffroad.com