



SDHQ Motorsports
190 S McQueen Rd
Ste 109 Gilbert, AZ 85233
Phone: 480-633-2929

Product Packing List

Product: SDHQ-00-1131-U1-9100

Description: Universal Billet Switch Pros 9100 Keypad Flush Mount

_____ (1) Universal Billet Switch Pros 9100 Mount

SDHQ-53-1130-G3-B

_____ (1) 3D Printed Backer

SDHQ-00-1131-U1-9100-A

_____ (1) Cut Template

SDHQ-00-1131-U1-9100-B

Inspected and Packaged By: _____ **Date:** _____

For questions or help with the installation, please call SDHQ Offroad @ 480-633-2929
Mon.-Fri. 8:00am-5:30pm and Sat. 8:00am-3:30pm Arizona Time. www.sdhqoffroad.com

Included in SDHQ-53-1130-63-B:

(1) Hardware Package

(4) #6 - 32 x 3/4" S.S. Button Head Bolts

(4) #6 S.S. Washers

(4) #6 x 3/8" Rubber Washer

SDHQ-53-1130-63-HP



SDHQ Motorsports
 190 S McQueen Rd
 Ste 109 Gilbert, AZ 85233
 Phone: 480-633-2929

INSTALLATION INSTRUCTIONS

Product: SDHQ-00-1131-U1-9100

Description: Universal Billet Switch Pros 9100 Keypad Flush Mount




<u>Parts List</u>	<u>Hardware List</u>	<u>Required Tools</u>
(1) Billet Switch Pros 9100 Keypad Mount SDHQ-53-1130-G3-B (1) 3D Printed Backer SDHQ-00-1131-U1-9100-A (1) Cut Template SDHQ-00-1131-U1-9100-B (1) Hardware Package SDHQ-53-1130-G3-HP	(4) #6 – 32 x 3/4" S.S. Button Head Bolts (4) #6 S.S. Washers (4) #6 x 3/8" Rubber Washers	Thread Locker (Medium) Sharpie Panel Cutting Tools
<u>Tech Notes</u>		
Use medium thread locker on supplied mounting hardware. **Approx install time = 30 Minutes (not including wiring)**		

For questions or help with the installation, please call SDHQ Offroad @ 480-633-2929
 Mon.–Fri. 8:00am–5:30pm and Sat. 8:00am–3:30pm Arizona Time. www.sdhqoffroad.com

*****READ ALL INSTRUCTIONS THOROUGHLY FROM START TO FINISH BEFORE BEGINNING INSTALLATION! *****

Installation Instructions:

1. Unbox your Universal Billet 9100 Mount and gather your Switch Pros 9100.
2. Place the supplied cut template in the desired location for mounting and mark the inner hole with a sharpie, shown in red. The outer edge shown in blue is the footprint of the mount to assist in spacing or clearance when selecting a mounting location. The outermost edge shown in green is the footprint of 3D printed backer.

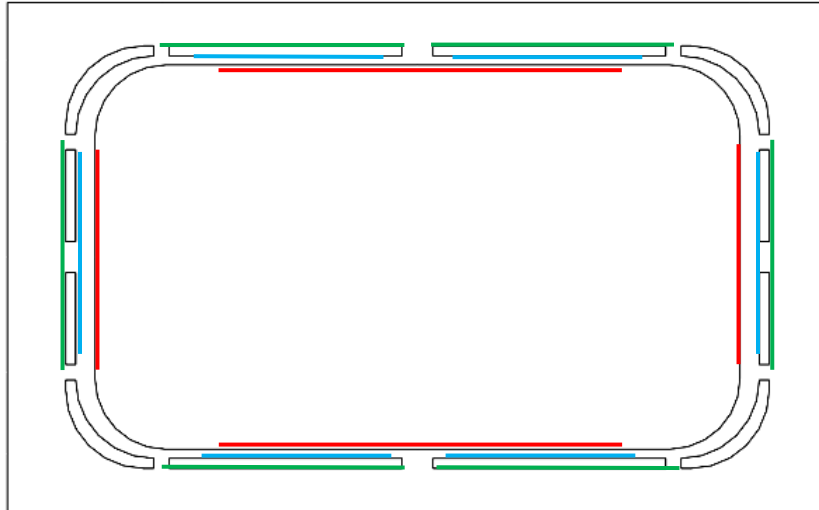

3. Once marked cut out the mounting hole. Start small and trim to fit as needed.
4. Using the hardware supplied with your Switch Pro, place your 9100 Keypad into the Universal Billet Mount and place it into the mounting hole. Place the 3D printed backer behind the mount and thread on the (4) nuts and washers onto the Switch Pros threaded posts.



5. Run wiring according to Switch Pros instructions. Enjoy your SDHQ Built Universal Billet Switch Pros 9100 Mount!

For questions or help with the installation, please call SDHQ Offroad @ 480-633-2929
Mon.–Fri. 8:00am–5:30pm and Sat. 8:00am–3:30pm Arizona Time. www.sdhqoffroad.com

*****Double check all hardware is installed correctly and tight*****

*****Re-torque ALL bolts after 100 miles*****



190 S McQueen Rd
Ste 109 Gilbert, AZ 85233
Phone: 480-633-2929 | Fax: 480-633-1791
www.sdhqoffroad.com

Follow us on:



Facebook



Instagram

For questions or help with the installation, please call SDHQ Offroad @ 480-633-2929
Mon.–Fri. 8:00am–5:30pm and Sat. 8:00am–3:30pm Arizona Time. www.sdhqoffroad.com