



**SDHQ Motorsports**  
**190 S McQueen Rd**  
**Ste 109 Gilbert, AZ 85233**

---

## Product Packing List

**Product:** SDHQ-00-1304-U1

**Description:** **SDHQ Built Multi-Platform Billet ABS Guards**

_____ (2) ABS Guard	SDHQ-00-1304-U1-A
_____ (1) Hardware Package	SDHQ-00-1304-U1-HP
_____ (2) M6 - 1.0 x 20mm Socket Head Bolts	
_____ (2) M8 - 1.25 x 20mm Socket Head Bolts	
_____ (2) 1/4" Washers (1/2" OD)	

**Packaged and Shipped By:** \_\_\_\_\_ **Date:** \_\_\_\_\_

# Vehicle Fitment Chart

Vehicle	Front Fitment	Rear Fitment	M6 Bolt	M8 Bolt
2021+ Ford Bronco	X	X	X	
2011+ Ford Super Duty		X	X	
2009+ Ford F-150		X		X
2010+ Ford Raptor		X		X
2019+ Ford Ranger		X	X	
2022+ Toyota Tundra	X		X	
2020+ Chevy/GMC 2500		X	X	
2014-18 Chevy/GMC 1500		X	X	
2019+ Chevy/GMC 1500	X	X	X	
2020+ Jeep Gladiator Dana 44		X	X	
2018+ Jeep Wrangler Dana 44		X	X	
2019+ Ram 2500/3500 SRW		X	X	
2019+ Ram 3500 DRW		X	X	
2021+ Ram TRX		X		X

## INSTALLATION INSTRUCTIONS

**Product:** SDHQ-00-1304-U1

**Description:** SDHQ Built Multi-Platform Billet ABS Guards



<u>Parts List</u>	<u>Hardware List</u>	<u>Required Tools</u>
(2) ABS Guards SDHQ-00-1304-U1-A (1) Hardware Package SDHQ-00-1304-U1-HP	(2) M8 - 1.25 X 20mm Socket Head Bolts (2) M6 - 1.0 X 20mm Socket Head Bolts (2) ¼" Washers (1/2" OD)	13mm socket / wrench 10mm socket / wrench 8mm socket / wrench 5mm Allen wrench 6mm Allen wrench

### Tech Notes

These guards help protect your vulnerable factory ABS sensors from rocks and debris.  
 Your factory hardware will be replaced with upgraded stainless bolts.  
 ABS guards are **NOT** side specific.


**\*Do NOT over torque the bolts. They only require 6 ft-lbs of torque.\***

\*\*\*READ ALL INSTRUCTIONS THOROUGHLY FROM START TO FINISH BEFORE BEGINNING INSTALLATION!\*\*\*

## **Installation Instructions:**

Locate your abs sensor on either the passenger or driver side. Remove the factory bolt holding the sensor down. Place the ABS guard over the sensor and replace the factory bolt with either the supplied 1/4" washer and M6 bolt or M8 bolt according to the fitment chart above. Adjust ABS guard rotation as needed and tighten. Repeat for opposite side.

### **2021+ Ford Bronco - Front**

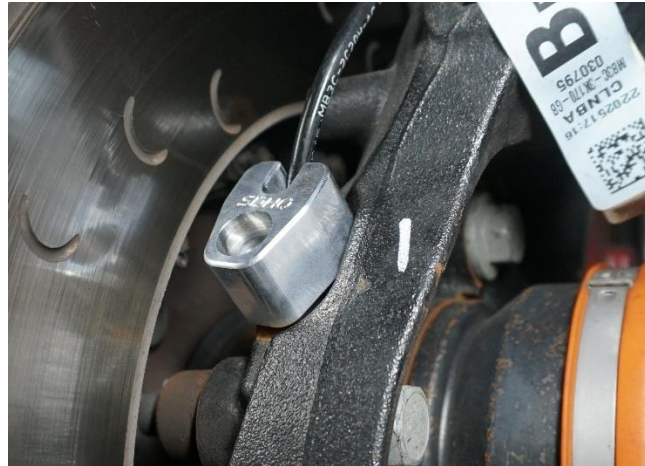

### **Rear**



### **2011+ Ford Super Duty - Rear**



**2020+ GMC 2500HD- Rear**



**2022+ Toyota Tundra- Front**



**2019+ Chevy 1500 Front**



**2019+ Chevy 1500 Rear**



**2014-18 Chevy 1500- Rear**



**2020+ Jeep Gladiator Dana 44 Axle- Rear**



**2018+ Jeep Wrangler Dana 44 Axle- Rear**



**2019+ Ram 2500/2500 SRW- Rear**



**2019+ Ram 3500 DRW- Rear**



**2010+ Ford Raptor- Rear**



**2009+ Ford Raptor- Rear**



**2021+ Ram TRX- Rear**





**\*\*\*Double check all hardware is installed correctly and tight\*\*\***

**\*\*\*Re-torque ALL bolts after 100 miles\*\*\***



190 S McQueen Rd  
Ste 109 Gilbert, AZ 85233  
[www.sdhqoffroad.com](http://www.sdhqoffroad.com)

Follow us on:

