



SDHQ Motorsports
190 S McQueen Rd
Ste 109 Gilbert, AZ 85233
Phone: 480-633-2929

Product Packing List

Product: SDHQ-00-1810-U1

Description: SDHQ Built in Bed Rack Tie Down Kit

_____ (2) Tie Downs	SDHQ-00-1810-U1-A
_____ (1) Hardware Package	SDHQ-00-1810-U1-B
_____ (4) 5/16" - 18 x 3/4" Grade 8 Hex Bolt	
_____ (8) 5/16" Grade 8 Washers	
_____ (4) 5/16" - 18 Grade 8 Lock Nut	

Inspected and Packaged By: _____ **Date:** _____

For questions or help with the installation, please call SDHQ Offroad @ 480-633-2929
Mon.-Fri. 8:00am-5:30pm and Sat. 8:00am-3:30pm Arizona Time. www.sdhqoffroad.com




SDHQ Motorsports
190 S McQueen Rd
Ste 109 Gilbert, AZ 85233
Phone: 480-633-2929

INSTALLATION INSTRUCTIONS

Product: SDHQ-00-1810-U1


Description: SDHQ Built in Bed Rack Tie Down Kit

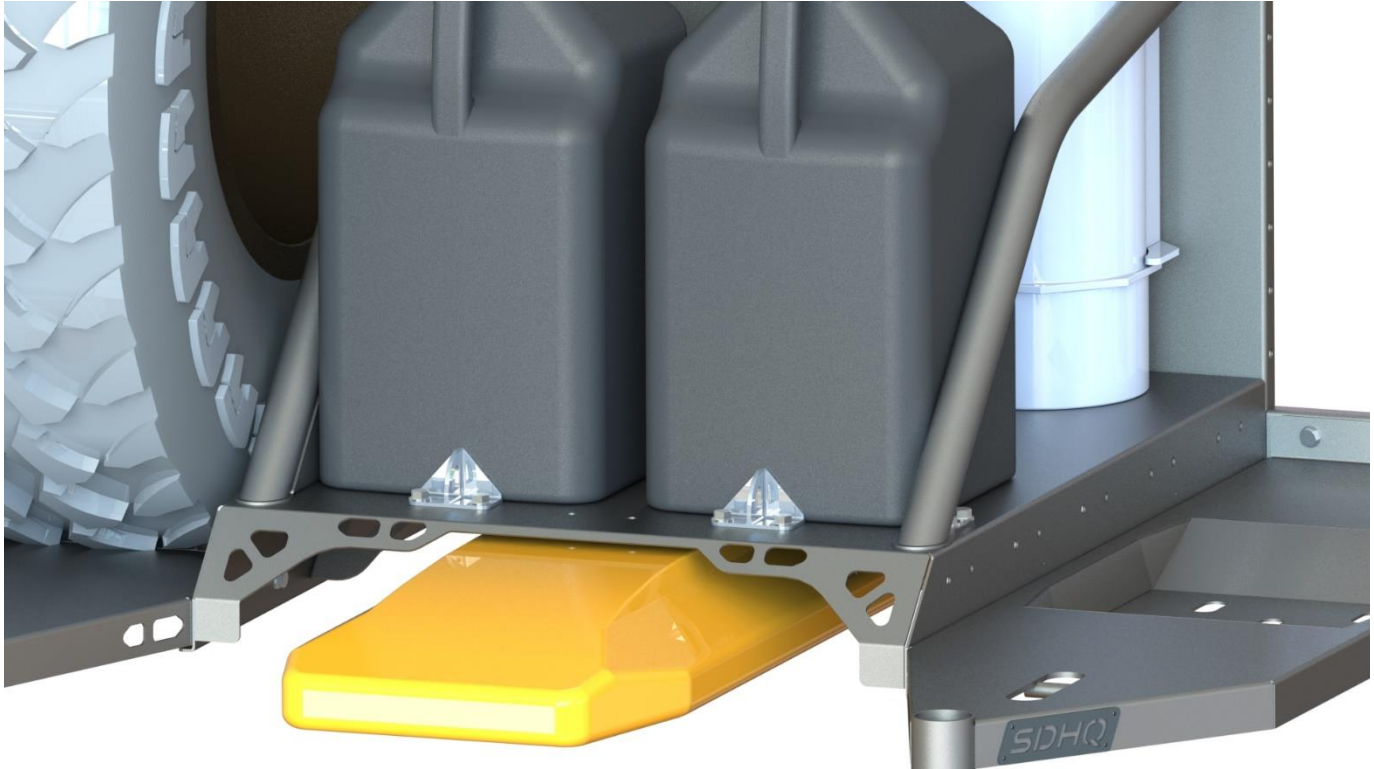

Parts List	Hardware List	Required Tools
(2) Tie Downs SDHQ-00-1810-U1-A (1) Hardware Package SDHQ-00-1810-U1-B	(4) 5/16" – 18 x 3/4" Grade 8 Hex Head Bolt (8) 5/16" Grade 8 Washer (4) 5/16" – 18 Grade 8 Lock Nut	1/2" Socket Ratchet 1/2" Wrench

Tech Notes


Approx. Install Time: 30 Minutes

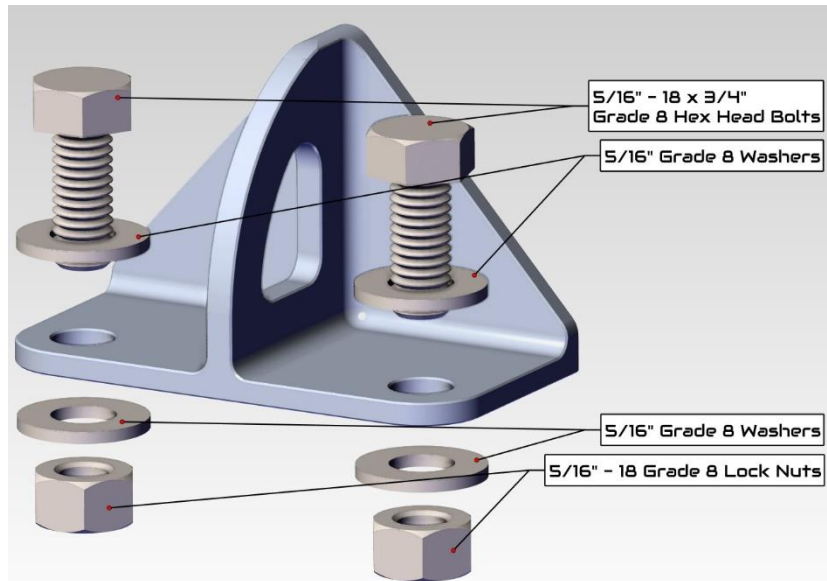

*****READ ALL INSTRUCTIONS THOROUGHLY FROM START TO FINISH BEFORE BEGINNING INSTALLATION! *****

Installation Instructions:

1. Unbox your SDHQ Built in Bed Rack Tie Down Kit and check over all parts. Familiarize yourself with the parts and diagrams.
2. Remove your Bed Rack if it is installed in your truck, unless the planned locations of the tie downs are easily accessible.
3. Place the Tie Down in the location of your choice. Insert and tighten the 5/16" hardware to secure the Tie Down to the Bed Rack.

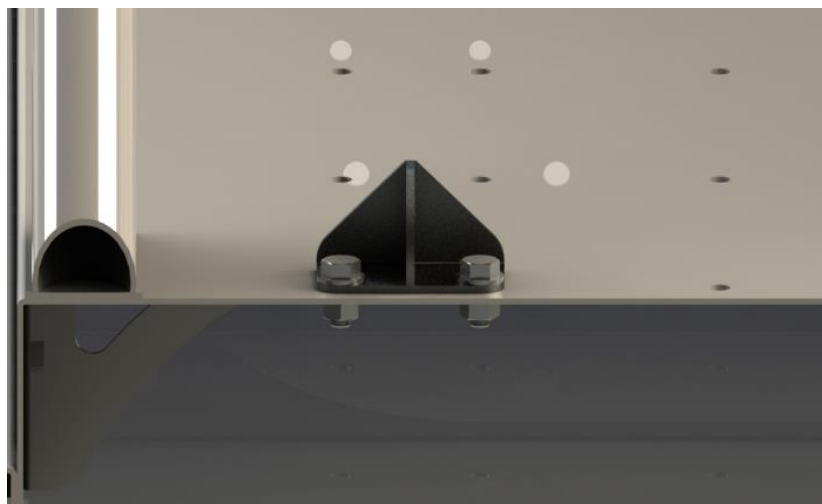

4. Repeat Step 3 for the other Tie Down. Install your Bed Rack if it was removed in Step 2.
5. Install Complete! Be sure to properly secure down accessories. Enjoy your SDHQ Built in Bed Rack Tie Downs!

For questions or help with the installation, please call SDHQ Offroad @ 480-633-2929
 Mon.–Fri. 8:00am–5:30pm and Sat. 8:00am–3:30pm Arizona Time. www.sdhqoffroad.com

*****Double check all hardware is installed correctly and tight*****

*****Re-torque ALL bolts after 100 miles*****



190 S McQueen Rd
Ste 109 Gilbert, AZ 85233
Phone: 480-633-2929 | Fax: 480-633-1791
www.sdhqoffroad.com

Follow us on:



Facebook



Instagram

For questions or help with the installation, please call SDHQ Offroad @ 480-633-2929
Mon.–Fri. 8:00am–5:30pm and Sat. 8:00am–3:30pm Arizona Time. www.sdhqoffroad.com