



SDHQ Motorsports
190 S McQueen Rd
Ste 109 Gilbert, AZ 85233
www.SDHQoffroad.com

Product Packing List

Product: *SDHQ-02-3003-Fxxx*

Description: SDHQ Built Billet Battery Terminal Fuse Kit

- | | |
|--|-------------------|
| _____ (1) Hardware Package | SDHQ-02-3003-Fxxx |
| _____ (1) Fxxx Amp Z-Case Fuse | |
| _____ (1) Electrical Insulator Sleeve | |
| _____ (1) 5/16" - 18 x 2.5" SS Hex Head Bolt | |
| _____ (1) 5/16" - 18 SS Hex Nut | |
| _____ (1) 5/16" SS Split Lock Washer | |
| _____ (1) Red 2-2/0 Terminal Boot | |

Inspected and Packaged By: _____ Date: _____

For questions or help with the installation, please email help@sdhqoffroad.com
Store front hours: Mon. - Fri. 8:00am - 5:30pm and Sat. 9:00am - 2:00pm Arizona Time.

For questions or help with the installation, please email help@sdhqoffroad.com
Store front hours: Mon. – Fri. 8:00am – 5:30pm and Sat. 9:00am – 2:00pm Arizona Time.




SDHQ Motorsports
190 S McQueen Rd
Ste 109 Gilbert, AZ 85233
www.SDHQoffroad.com

INSTALLATION INSTRUCTIONS

Product: *SDHQ-02-3003-Fxxx*

Description: SDHQ Built Billet Battery Terminal Fuse Kit

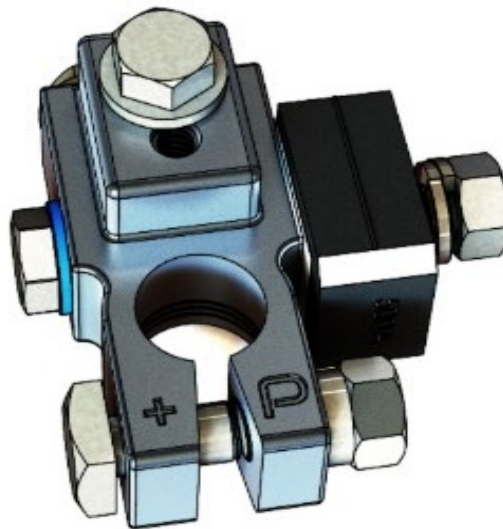

Terminal Not Included


<u>Parts List</u>	<u>Hardware List</u>	<u>Required Tools</u>
(1) Hardware Package SDHQ-02-3003-Fxxx	(1) Fxxx Amp Z-Case Fuse (1) Electrical Insulator Sleeve (1) 5/16" – 18 x 2 1/2" S.S. Hex Head Bolt (1) 5/16" – 18 S.S. Hex Nut (1) 5/16" – 18 S.S. Split Washer (1) Red 2-2/0 Eyeletl Boot	1/2", 9/16" Sockets Ratchet

Tech Notes

This kit is available in fuse amperage sizes: 200, 225, 250, 400, 500, and 600
Approx. Install Time: 20 Minutes

For questions or help with the installation, please email help@sdhqoffroad.com
Store front hours: Mon. – Fri. 8:00am – 5:30pm and Sat. 9:00am – 2:00pm Arizona Time.

SDHQ Positive Battery Terminal (without Stud)

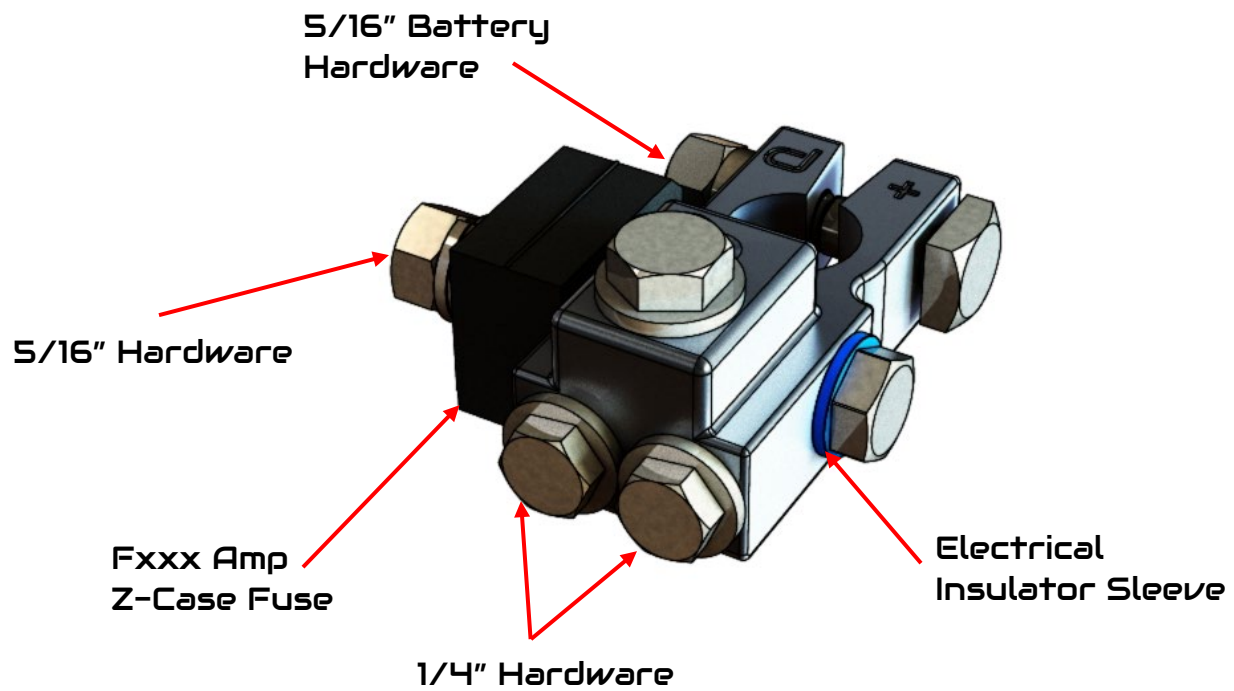

*****READ ALL INSTRUCTIONS THOROUGHLY FROM START TO FINISH BEFORE BEGINNING INSTALLATION! *****

Installation Instructions:


1. Unpackage your SDHQ Billet Battery Terminal Fuse Kit and check over all parts. Familiarize yourself with the parts and diagrams above.
2. Remove 3/8 –16 SS Hex Head Bolt, Nut and Washers and set aside as they will not be reused. Install the supplied Electrical Insulator Sleeve onto the 5/16”–18 SS Hex Head Bolt.



3. Place the 5/16” bolt where the 3/8” bolt was located. The supplied Insulator Sleeve will prevent contact with the bolt and terminal once installed.
4. Install Red Standard Eyelet Terminal Insulator onto end of Eyelet to be attached.



5. Install the supplied Z-Case Fuse and cable lug on the end of the 5/16” Bolt. Install 5/16” Split Lock Washer and 5/16” Hex Nut onto the end of the Bolt. **Torque to 55 in/lbs.** Finally install your SDHQ terminal boot by cutting along the highlighted white lines shown below.

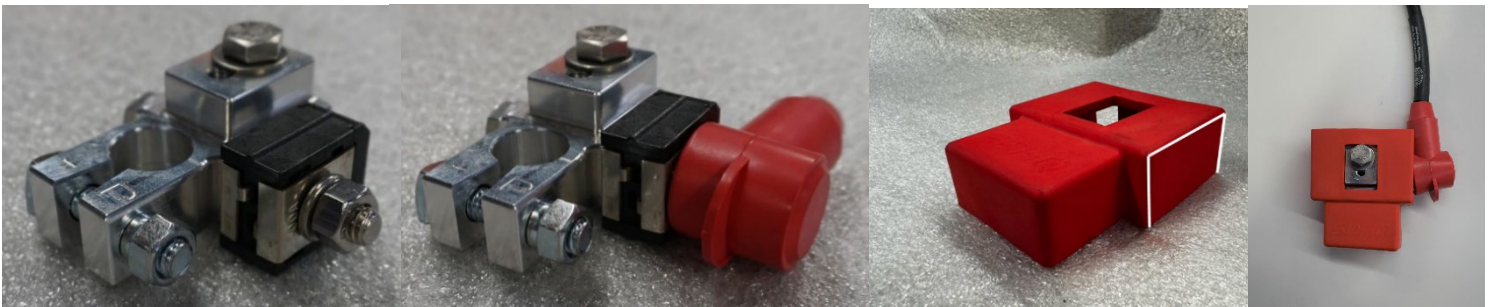

For questions or help with the installation, please email help@sdhqoffroad.com
Store front hours: Mon. – Fri. 8:00am – 5:30pm and Sat. 9:00am – 2:00pm Arizona Time.

*****Double check all hardware is installed correctly and tight*****

*****Re-torque ALL bolts after 100 miles*****



190 S McQueen Rd
Ste 109 Gilbert, AZ 85233
Phone: 480-633-2929 | Fax: 480-633-1791
www.sdhqoffroad.com

Follow us on:



Facebook



Instagram

For questions or help with the installation, please email help@sdhqoffroad.com
Store front hours: Mon. – Fri. 8:00am – 5:30pm and Sat. 9:00am – 2:00pm Arizona Time.