



**SDHQ Motorsports**  
190 S McQueen Rd  
Ste 109 Gilbert, AZ 85233  
[www.SDHQoffroad.com](http://www.SDHQoffroad.com)

---

## Product Packing List

**Product:** SDHQ-10-1133-AC

**Description:** SDHQ Built 2015-2020 Ford F150 and  
2017-2022 F250/350 2WD SP9100 Keypad Mount

\_\_\_\_\_ (1) Keypad Mount

SDHQ-10-1133-AC

\_\_\_\_\_ (1) Hardware Package

SDHQ-10-1133-AC-HP

\_\_\_\_\_ (2) #8 x 3/8" Thread-Forming Screws

\_\_\_\_\_ (4) #6-32 x 5/16" Button Head Bolt

Inspected and Packaged By: \_\_\_\_\_ Date: \_\_\_\_\_





SDHQ Motorsports  
190 S McQueen Rd  
Ste 109 Gilbert, AZ 85233  
[www.SDHQoffroad.com](http://www.SDHQoffroad.com)

## INSTALLATION INSTRUCTIONS

**Product:** SDHQ-10-1133-AC

**Description:** SDHQ Built 2015-2020 Ford F150 and  
2017-2022 F250/350 2WD SP9100 Keypad Mount



<b>Parts List</b>	<b>Hardware List</b>	<b>Required Tools</b>
(1) SDHQ Keypad Mount SDHQ-10-1133-AC (1) Hardware Package SDHQ-10-1133-AC-HP	(2) #8 x 3/8" Thread-Forming Screw (4) #6-32 x 5/16" Button Head Bolt	Phillips Screwdriver Plastic Trim Tools 5/16" Socket or Wrench Ratchet


### **Tech Notes**

Approx. Install Time: 1 Hour (Not including wiring)

\*\*\*READ ALL INSTRUCTIONS THOROUGHLY FROM START TO FINISH BEFORE BEGINNING INSTALLATION!\*\*\*

For questions or help with the installation, please email [help@sdhqoffroad.com](mailto:help@sdhqoffroad.com)  
Store front hours: Mon. – Fri. 8:00am – 5:30pm and Sat. 9:00am – 2:00pm Arizona Time.

## SDHQ-10-1133-AC

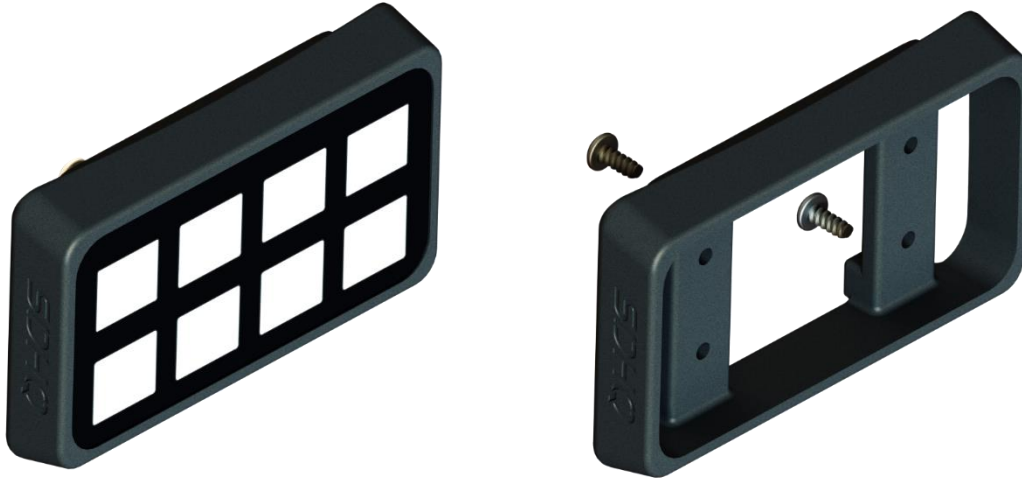

### **Installation Instructions:**

1. Un-box your SDHQ Built Ford 2WD SP9100 Keypad Mount and lay out the parts on a clean table. Verify all parts are present and familiarize yourself with all the parts.
2. Begin by removing the speaker grill if equipped on the center of the dash board using a plastic pry tool. Otherwise there is a rubber liner that needs to be removed. Then remove the (2) screws found on either side of the speaker or rubber liner using a 7mm socket.




3. Pull the plastic panel above the radio, shown above, out using plastic pry tools. There are (3) clips in the front of the panel. There is a wiring harness connecting to the bottom of the panel that needs to be disconnected.
4. Then using a 7mm socket remove the (2) screws found at the top of the radio bezel. Using a plastic pry tool remove the radio bezel from the dash.



For questions or help with the installation, please email [help@sdhqoffroad.com](mailto:help@sdhqoffroad.com)  
Store front hours: Mon. – Fri. 8:00am – 5:30pm and Sat. 9:00am – 2:00pm Arizona Time.



5. Remove the lower radio bezel by removing the (2) screws using a 7mm socket. If equipped with a Bench seat skip to Step 8.

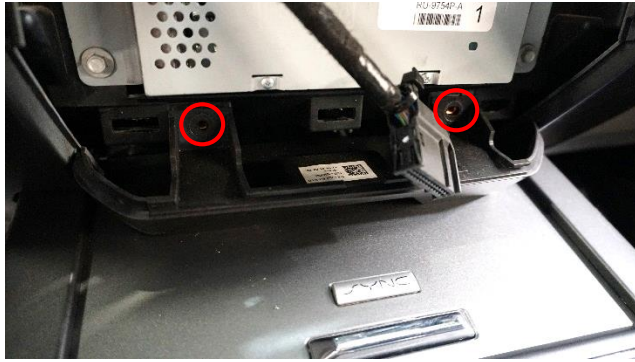

6. If equipped with a Center Console, remove the Flow Through panel using plastic trim tools release the rear of the panel under the center console lid. Then pull back on the trim to remove it from the console.



7. Remove the left dash air vent trim, there may be electrical connectors on the panel so be careful when removing. Remove the coin holder from the panel and set the panel aside.



8. Install the Switch Pro into the Keypad mount and use the supplied button head bolts to attach the keypad to the mount. Install the Keypad mount onto the panel using the supplied Thread Forming Screws through the factory panel holes.



9. Reinstall the removed plastic panels and screws, refer to the previous steps to complete installation.
10. Enjoy your SDHQ Built Ford SP9100 Keypad Mount.

For questions or help with the installation, please email [help@sdhqoffroad.com](mailto:help@sdhqoffroad.com)  
Store front hours: Mon. – Fri. 8:00am – 5:30pm and Sat. 9:00am – 2:00pm Arizona Time.

\*\*\*Double check all hardware is installed correctly and tight\*\*\*

\*\*\*Re-torque ALL bolts after 100 miles\*\*\*



190 S McQueen Rd  
Ste 109 Gilbert, AZ 85233  
[www.sdhqoffroad.com](http://www.sdhqoffroad.com)

Follow us on:



Facebook



Instagram

For questions or help with the installation, please email [help@sdhqoffroad.com](mailto:help@sdhqoffroad.com)  
Store front hours: Mon. – Fri. 8:00am – 5:30pm and Sat. 9:00am – 2:00pm Arizona Time.