



**SDHQ Motorsports**  
**190 S McQueen Rd**  
**Ste 109 Gilbert, AZ 85233**  
**Phone: 480-633-2929**

---

## Product Packing List

**Product:** *SDHQ-11-1206-G1*

**Description:** 99-07 Ford Super Duty A-Pillar Light Mounts

_____ (1) Driver Side Mount	SDHQ-11-1206-G1-A
_____ (1) Passenger Side Mount	SDHQ-11-1206-G1-B
_____ (1) Hardware Package	SDHQ-11-1206-G1-C
_____ (4) M8 - 1.25 x 30mm S.S. Hex Head Bolt	
_____ (4) 5/16" S.S. Washers	

**Inspected and Packaged By:** \_\_\_\_\_ **Date:** \_\_\_\_\_

For questions or help with the installation, please call SDHQ Offroad @ 480-633-2929  
Mon.-Fri. 8:00am-5:30pm and Sat. 8:00am-3:30pm Arizona Time. [www.sdhqoffroad.com](http://www.sdhqoffroad.com)






SDHQ Motorsports  
 190 S McQueen Rd  
 Ste 109 Gilbert, AZ 85233  
 Phone: 480-633-2929

## INSTALLATION INSTRUCTIONS

**Product:** SDHQ-11-1206-G1

**Description:** 99-07 Ford Super Duty A-Pillar Light Mounts

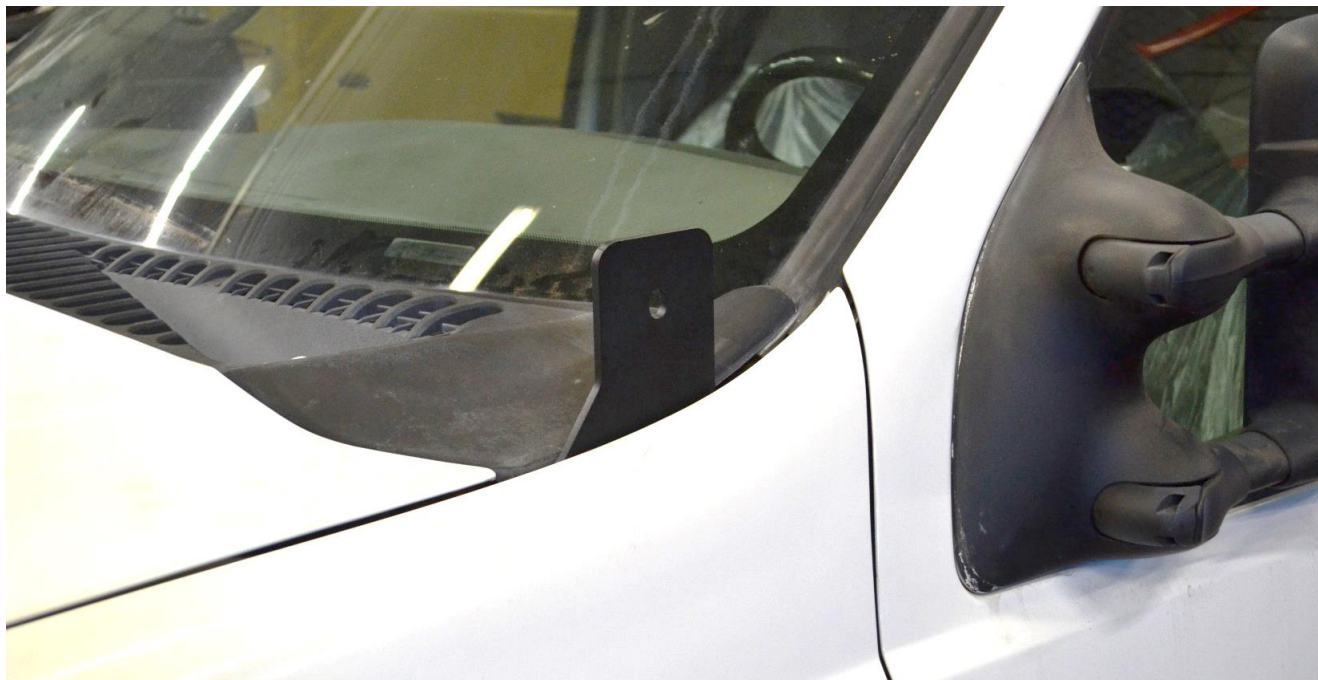

<u>Parts List</u>	<u>Hardware List</u>	<u>Required Tools</u>
(1) Driver Side Mount SDHQ-11-1206-G1-A (1) Passenger Side Mount SDHQ-11-1206-G1-B (1) Hardware Package SDHQ-11-1206-G1-C	(4) M8 – 1.25 x 30mm S.S. Hex Head Bolts (4) 5/16” S.S. Washers	Panel Removal Tool 10mm, 13mm Wobbly Socket 10mm, 13mm Deep Socket 10mm Wrench 3” Extension Ratchet Philips Head Screw Driver Hood Prop Marker
<u>Tech Notes</u>		
Use Anti-Seize on all Stainless Steel (S.S.) Hardware No cutting or drilling required. <b>Use a hood prop and mark the outline of hood hinges to assist in realignment during install.</b> Approx. Install Time: 2 Hours		

\*\*\*READ ALL INSTRUCTIONS THOROUGHLY FROM START TO FINISH BEFORE BEGINNING INSTALLATION!\*\*\*

For questions or help with the installation, please call SDHQ Offroad @ 480-633-2929  
 Mon.–Fri. 8:00am–5:30pm and Sat. 8:00am–3:30pm Arizona Time. [www.sdhqoffroad.com](http://www.sdhqoffroad.com)

## **Installation Instructions:**

1. Unbox your SDHQ 99-07 Ford Super Duty A-Pillar Lights. Verify all parts are present and familiarize yourself with them.
2. Flip up your windshield wipers as if you were going to be cleaning your windshield. Locate the small tab on the underside of the wiper arm where it attaches to the shaft. Pull out on the tab and lift the wiper arms off of the shafts and set aside.



3. Open your hood. Use making tape to tape off the top outer edges of the hood by the cowl. Tape off the top back edges of the fender where the A-Pillars will mount.
4. The plastic cowl will need to be removed to gain access to the hood hinges. Unscrew the (8) Philips head screws at the top of the cowl. Remove the (5) panel clips connecting the front of the plastic cowl to the firewall. Remove the antenna using the 10mm wrench. Remove the driver and passenger plastic cowl.



For questions or help with the installation, please call SDHQ Offroad @ 480-633-2929  
Mon.–Fri. 8:00am–5:30pm and Sat. 8:00am–3:30pm Arizona Time. [www.sdhqoffroad.com](http://www.sdhqoffroad.com)

5. Set up your hood prop to support the hood as the hinge bolts are removed. Starting on the driver side hinge, remove both factory bolts. The front bolt will need a 10mm wobbly socket and the rear bolt will need a 10mm deep socket. **\*\* Mark the outline of the hood hinge to assist in alignment during installation. \*\***
6. Align the driver side A-Pillar mount on top of the driver side hood hinge. It is a tight fit to align the A-Pillar mounts. Hook the rear mounting face behind the hinge and slide forward to fit the front mounting face.
7. Thread (2) M8 bolts and washers loosely to secure the mounts.
8. Proceed to the passenger side. Repeat Steps 5 – 7 on the passenger side. Align the hood and tighten the hood hinge bolts. Reverse Steps 2 – 4 to install the plastic cowl and windshield wipers.



9. Installation Complete! Install your lights and wire. Enjoy your new SDHQ A-Pillar Light Mounts!

**\*\*\*Double check all hardware is installed correctly and tight\*\*\***

**\*\*\*Re-torque ALL bolts after 100 miles\*\*\***



190 S McQueen Rd  
Ste 109 Gilbert, AZ 85233  
Phone: 480-633-2929 | Fax: 480-633-1791  
[www.sdhqoffroad.com](http://www.sdhqoffroad.com)

Follow us on:



Facebook



Instagram

For questions or help with the installation, please call SDHQ Offroad @ 480-633-2929  
Mon.–Fri. 8:00am–5:30pm and Sat. 8:00am–3:30pm Arizona Time. [www.sdhqoffroad.com](http://www.sdhqoffroad.com)