



SDHQ Motorsports
190 S McQueen Rd
Ste 109 Gilbert, AZ 85233
Phone: 480-633-2929

Product Packing List

Product: SDHQ-13-1206-G12

Description: 09-14 Ford F-150/Raptor A Pillar Light Mounts

_____ (1) Driver Side Mount

SDHQ-13-1206-G12-A

_____ (1) Passenger Side Mount

SDHQ-13-1206-G12-B

Inspected and Packaged By: _____ Date: _____

For questions or help with the installation, please call SDHQ Offroad @ 480-633-2929
Mon.-Fri. 8:00am-5:30pm and Sat. 8:00am-3:30pm Arizona Time. www.sdhqoffroad.com



SDHQ Motorsports
190 S McQueen Rd
Ste 109 Gilbert, AZ 85233
Phone: 480-633-2929

INSTALLATION INSTRUCTIONS

Product: SDHQ-13-1206-G12

Description: 09-14 Ford F-150/Raptor A Pillar Light Mounts



<u>Parts List</u>	<u>Hardware List</u>	<u>Required Tools</u>
(1) Driver Side Mount SDHQ-13-1206-G12-A (1) Passenger Side Mount SDHQ-13-1206-G12-B	N/A	10MM Ratchet Wrench Small Flathead Screwdriver Hood Prop Marker
<u>Tech Notes</u>		
Approx install time = 1 hour A hood prop or second person will be needed to support the hood during installation. Trace the outline of hood hinges before removal to assist in realignment.		

For questions or help with the installation, please call SDHQ Offroad @ 480-633-2929
Mon.-Fri. 8:00am-5:30pm and Sat. 8:00am-3:30pm Arizona Time. www.sdhqoffroad.com



*****READ ALL INSTRUCTIONS THOROUGHLY FROM START TO FINISH BEFORE BEGINNING INSTALLATION! *****

Installation Instructions:


1. Raise hood and locate the hood hinge bolts near the base of the windshield. With a 10mm wrench (ratchet wrench preferred), remove both hinge bolts on one side of the truck. Remove the gas strut that lifts to hood to help with installation. Be sure to use a hood prop to brace the hood. Use a small flathead screwdriver to pop the lower retaining clip enabling the lower end of the strut to be removed of the ball stud. **** Mark the outline of your hood hinge with a marker before removal to assist with realignment during installation. ****



2. Feed the A-Pillar bracket into the cavity above the hood hinge. The hood may need to be lifted slightly to fit the bracket in place. The vertical of the A-Pillar bracket sits next to the vertical of the hood hinge for reference. Align the hood hinge with the marked outline and reinstall the 10mm bolts and replace the hood strut.



3. Repeat steps 1 and 2 for the other side.

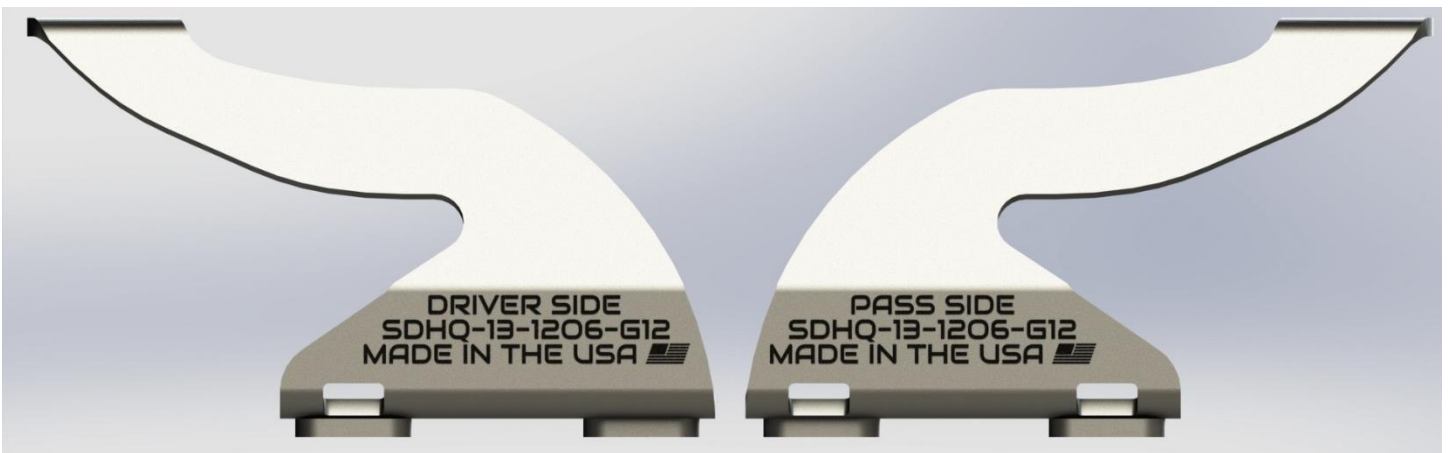

Double check all hardware is installed correctly and tight

Re-torque ALL bolts after 100 miles



190 S McQueen Rd
Ste 109 Gilbert, AZ 85233
Phone: 480-633-2929 | Fax: 480-633-1791
www.sdhqoffroad.com

Follow us on:



Facebook



Instagram

For questions or help with the installation, please call SDHQ Offroad @ 480-633-2929
Mon.–Fri. 8:00am–5:30pm and Sat. 8:00am–3:30pm Arizona Time. www.sdhqoffroad.com