



**SDHQ Motorsports**  
**190 S McQueen Rd**  
**Ste 109 Gilbert, AZ 85233**  
**Phone: 480-633-2929**

---

## Product Packing List

**Product:** SDHQ-14-1206-G6

**Description:** 2021+ Ford Bronco A-Pillar Light Mounts

_____ (1) Driver Side Mount	SDHQ-14-1206-G6-A
_____ (1) Passenger Side Mount	SDHQ-14-1206-G6-B
_____ (1) Hardware Package	SDHQ-14-1206-G6-HP
_____ (4) M6 - 1mm x 25mm Tamper Resistant S.S. Button Head Bolts	
_____ (8) ¼" S.S. Washers	
_____ (2) ¼" - 20 x ¾" S.S. Hex Head Bolts	
_____ (2) ¼" - 20 S.S. Locknuts	
_____ (2) 3D Printed Spacers	
_____ (1) T27 Tamper Resistant Torx Bit	

**Inspected and Packaged By:** \_\_\_\_\_ **Date:** \_\_\_\_\_

For questions or help with the installation, please call SDHQ Offroad @ 480-633-2929  
Mon.-Fri. 8:00am-5:30pm and Sat. 8:00am-3:30pm Arizona Time. [www.sdhqoffroad.com](http://www.sdhqoffroad.com)

**For questions or help with the installation, please call SDHQ Offroad @ 480-633-2929  
Mon.–Fri. 8:00am–5:30pm and Sat. 8:00am–3:30pm Arizona Time. [www.sdhqoffroad.com](http://www.sdhqoffroad.com)**



SDHQ Motorsports  
190 S McQueen Rd  
Ste 109 Gilbert, AZ 85233  
Phone: 480-633-2929

## INSTALLATION INSTRUCTIONS

**Product:** SDHQ-14-1206-G6

**Description:** 2021+ Ford Bronco A-Pillar Light Mounts



<b>Parts List</b>	<b>Hardware List</b>	<b>Required Tools</b>
(1) Driver Side Mount SDHQ-14-1206-G6-A (1) Passenger Side Mount SDHQ-14-1206-G6-B (1) Hardware Package SDHQ-14-1206-G6-HP	(4) M6 – 1.0 x 25mm T-R S.S. Button Head Bolts (8) 1/4" S.S. Washers (2) 1/4" – 20 x 3/4" S.S. Hex Head Bolts (2) 1/4" – 20 S.S. Locknuts (2) 3D Printed Spacers (1) T27 Tamper Resistant Torx Bit	T30 Screw Driver/Bit T25 Screw Driver/Bit 7/16" Wrench/Socket

### **Tech Notes**

- No cutting or drilling required
- Fits up to a 4 1/2" Cannon or XL80/LP4 sized light
- **Use Anti-Seize Lubricant on all stainless steel hardware**
- Approximate Install Time: 30 - 45 Minutes

**\*\*\*READ ALL INSTRUCTIONS THOROUGHLY FROM START TO FINISH BEFORE BEGINNING INSTALLATION! \*\*\***

For questions or help with the installation, please call SDHQ Offroad @ 480-633-2929  
Mon.–Fri. 8:00am–5:30pm and Sat. 8:00am–3:30pm Arizona Time. [www.sdhqoffroad.com](http://www.sdhqoffroad.com)

## **Installation Instructions:**


1. Unbox your SDHQ 2021+ Bronco A-Pillar Light Mount Kit and lay the pieces out on a clean table. Check that all hardware is accounted for and present.
2. Starting on the driver side of the vehicle remove the (2) factory torques bolts using a T25 and a T30 bit. Once removed place the supplied 3D printed spacer in the inner bolt hole as shown.



3. Place the mount on top of the cowl lining up the (2) bolt holes and loosely threading in the supplied M6 bolts and washers using the supplied T27 bit. Adjust the mount as desired and tighten down the bolts. Repeat steps 2-3 for the passenger side mount shown to the left.



4. The supplied 1/4" hardware is used for locking the driver to passenger rotation of lights such as Baja Designs XL80 and LP4 Series Lights. Place the bolt through the outer slot of the light mount with a light installed and tighten down at desired angle of light projection.

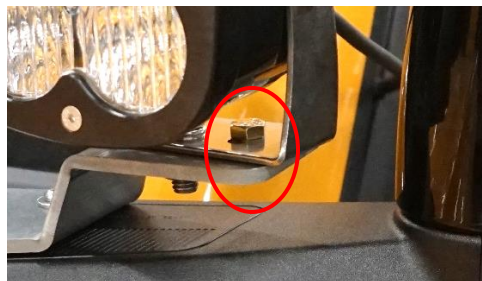

5. Finish wiring your lights and enjoy your new SDHQ Bronco A-Pillar Light Mounts!

For questions or help with the installation, please call SDHQ Offroad @ 480-633-2929  
Mon.–Fri. 8:00am–5:30pm and Sat. 8:00am–3:30pm Arizona Time. [www.sdhqoffroad.com](http://www.sdhqoffroad.com)

**\*\*\*Double check all hardware is installed correctly and tight\*\*\***

**\*\*\*Re-torque ALL bolts after 100 miles\*\*\***



190 S McQueen Rd  
Ste 109 Gilbert, AZ 85233  
Phone: 480-633-2929 | Fax: 480-633-1791  
[www.sdhqoffroad.com](http://www.sdhqoffroad.com)

Follow us on:



Facebook



Instagram

For questions or help with the installation, please call SDHQ Offroad @ 480-633-2929  
Mon.–Fri. 8:00am–5:30pm and Sat. 8:00am–3:30pm Arizona Time. [www.sdhqoffroad.com](http://www.sdhqoffroad.com)