



SDHQ Motorsports
190 S McQueen Rd
Ste 109 Gilbert, AZ 85233
Phone: 480-633-2929

Product Packing List

Product: SDHQ-30-1131/1137-G4

Description: 2013-18 RAM 1500+ Switch Pros Keypad Mount

_____ (1) SDHQ Laser Cut RAM Panel

- (1) Beige Panel
- (1) Black Panel

SDHQ-30-1131-G4

SDHQ-30-1137-G4

_____ (1) SDHQ Acrylic Backer

SDHQ-30-1130-G4-A

_____ (1) SDHQ 3D Printed 9100 Bezel

SDHQ-00-1130-9100

_____ (1) SDHQ 3D Printed RCR-Force-12 Bezel

SDHQ-00-1130-RCR12

Inspected and Packaged By: _____ **Date:** _____

For questions or help with the installation, please call SDHQ Offroad @ 480-633-2929
Mon.-Fri. 8:00am-5:30pm and Sat. 8:00am-3:30pm Arizona Time. www.sdhqoffroad.com



SDHQ Motorsports
 190 S McQueen Rd
 Ste 109 Gilbert, AZ 85233
 Phone: 480-633-2929

INSTALLATION INSTRUCTIONS

Product: SDHQ-30-1131/1137-G4

Description: 2013-18 RAM 1500+ Switch Pros Keypad Mount





<u>Parts List</u>	<u>Hardware List</u>	<u>Required Tools</u>
(1) SDHQ Laser Cut RAM Panel Beige Panel <u>or</u> Black Panel (1) ¼" Acrylic Backer SDHQ-30-1130-G4-A (1) SDHQ 3D Printed 9100 Bezel SDHQ-00-1130-9100 (1) SDHQ 3D Printed RCR-Force-12 Bezel SDHQ-00-1130-RCR12	N/A	8mm Socket Panel Removal Tools
<u>Tech Notes</u>		
Fits both Switch Pros 9100/RCR-Force-12 Keypads. Does not fit with factory Brake Controller. Approx. Install Time: 30 Minutes (not including wiring)		

READ ALL INSTRUCTIONS THOROUGHLY FROM START TO FINISH BEFORE BEGINNING INSTALLATION!

For questions or help with the installation, please call SDHQ Offroad @ 480-633-2929
 Mon.–Fri. 8:00am–5:30pm and Sat. 8:00am–3:30pm Arizona Time. www.sdhqoffroad.com

Installation Instructions:

1. Unbox your parts and familiarize yourself with them.
2. **Install the Switch Pros.** Install your Switch Pros Keypad into the 3D Printed Bezel as shown below. Thread in the (4) Switch Pros threaded studs into the Keypad, RCR-Force-12 Keypad threaded stud locations shown below.

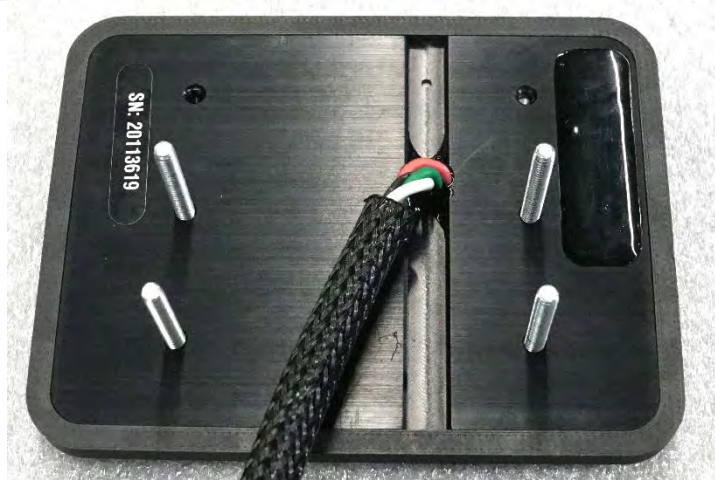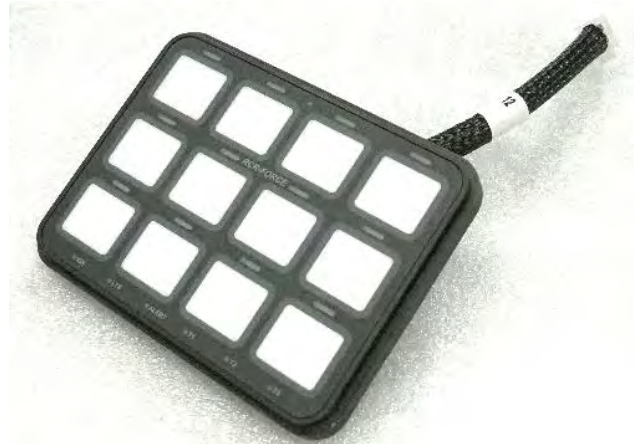

3. Align the Laser Cut Panel to the Keypad. The Keypad harness will install through the $\frac{3}{4}$ " hole. Take note of the orientation of the keypad harness wiring.

9100 Keypad Mounting



RCR-Force-12 Keypad Mounting



4. Align the Acrylic Backer on the back of the Laser Cut Panel. Thread the (4) Switch Pros nylock nuts onto the threaded studs. Tighten the nylock nuts until the Keypad stops moving on the panel. Overtightening the nylock nuts will deform the panel and make install difficult.

9100 Keypad Mounting



RCR-Force-12 Keypad Mounting



5. **Install the Keypad and Panel.** Locate the panel on the driver's side lower dash. Using a panel removal tool, remove the panel. It is recommended to wire your Switch Pros now.
6. Install the Keypad and Panel into the factory location. Installation is complete! Enjoy your new SDHQ Switch Pros Keypad Mount.

*****Double check all hardware is installed correctly and tight*****

*****Re-torque ALL bolts after 100 miles*****



190 S McQueen Rd
Ste 109 Gilbert, AZ 85233
Phone: 480-633-2929 | Fax: 480-633-1791
www.sdhqoffroad.com

Follow us on:



Facebook



Instagram

For questions or help with the installation, please call SDHQ Offroad @ 480-633-2929
Mon.–Fri. 8:00am–5:30pm and Sat. 8:00am–3:30pm Arizona Time. www.sdhqoffroad.com