



SDHQ Motorsports
190 S McQueen Rd
Ste 109 Gilbert, AZ 85233
Phone: 480-633-2929

Product Packing List

Product: SDHQ-31-1131/1135/1137/1138-G5

Description: **2019+ RAM 2500/3500 Switch Pros
Keypad Mount**

_____ (1) SDHQ Laser Cut RAM Panel

- Light Frost Beige Panel
- Indigo Panel
- Black Panel
- Brown Panel

_____ (1) SDHQ Acrylic Backer

_____ (1) SDHQ 3D Printed 9100 Bezel

_____ (1) SDHQ 3D Printed RCR-Force-12 Bezel

SDHQ-31-1131-G5

SDHQ-31-1135-G5

SDHQ-31-1137-G5

SDHQ-31-1138-G5

SDHQ-31-1130-G5-A

SDHQ-31-1130-G5-B

SDHQ-31-1130-G5-C

Inspected and Packaged By: _____ **Date:** _____

For questions or help with the installation, please call SDHQ Offroad @ 480-633-2929
Mon.-Fri. 8:00am-5:30pm and Sat. 8:00am-3:30pm Arizona Time. www.sdhqoffroad.com



SDHQ Motorsports
 190 S McQueen Rd
 Ste 109 Gilbert, AZ 85233
 Phone: 480-633-2929

INSTALLATION INSTRUCTIONS

Product: SDHQ-31-1131/1135/1137/1138-G5

Description: 2019+ RAM 2500/3500 Switch Pros
 Keypad Mount



Parts List	Hardware List	Required Tools
(1) Laser Cut RAM Panel Light Frost Beige Panel <u>or</u> Indigo Panel <u>or</u> Black Panel <u>or</u> Brown Panel <u>or</u> (1) ¼" Acrylic Backer SDHQ-31-1130-G5-A (1) SDHQ 3D Printed 9100 Bezel SDHQ-31-1130-G5-B (1) SDHQ 3D Printed RCR-Force-12 Bezel SDHQ-31-1130-G5-C	N/A	8mm Socket Panel Removal Tools Metal File
Tech Notes		
Minimal trimming required. Fits Switch Pros 9100/RCR-Force-12 Keypad. Approx. Install Time: 30 Minutes (not including wiring)		

For questions or help with the installation, please call SDHQ Offroad @ 480-633-2929
 Mon.–Fri. 8:00am–5:30pm and Sat. 8:00am–3:30pm Arizona Time. www.sdhqoffroad.com


*****READ ALL INSTRUCTIONS THOROUGHLY FROM START TO FINISH BEFORE BEGINNING INSTALLATION! *****

Installation Instructions:

1. Unbox all parts and familiarize yourself with them.
2. **Install the Switch Pros.** Install your Switch Pros Keypad into the 3D Printed Bezel as shown below. Thread in the (4) Switch Pros threaded studs into the Keypad.



3. Align the Keypad to the Laser Cut Panel. The Keypad harness will install through the 3/4" hole.

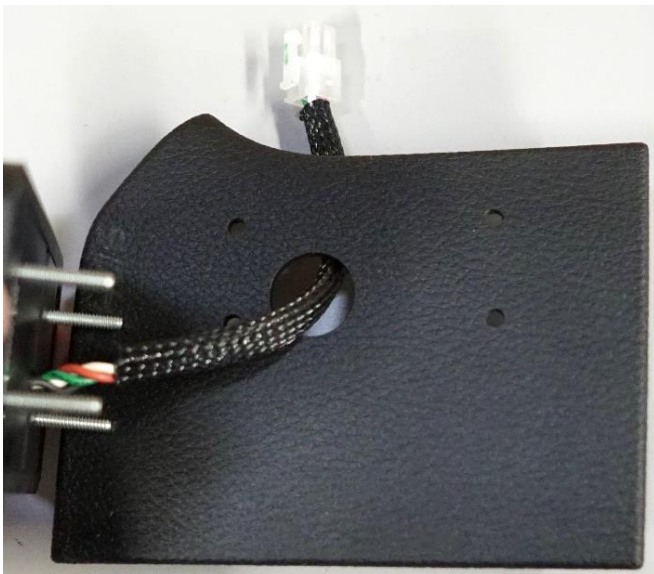


For questions or help with the installation, please call SDHQ Offroad @ 480-633-2929
Mon.–Fri. 8:00am–5:30pm and Sat. 8:00am–3:30pm Arizona Time. www.sdhqoffroad.com

4. Align the Acrylic Backer on the back of the Laser Cut Panel. The Keypad harness will install through the $\frac{3}{4}$ " hole. Thread the (4) Switch Pros nylock nuts onto the threaded studs. Tighten the nylock nuts until the Keypad stops moving on the panel. Overtightening the nylock nuts will deform the panel and make install difficult.



5. **Install the Keypad and Panel.** Locate the panel on the driver's side lower dash. Using a panel removal tool, remove the panel. Use a small file to trim the area circled in red. Trim only as much as necessary; test fit the Keypad and panel often. It is recommended to wire your Switch Pros now.

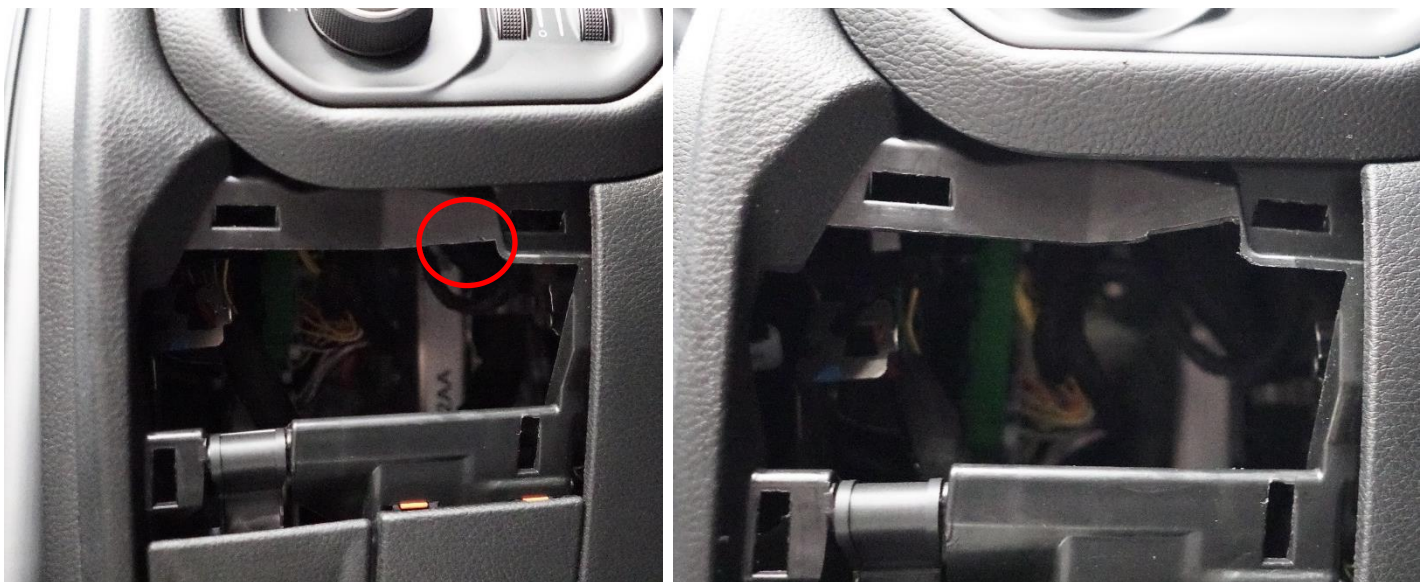

6. Install the Keypad and Panel into the factory location. Installation is complete! Enjoy your new SDHQ Switch Pros Keypad Mount.

*****Double check all hardware is installed correctly and tight*****

*****Re-torque ALL bolts after 100 miles*****



190 S McQueen Rd
Ste 109 Gilbert, AZ 85233
Phone: 480-633-2929 | Fax: 480-633-1791
www.sdhqoffroad.com

Follow us on:



Facebook



Instagram

For questions or help with the installation, please call SDHQ Offroad @ 480-633-2929
Mon.–Fri. 8:00am–5:30pm and Sat. 8:00am–3:30pm Arizona Time. www.sdhqoffroad.com