



SDHQ Motorsports
190 S McQueen Rd
Ste 109 Gilbert, AZ 85233
Phone: 480-633-2929

Product Packing List

Product: SDHQ-31-1206-G5

Description: 2019+ Ram 2500/3500 A-Pillar Light Mounts

_____ (1) Driver Side Mount

SDHQ-31-1206-G5-A

_____ (1) Passenger Side Mount

SDHQ-31-1206-G5-B

Inspected and Packaged By: _____ **Date:** _____

For questions or help with the installation, please call SDHQ Offroad @ 480-633-2929
Mon.-Fri. 8:00am-5:30pm and Sat. 8:00am-3:30pm Arizona Time. www.sdhqoffroad.com

**For questions or help with the installation, please call SDHQ Offroad @ 480-633-2929
Mon.–Fri. 8:00am–5:30pm and Sat. 8:00am–3:30pm Arizona Time. www.sdhqoffroad.com**



SDHQ Motorsports
190 S McQueen Rd
Ste 109 Gilbert, AZ 85233
Phone: 480-633-2929

INSTALLATION INSTRUCTIONS


Product: SDHQ-31-1206-G5

Description: 2019+ Ram 2500/3500 A-Pillar Light Mounts



<u>Parts List</u>	<u>Hardware List</u>	<u>Required Tools</u>
(1) Driver Side Mount SDHQ-31-1206-G5-A (1) Passenger Side Mount SDHQ-31-1206-G5-B	N/A	13mm Socket Ratchet Hood Prop Marker
<u>Tech Notes</u>		
No drilling required. Use Anti-Seize Lubricant on all Stainless Steel (S.S.) Hardware Use a hood prop and mark hood hinge outlines before removal to assist in alignment during installation. <u>NOTE: Windshield wipers CANNOT be operated with Hood open.</u> Approx. Install Time: 1 Hour		



For questions or help with the installation, please call SDHQ Offroad @ 480-633-2929
Mon.–Fri. 8:00am–5:30pm and Sat. 8:00am–3:30pm Arizona Time. www.sdhqoffroad.com

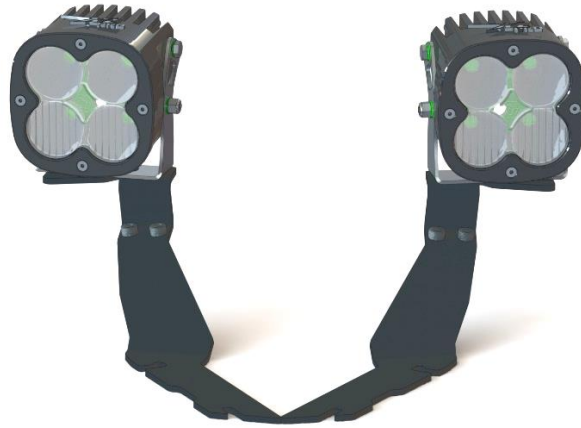

*****READ ALL INSTRUCTIONS THOROUGHLY FROM START TO FINISH BEFORE BEGINNING INSTALLATION! *****

Installation Instructions:

1. While not necessary, it is recommended that masking tape is applied to the edge of the hood, windshield, and fender where you will be working to prevent accidental paint damage.
2. Open the hood and support it with a hood prop. Starting on the driver's side with the 13mm socket and ratchet, remove the rear nut that attaches the hood to the hinge. Next, loosen the front nut while supporting the hood to prevent it from sliding down the hinge.
**** Mark hood hinge outline with a marker to assist in alignment during installation ****
3. Locate the driver side A-Pillar light mount and slide it under the hood from the windshield. The A-Pillar will go between the windshield fluid line and the hood. Slide the front slot in between the hood hinge and factory nut. Align the rear slot to the rear bolt. Tighten enough to support the mount.
4. Align the mount all the way forward and towards the outside of the vehicle. Use the outline of the paint on the hood to align it back into factory position. Tighten both nuts once the hood is aligned.
5. Repeat Steps 2-4 for the passenger side A-Pillar light mount.
6. Install lights using the top holes, secure bigger lights with the slot if applicable. Position the lights as desired and wire. Enjoy your new SDHQ A-Pillar Light Mounts!

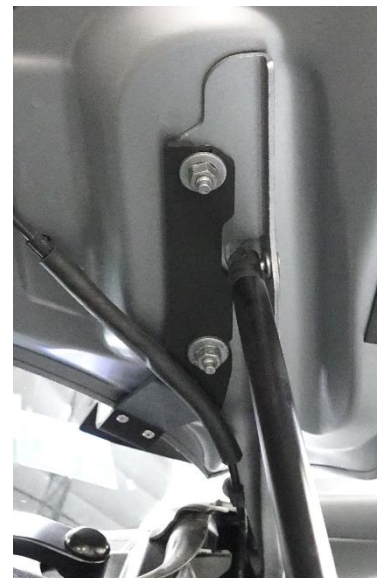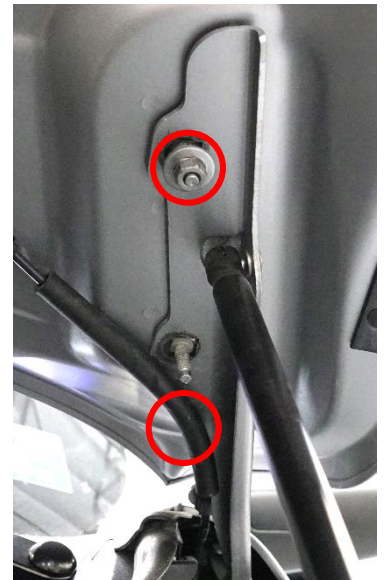

For questions or help with the installation, please call SDHQ Offroad @ 480-633-2929
Mon.–Fri. 8:00am–5:30pm and Sat. 8:00am–3:30pm Arizona Time. www.sdhqoffroad.com

*****Double check all hardware is installed correctly and tight*****

*****Re-torque ALL bolts after 100 miles*****



190 S McQueen Rd
Ste 109 Gilbert, AZ 85233
Phone: 480-633-2929 | Fax: 480-633-1791
www.sdhqoffroad.com

Follow us on:



Facebook



Instagram

For questions or help with the installation, please call SDHQ Offroad @ 480-633-2929
Mon.–Fri. 8:00am–5:30pm and Sat. 8:00am–3:30pm Arizona Time. www.sdhqoffroad.com