



SDHQ Motorsports
190 S McQueen Rd
Ste 109 Gilbert, AZ 85233
Phone: 480-633-2929

Product Packing List

Product: SDHQ-50-1206-U1

Description: **Toyota Multi-Platform A-Pillar Light Mounts**

_____ (1) Driver Side Mount	SDHQ-50-1206-U1-A
_____ (1) Passenger Side Mount	SDHQ-50-1206-U1-B
_____ (1) Hardware Package	SDHQ-50-1206-U1-C
_____ (2) 3/4" Diameter MIL-Spec Rubber Dampeners	
_____ (2) Fir-Tree Push-in Clips	

Inspected and Packaged By: _____ **Date:** _____

For questions or help with the installation, please call SDHQ Offroad @ 480-633-2929
Mon.-Fri. 8:00am-5:30pm and Sat. 8:00am-3:30pm Arizona Time. www.sdhqoffroad.com

**For questions or help with the installation, please call SDHQ Offroad @ 480-633-2929
Mon.–Fri. 8:00am–5:30pm and Sat. 8:00am–3:30pm Arizona Time. www.sdhqoffroad.com**



SDHQ Motorsports
190 S McQueen Rd
Ste 109 Gilbert, AZ 85233
Phone: 480-633-2929

INSTALLATION INSTRUCTIONS

Product: SDHQ-50-1206-U1

Description: Toyota Multi-Platform A-Pillar Light Mounts



<u>Parts List</u>	<u>Hardware List</u>	<u>Required Tools</u>
(1) Driver Side Mount SDHQ-50-1206-U1-A (1) Passenger Side Mount SDHQ-50-1206-U1-B	(2) - 3/4" Diameter Rubber Dampeners (2) - Fir-Tree Push in clips	3/8" Ratchet 12mm Socket 3/8" Wrench Masking Tape Loctite Hood Prop Marker


Tech Notes

Use a hood prop and mark the outline of hood hinges to assist in realignment during install.

- 2005-2015 **Tacoma** (slide bracket all the way back in the slot, towards the windshield)
- 2003-2009 **4-Runner** (Bolt holes use the outer edges of the slots)
- 2010+ **4-Runner** (slide bracket all the way forward in the slot, away from the windshield, may contact cowl)
- 2007-2013 **Tundra** (slide bracket all the way forward in the slot, away from the windshield)
- 2007-2021 **Sequoia** (slide bracket all the way forward in the slot, away from the windshield)
- ***Special Notes: Windshield Wipers CANNOT be operated with Hood open.**

For questions or help with the installation, please call SDHQ Offroad @ 480-633-2929
Mon.-Fri. 8:00am-5:30pm and Sat. 8:00am-3:30pm Arizona Time. www.sdhqoffroad.com

Driver Side Shown

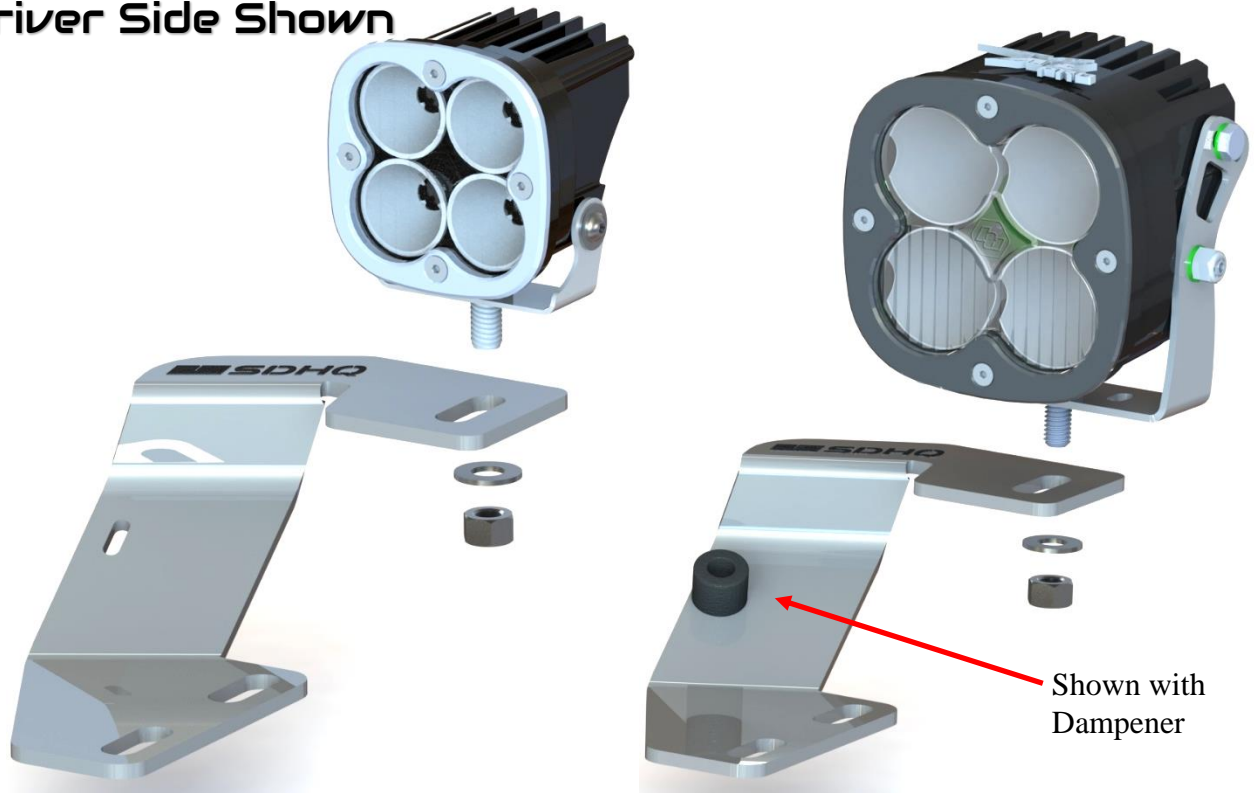


READ ALL INSTRUCTIONS THOROUGHLY FROM START TO FINISH BEFORE BEGINNING INSTALLATION!

Installation Instructions:

1. Open the hood on your vehicle. Using masking tape, tape off the area that you will be working to prevent any scratches during install.
2. Attach Rubber Dampener to mount using supplied push-in clip, the clip goes through the bottom of the mount and locates/holds the dampener in place. When installing mount, position bumper so that it is best utilized for vibration dampening. (Note: dampener will not work for 4-Runners)
3. Starting on the driver side with your ratchet and 12mm socket, remove the front bolt attaching the hood to the hinge. Next loosen but do not remove the rear bolt. Position your driver side bracket over the hood hinge aligning the front mounting hole while the rear of the mount is angled away allowing access to the rear bolt, insert the front bolt through the bracket and thread in a couple turns into the hood.
4. While supporting the hood remove the rear bolt, insert bolt through the rear hole of the mount and thread into the hood. Align the mount in the slots according to the guide on page 3 in the Tech Notes section. Tighten down bolts while aligning hinge with paint outline of previous location on hood. **** Mark the outline of the hood hinge to assist in alignment during installation****
5. Repeat Steps 1-4 for the Passenger Side. Install your lights and enjoy!

For questions or help with the installation, please call SDHQ Offroad @ 480-633-2929
Mon.-Fri. 8:00am-5:30pm and Sat. 8:00am-3:30pm Arizona Time. www.sdhqoffroad.com

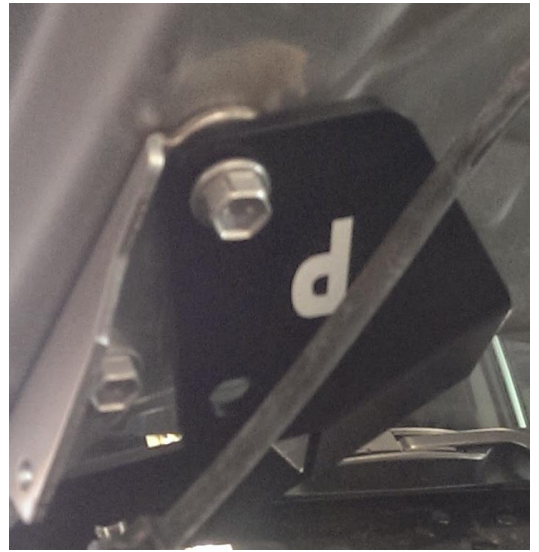

For questions or help with the installation, please call SDHQ Offroad @ 480-633-2929
Mon.-Fri. 8:00am-5:30pm and Sat. 8:00am-3:30pm Arizona Time. www.sdhqoffroad.com

*****Double check all hardware is installed correctly and tight*****

*****Re-torque ALL bolts after 100 miles*****



190 S McQueen Rd
Ste 109 Gilbert, AZ 85233
Phone: 480-633-2929 | Fax: 480-633-1791
www.sdhqoffroad.com

Follow us on:



Facebook



Instagram

For questions or help with the installation, please call SDHQ Offroad @ 480-633-2929
Mon.–Fri. 8:00am–5:30pm and Sat. 8:00am–3:30pm Arizona Time. www.sdhqoffroad.com