



**SDHQ Motorsports**  
**190 S McQueen Rd**  
**Ste 109 Gilbert, AZ 85233**  
**Phone: 480-633-2929**

---

## Product Packing List

**Product:** SDHQ-53-1138-G3(-SOS)

**Description:** **2014-21 Tundra Switch Pros 9100 Overhead Keypad Mount**

- \_\_\_\_\_ (1) SDHQ Tundra Switch Pros 9100 OH Keypad Mount
  - Without SOS button SDHQ-53-1138-G3
  - With SOS button SDHQ-53-1138-G3-SOS
- \_\_\_\_\_ (1) SDHQ Touch 8 Cover
- \_\_\_\_\_ (1) Hardware Package SDHQ-53-1138-G3-HP
- \_\_\_\_\_ (4) #6 - 32 x 3/16" S.S. Button Head Bolts

**Inspected and Packaged By:** \_\_\_\_\_ **Date:** \_\_\_\_\_

For questions or help with the installation, please call SDHQ Offroad @ 480-633-2929  
Mon.-Fri. 8:00am-5:30pm and Sat. 8:00am-3:30pm Arizona Time. [www.sdhqoffroad.com](http://www.sdhqoffroad.com)

**For questions or help with the installation, please call SDHQ Offroad @ 480-633-2929  
Mon.–Fri. 8:00am–5:30pm and Sat. 8:00am–3:30pm Arizona Time. [www.sdhqoffroad.com](http://www.sdhqoffroad.com)**



SDHQ Motorsports  
 190 S McQueen Rd  
 Ste 109 Gilbert, AZ 85233  
 Phone: 480-633-2929

## INSTALLATION INSTRUCTIONS

**Product:** SDHQ-53-1138-G3(-SOS)


**Description:** 2014-21 Tundra Switch Pros 9100 Overhead Keypad Mount



<u>Parts List</u>	<u>Hardware List</u>	<u>Required Tools</u>
(1) SDHQ Tundra Switch Pros OH Keypad Mount <ul style="list-style-type: none"> <li>○ Without SOS      SDHQ-53-1138-G3</li> <li>○ With SOS         SDHQ-53-1138-G3-SOS</li> </ul> (1) SDHQ Touch 8 Cover (1) Hardware Package SDHQ-53-1139-G3-HP	(4) #6 – 32 x 3/16” S.S. Button Head Bolts	Plastic Panel Remover 5/64” Hex Drive Thread Locker (Medium)

### Tech Notes

SDHQ-53-1138-G3(-SOS) panel only fits the 2014-21 Tundra **without** a sunroof.  
 \*\*Approx install time = 30 Minutes (not including wiring)\*\*

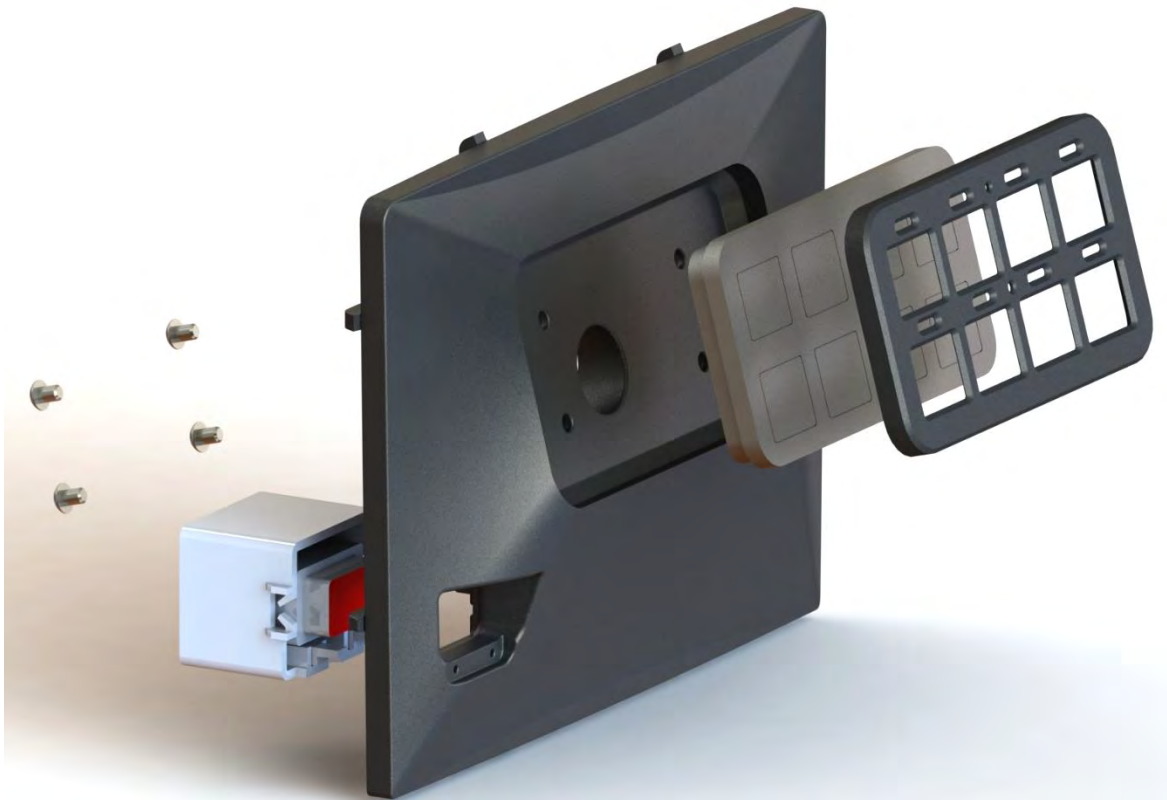


## **Installation Instructions:**

1. Unbox your SDHQ Tundra Switch Pros 9100 Overhead Keypad Mount and hardware.
2. **Remove the factory overhead panel.** Using a plastic panel removal tool, remove the square plastic panel. Pry along the edges of the panel, being careful not to scratch the plastic. If applicable, disconnect the SOS button from the wiring and then remove it from the panel.



For questions or help with the installation, please call SDHQ Offroad @ 480-633-2929  
Mon.–Fri. 8:00am–5:30pm and Sat. 8:00am–3:30pm Arizona Time. [www.sdhqoffroad.com](http://www.sdhqoffroad.com)

- 3. Installing the Keypad.** Place the SDHQ Touch 8 Cover onto the 9100 Keypad. Feed the wire harness through the center hole in the SDHQ Overhead Keypad Mount and insert the Keypad. Secure the Keypad with the supplied (4) #6 Button Head Bolts and thread locker. Install the SOS button as pictured, if applicable.

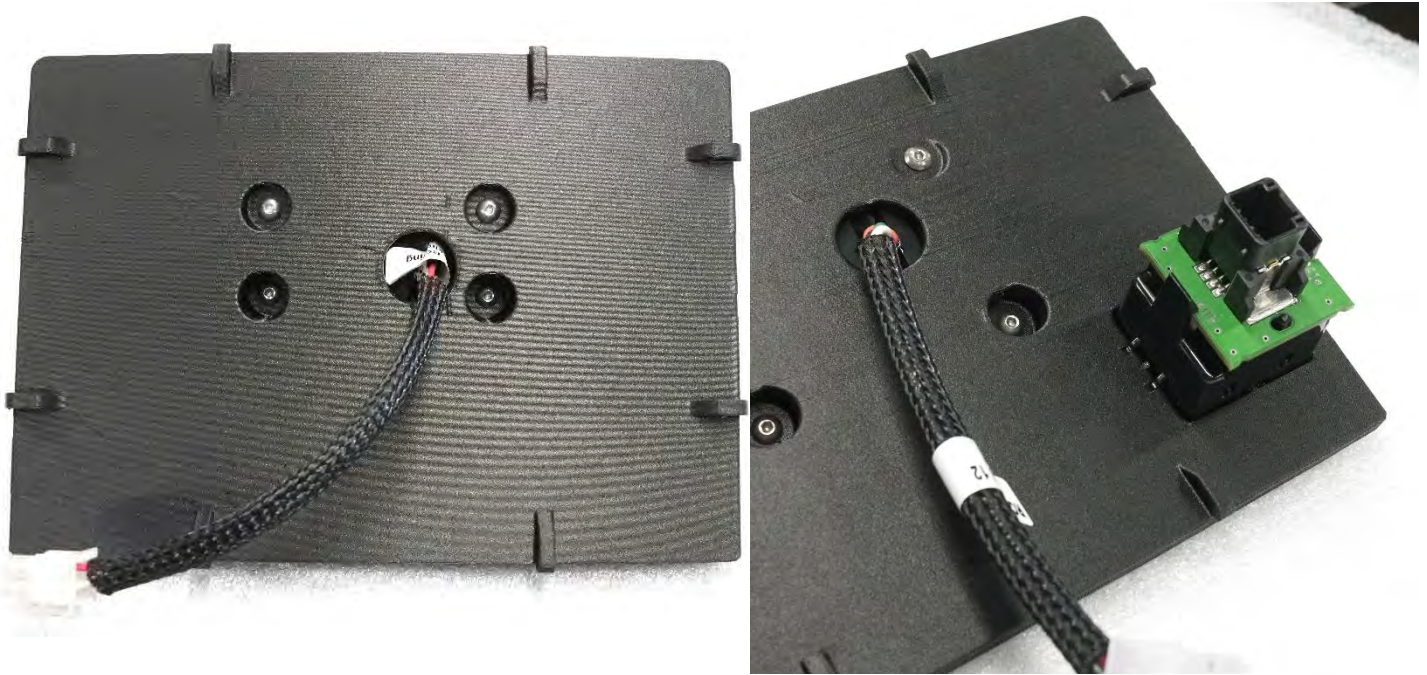

- 4.** Once finished and wiring has been ran, install the panel in the reverse order as removed. The new panel is a tight fit, it may help to use your panel removal tool to guide the edges in place. Enjoy your new SDHQ Built Switch Pros 9100 Overhead Console Mount!



**\*\*\*Double check all hardware is installed correctly and tight\*\*\***

**\*\*\*Re-torque ALL bolts after 100 miles\*\*\***



190 S McQueen Rd  
Ste 109 Gilbert, AZ 85233  
Phone: 480-633-2929 | Fax: 480-633-1791  
[www.sdhqoffroad.com](http://www.sdhqoffroad.com)

Follow us on:



Facebook



Instagram

For questions or help with the installation, please call SDHQ Offroad @ 480-633-2929  
Mon.–Fri. 8:00am–5:30pm and Sat. 8:00am–3:30pm Arizona Time. [www.sdhqoffroad.com](http://www.sdhqoffroad.com)