



SDHQ Motorsports
190 S McQueen Rd
Ste 109 Gilbert, AZ 85233
Phone: 480-633-2929

Product Packing List

Product: *SDHQ-70-1130/1131-G3*

Description: Gen 3 Silverado/Sierra Switch Pros Center Console Keypad Mount 2014-2018 1500, 2015-2020 2500/3500

_____ (1) Laser Cut Center Console Panel

- With 110 Volt Outlet
- Without 110 Volt Outlet

SDHQ-70-1130-G3

SDHQ-70-1131-G3

Inspected and Packaged by: _____ Date: _____

For questions or help with the installation, please call SDHQ Offroad @ 480-633-2929
Mon.-Fri. 8:00am-5:30pm and Sat. 8:00am-3:30pm Arizona Time. www.sdhqoffroad.com



SDHQ Motorsports
 190 S McQueen Rd
 Ste 109 Gilbert, AZ 85233
 Phone: 480-633-2929

INSTALLATION INSTRUCTIONS

Product: SDHQ-70-1130/1131-G3

Description: Gen 3 Silverado/Sierra Switch Pros Center Console Keypad Mount 2014-2018 1500, 2015-2020 2500/3500



<u>Parts List</u>	<u>Hardware List</u>	<u>Required Tools</u>
(1) Laser Cut Center Console Panel <ul style="list-style-type: none"> ○ With 110V Outlet SDHQ-70-1130-G3 ○ Without 110V Outlet SDHQ-70-1131-G3 	N/A	8mm socket T20 Torx Bit Panel Removal Tools

Tech Notes

Fits 2014-2018 GM 1500, 2015-2020 GM 2500/3500 with center console.
 If 12v ports are equipped, they will be forfeited unless relocated.
 Instructions are shown with 110V outlet.

****Approx. Install Time: 1 hour (Not including wiring)**

For questions or help with the installation, please call SDHQ Offroad @ 480-633-2929
 Mon.–Fri. 8:00am–5:30pm and Sat. 8:00am–3:30pm Arizona Time. www.sdhqoffroad.com


*****READ ALL INSTRUCTIONS THOROUGHLY FROM START TO FINISH BEFORE BEGINNING INSTALLATION! *****

Installation Instructions:

1. Unbox all of your parts and familiarize yourself with them.
2. **Preparing your Truck.** Remove the cup holders in the center console by pushing forward and then pulling up. Next, open the center console box to remove the main center console panel. Push the circled area below forward and up to pull off the panel.



3. Unscrew the (7) bolts circled in red holding the panel in place with the T20 Torx. Remove the 120v and USB ports (if equipped) from the factory panel. Do so by compressing the clips and pushing out towards the front of the panel. Install them in the new SDHQ provided panel. If 12 volt plugs are equipped, they will be forfeited unless relocated.

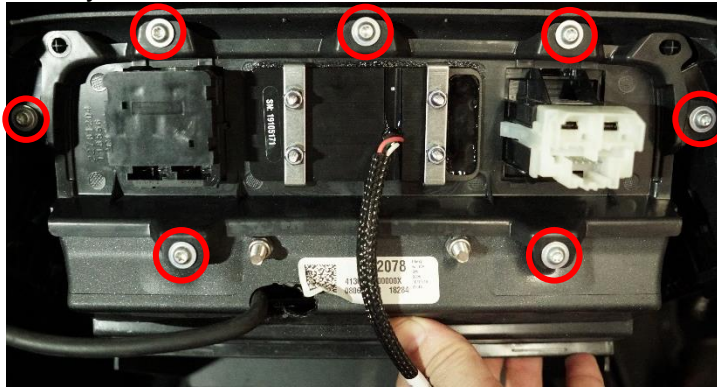

4. **Mounting the Switch Pros Keypad.** Put the Switch Pros Keypad through the back of the SDHQ provided panel. Flip the assembly over and thread the (4) Switch Pros provided studs into the back of the Switch Pros Keypad by hand. Do not over tighten as the keypad is prone to stripping. Place the (2) Switch Pros Provided backing reinforcements over the studs and tighten the (4) Switch Pros provided nuts by hand with an 8mm socket.



For questions or help with the installation, please call SDHQ Offroad @ 480-633-2929
Mon.–Fri. 8:00am–5:30pm and Sat. 8:00am–3:30pm Arizona Time. www.sdhqoffroad.com

5. Continue wiring the Switch Pros as desired.
6. Reinstall the new panel following steps 2 and 3 in reverse order.
7. Enjoy your SDHQ mounted Switch Pros Keypad!

*****Double check all hardware is installed correctly and tight*****

*****Re-torque ALL bolts after 100 miles*****



190 S McQueen Rd
Ste 109 Gilbert, AZ 85233
Phone: 480-633-2929 | Fax: 480-633-1791
www.sdhqoffroad.com

Follow us on:



Facebook



Instagram

For questions or help with the installation, please call SDHQ Offroad @ 480-633-2929
Mon.–Fri. 8:00am–5:30pm and Sat. 8:00am–3:30pm Arizona Time. www.sdhqoffroad.com