



SDHQ Motorsports
190 S McQueen Rd
Ste 109 Gilbert, AZ 85233
www.SDHQoffroad.com

Product Packing List

Product: ***SDHQ-70-1141-G4***

Description: **2019-2023 Chevy/GMC 1500 (excluding 1500 LD), 2020-2023 Chevy/GMC 2500/3500 Switch Pros PMM**

_____ (1) SDHQ Switch Pros PMM

SDHQ-70-1141-G4-A

_____ (1) Hardware Package

SDHQ-70-1141-G4-HP


_____ (2) 1/4"-20 x 3/4" S.S. Button Head Flange Bolts

_____ (2) 1/4"-20 S.S. Nylock Flange Nuts

Inspected and Packaged By: _____ Date: _____

For questions or help with the installation, please email help@sdhqoffroad.com
Store front hours: Mon. – Fri. 8:00am – 5:30pm and Sat. 9:00am – 2:00pm Arizona Time.

¼"-20 Hardware, with proper positioning of the PMM in relation to the cowl.

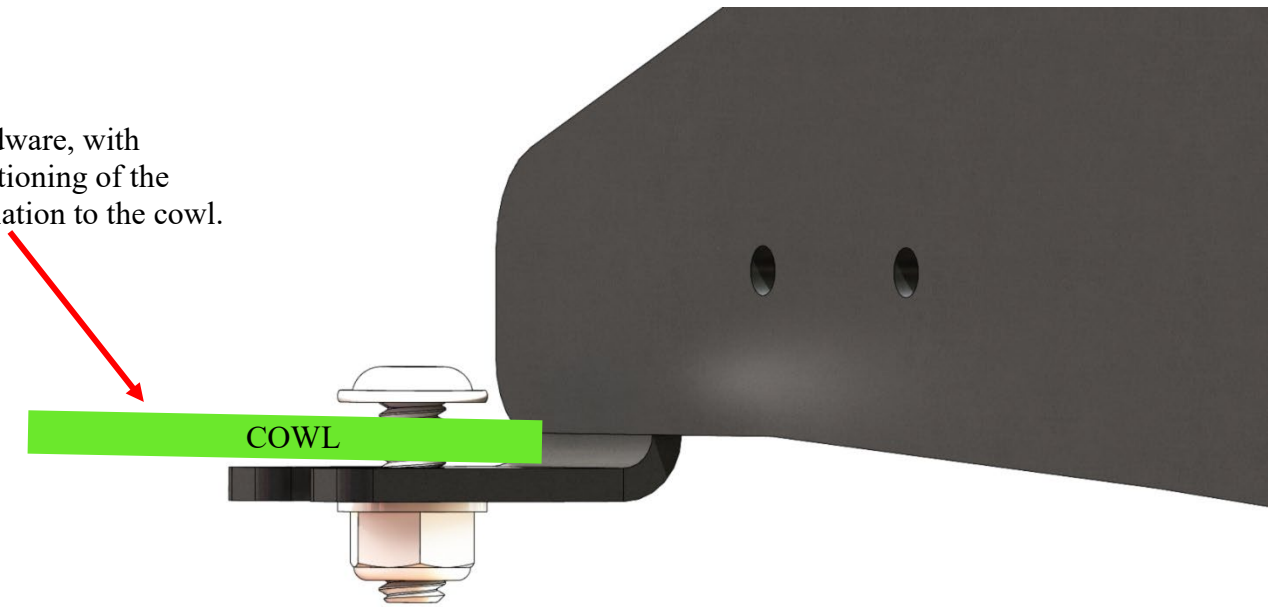



SDHQ Motorsports
 190 S McQueen Rd
 Ste 109 Gilbert, AZ 85233
www.SDHQoffroad.com

INSTALLATION INSTRUCTIONS

Product: SDHQ-70-1141-G4

Description: 2019-Current Chevy/GMC 1500, 2020-Current Chevy/GMC 2500/3500 Switch Pros PMM




Parts List	Hardware List	Required Tools
(1) SDHQ Switch Pros PMM SDHQ-70-1141-G4-A (1) Hardware Package SDHQ-70-1141-G4-HP	(2) 1/4" - 20 x 3/4" S.S. Button Head Flange Bolts (2) 1/4" - 20 S.S. Nylock Flange Nuts	5/32" Allen Key 7/16" End Wrench Panel Removal Tool
Tech Notes		
Approx. Install Time: <1 Hour (Not including wiring)		

READ ALL INSTRUCTIONS THOROUGHLY FROM START TO FINISH BEFORE BEGINNING INSTALLATION!

For questions or help with the installation, please email help@sdhqoffroad.com
 Store front hours: Mon. – Fri. 8:00am – 5:30pm and Sat. 9:00am – 2:00pm Arizona Time.

Installation Instructions:

1. Unbox and familiarize yourself with your SDHQ Power Module Mount. Check that all hardware is present before continuing.
2. Open the hood and remove the (2) push-in pins in the cowl on the passenger side, shown below. Using a flat head screwdriver pop the center pin up releasing the main clip from the cowl. If needed remove the cowl foam to make install easier.
3. Loosely install the hardware in the cowl. Flange head bolts will install on the top with nuts on the bottom. Leave these loose to allow for the PMM to slide under the cowl.
4. Mount your Switch Pros Power Module using Switch Pros hardware. The second hole will be used for RCR12 power modules.
5. Slide Mount under the cowl over the flange nut and tighten hardware.
6. Wire up and enjoy your SDHQ Built Switch Pros Power Module Mount!

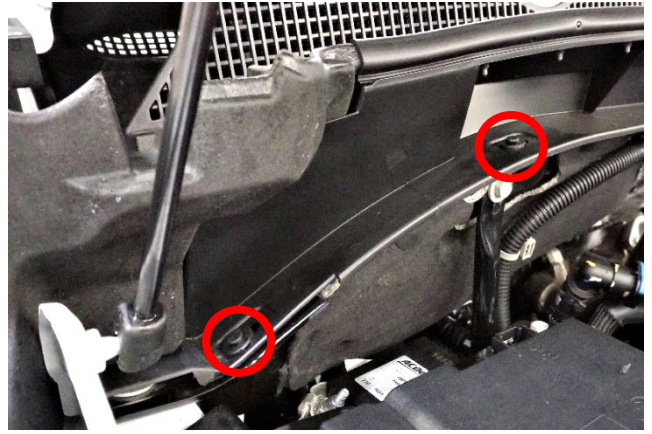

For questions or help with the installation, please email help@sdhqoffroad.com
Store front hours: Mon. – Fri. 8:00am – 5:30pm and Sat. 9:00am – 2:00pm Arizona Time.

Wiring:

Once the Switch-Pros power module is mounted, but BEFORE it is connected to anything else, do the following:

1. Reinstall battery (if battery was removed during installation), and secure factory connections. Start vehicle and confirm that battery is properly installed, connected and grounded.
2. Connect the Switch-Pros Ground wire lug to the negative terminal on the battery (grounding elsewhere will not properly filter noise and will void your product warranty).
3. Plug the 16-pin harness into the power module; be sure it locks in.
4. Connect the red Battery Cable to the positive terminal on the battery. Tighten down both ends, to prevent lug from rotating and possibly causing friction or spark.
5. **Enjoy your SDHQ mounted Switch Pros Power Module!**

*****Double check all hardware is installed correctly and tight*****

*****Re-torque ALL bolts after 100 miles*****



190 S McQueen Rd
Ste 109 Gilbert, AZ 85233
www.sdhqoffroad.com

Follow us on:



Facebook



Instagram

For questions or help with the installation, please email help@sdhqoffroad.com
Store front hours: Mon. – Fri. 8:00am – 5:30pm and Sat. 9:00am – 2:00pm Arizona Time.