



**SDHQ Motorsports**  
**190 S McQueen Rd**  
**Ste 109 Gilbert, AZ 85233**  
**Phone: 480-633-2929**

---

## Product Packing List

**Product:** SDHQ-79-1204-S4/SDHQ-79-1224-S4-B/BC/C

**Description:** 2020+ GMC Sierra 2500/3500 Fog Light Kit

_____ (1) Driver Side Fog Light Mount	SDHQ-79-1204-S4-A
_____ (1) Passenger Side Fog Light Mount	SDHQ-79-1204-S4-B

**OPTIONAL (Purchased Separately)**

_____ (1) Black Bezel/Black Trim Ring	SDHQ-79-1224-S4-B
_____ (1) Black Bezel/Black Chrome Trim Ring	SDHQ-79-1224-S4-BC
_____ (1) Black Bezel/Chrome Trim Ring	SDHQ-79-1224-S4-C

**Inspected and Packaged By:** \_\_\_\_\_ **Date:** \_\_\_\_\_

For questions or help with the installation, please call SDHQ Offroad @ 480-633-2929  
Mon.-Fri. 8:00am-5:30pm and Sat. 8:00am-3:30pm Arizona Time. [www.sdhqoffroad.com](http://www.sdhqoffroad.com)





SDHQ Motorsports  
 190 S McQueen Rd  
 Ste 109 Gilbert, AZ 85233  
 Phone: 480-633-2929

## INSTALLATION INSTRUCTIONS

**Product:** SDHQ-79-1204-S4/SDHQ-79-1224-S4-B/BC/C

**Description:** 2020+ GMC Sierra 2500/3500 Fog Light Kit




<u>Parts List</u>	<u>Hardware List</u>	<u>Required Tools</u>
(1) Driver Side Fog Light Mount SDHQ-79-1204-S4-B (1) Passenger Side Fog Light Mount SDHQ-79-1204-S4-B ----- OPTIONAL: (Purchased Separately) (1) Black Bezel/Black Trim Ring SDHQ-79-1224-S4-B (1) Black Bezel/Black Chrome Trim Ring SDHQ-79-1224-S4-BC (1) Black Bezel/Chrome Trim Ring SDHQ-79-1224-S4-C	N/A	Ratchet 14mm Socket 18mm Socket 5/32" Allen Wrench 9/16" Wrench

### Tech Notes

Designed for vehicles with Factory Fog Lights.  
 Replacement Fog Light Bezel and Trim Rings required for vehicles without Factory Fog Lights.  
 Install Instructions show Black Bezel/Chrome Trim Ring (SDHQ-79-1224-S4-C)  
 Trimming the black plastic bezel is optional.  
 Baja Design Squadrons **SOLD SEPARATELY**  
**Approx. Install Time: 1 Hour**

For questions or help with the installation, please call SDHQ Offroad @ 480-633-2929  
 Mon.–Fri. 8:00am–5:30pm and Sat. 8:00am–3:30pm Arizona Time. [www.sdhqoffroad.com](http://www.sdhqoffroad.com)


Driver Side Mount Shown

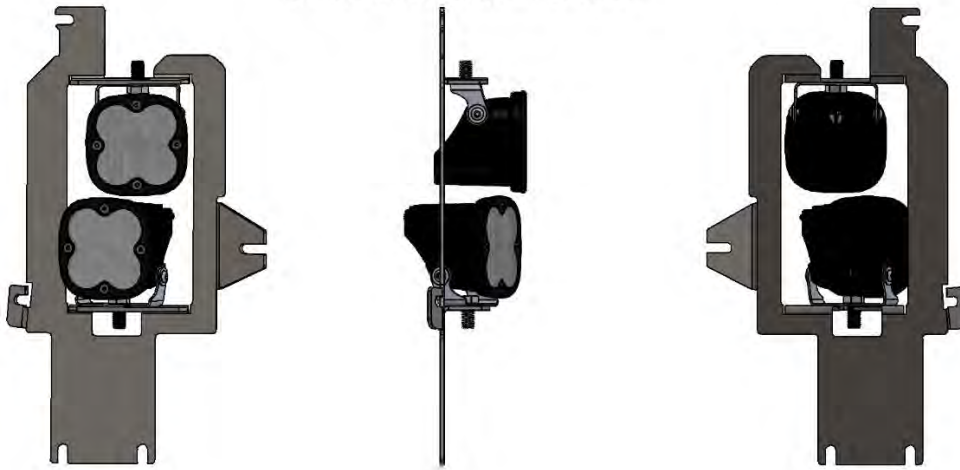

\*\*\*READ ALL INSTRUCTIONS THOROUGHLY FROM START TO FINISH BEFORE BEGINNING INSTALLATION! \*\*\*

### **Installation Instructions:**


1. Unbox your SDHQ Fog Light Mounts and, check both of the parts. Familiarize yourself with the parts and diagrams above.
2. **Removing the factory bumper:** Prepare a protective surface to set the bumper on. To remove the bumper, start underneath and use an 18mm socket to loosen the (2) tow hook bolts, but do not remove them. Next, remove the (2) 18mm bolts under the bumper that are shown below on the bottom left photo. Next, move to the top of the bumper and remove the (2) 18mm bolts. One bolt is clearly visible and the other is lower into the frame shown in the bottom right photo. Do the same for all (6) bolts on the passenger side. Unplug Fog lights then carefully remove front bumper from truck and place it on the protective surface.

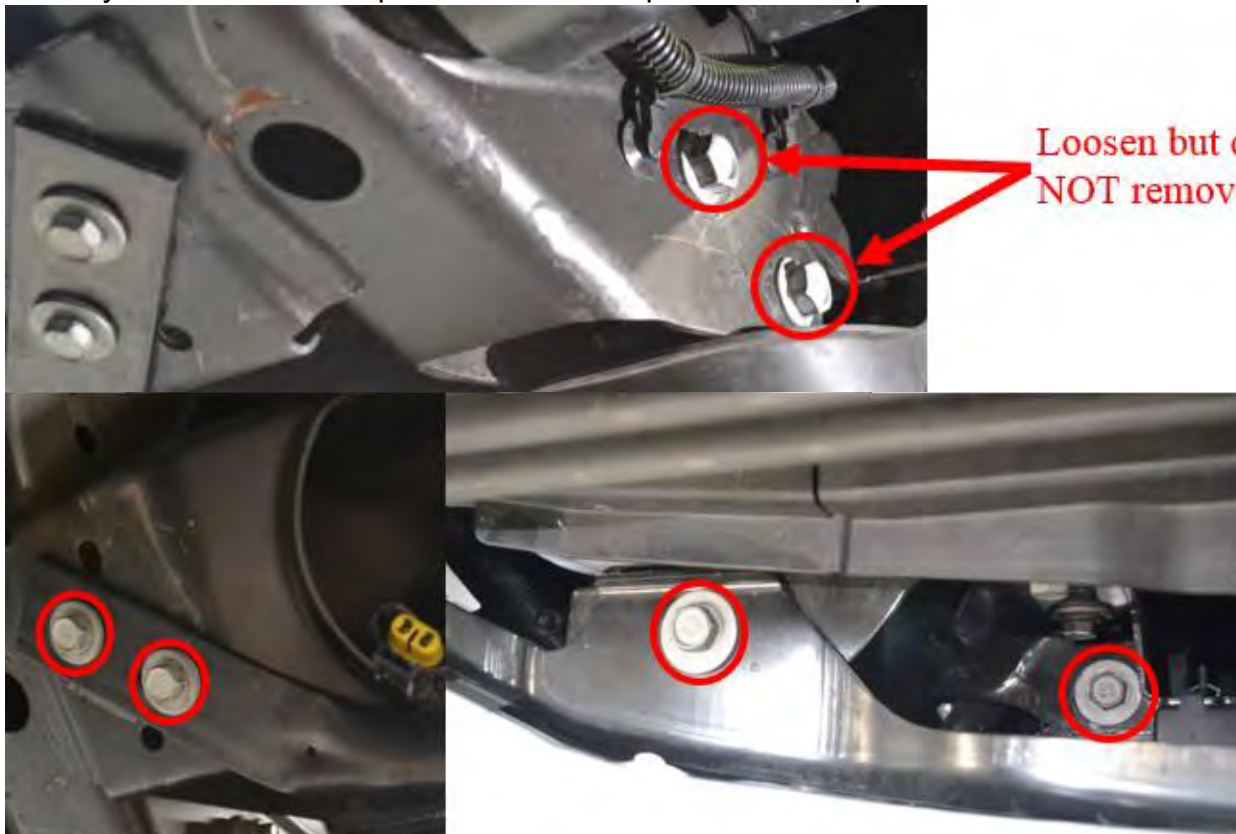

For questions or help with the installation, please call SDHQ Offroad @ 480-633-2929  
Mon.-Fri. 8:00am-5:30pm and Sat. 8:00am-3:30pm Arizona Time. [www.sdhqoffroad.com](http://www.sdhqoffroad.com)




3. Starting on the driver side, uninstall the factory bumper mounting brackets using a 14mm socket. Remove the (6) 14mm bolts that are circled below, then remove the same (6) 14mm bolts on the passenger side.

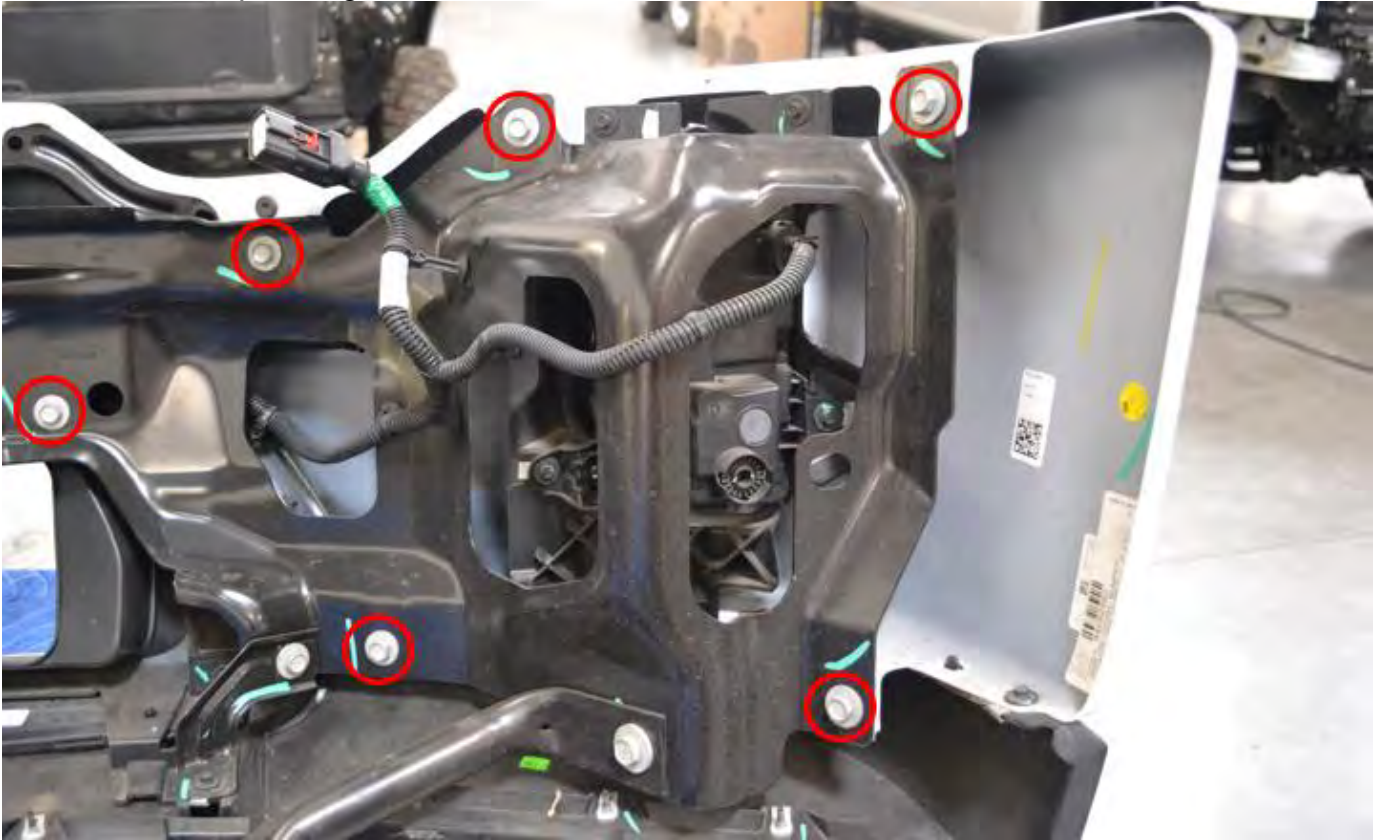

4. Uninstall the (3) 14mm bolts on the driver and passenger factory fog lights. If your vehicle did not come with Factory Fog Lights, remove the faux Fog Light Bezel and install the replacement Bezel/Trim Ring before proceeding.



5. **Preparing the lights.** Open the Baja Design Squadron Kit and prepare the lights for install. Do not install the SDHQ Fog Light Mounts into the bumper until all lights are installed into the mounts. Refer to the Baja Design instructions as necessary, orientate the Baja Design brackets as shown below.

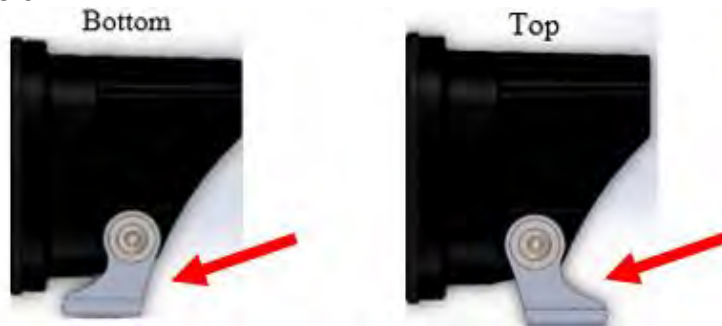

6. **Installing the lights.** First, mount the Top light in the SDHQ Fog Light Mount upside down. The bottom mount will slide in the lower slot after. Do NOT tighten the Baja Design Brackets down in the SDHQ Fog Light Mount until desired angles are set up. It is optional to trim the black plastic bezel to help fitment as shown below.



7. Install SDHQ Fog Light Mount onto bumper using the 14mm factory bolts loosen the bottom two bolts as necessary. Repeat for the passenger side fog light mount.





8. Reinstall factory bumper mounting brackets on the driver and passenger side using the same 14mm factory bolts that were removed. Tighten all (12) 14mm bolts and give the lights and bumper an overall look to ensure it is how you want it, make adjustments as necessary.



9. **Install the bumper** Mount the bumper onto your truck and bolt it back on using the same (8) 18mm factory bolts. Don't forget to tighten the (4) 18mm tow hook bolts that were originally loosened.

10. Wire the Baja Design Fog Lights in and enjoy your SDHQ fog lights!



**\*\*\*Double check all hardware is installed correctly and tight\*\*\***

**\*\*\*Re-torque ALL bolts after 100 miles\*\*\***



190 S McQueen Rd  
Ste 109 Gilbert, AZ 85233  
Phone: 480-633-2929 | Fax: 480-633-1791  
[www.sdhqoffroad.com](http://www.sdhqoffroad.com)

Follow us on:



Facebook



Instagram

For questions or help with the installation, please call SDHQ Offroad @ 480-633-2929  
Mon.–Fri. 8:00am–5:30pm and Sat. 8:00am–3:30pm Arizona Time. [www.sdhqoffroad.com](http://www.sdhqoffroad.com)