

OE 35-2 4x7

No-till Attachment

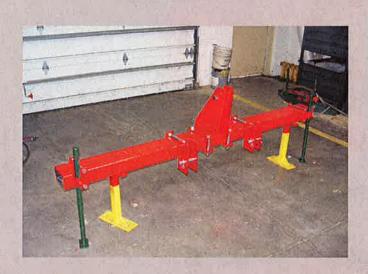


1. Mount the 3-point hitch and the pipe stands to the 4x7 toolbar.

 Mount the angle iron brackets to the 4x7 and 4x4 toolbars.
Place them where they will not interfere with the planter unit mounting. This will depend on your row spacing.

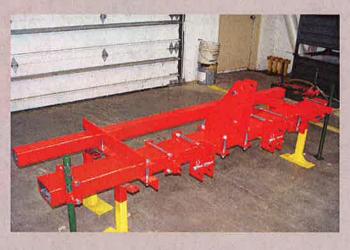




3. At the row centers, mount the No-till bracket to the 4x4 toolbar. If this is for a 5000 series transplanter, the unit hitch must also be mounted with the No-till bracket.

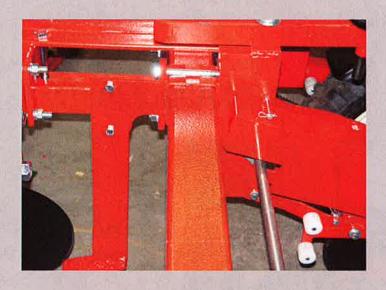

4. Attach the No-till tooth to the bracket.

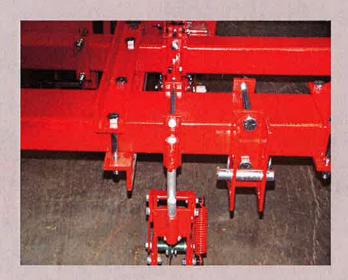

5. Mount the swivel coulter to the 4x7 toolbar so that it lines up with the center of the No-till tooth.

Mechanical Transplanter Company

1150 Central Avenue Holland, MI 49423 Ph. 616-396-8738 or 800-757-5268

e-mail: mtc@mechanicaltransplanter.com