



EDGE Modular Corner Chair

Assembly Instructions

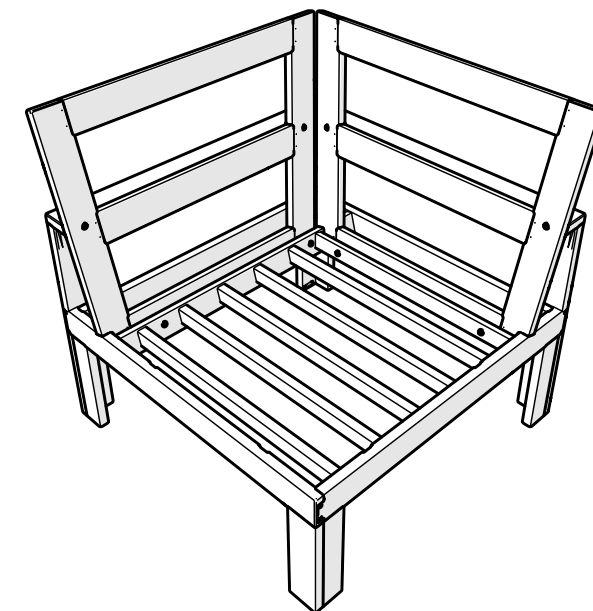


4604X

TOOLS

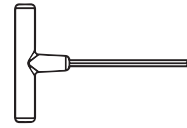

4mm T-handle
hex key (included)

PARTS

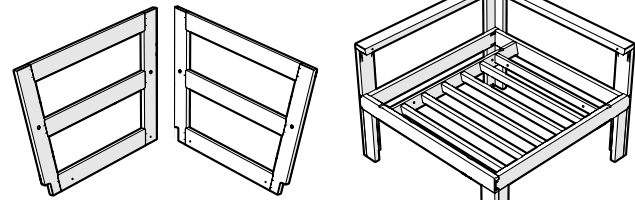


4604
LEFT
BACK


4604
RIGHT
BACK

4604
BASE


1

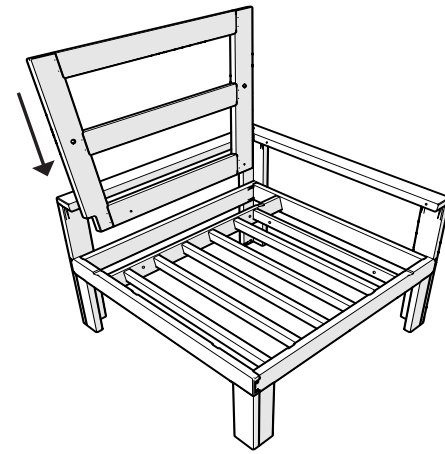


2

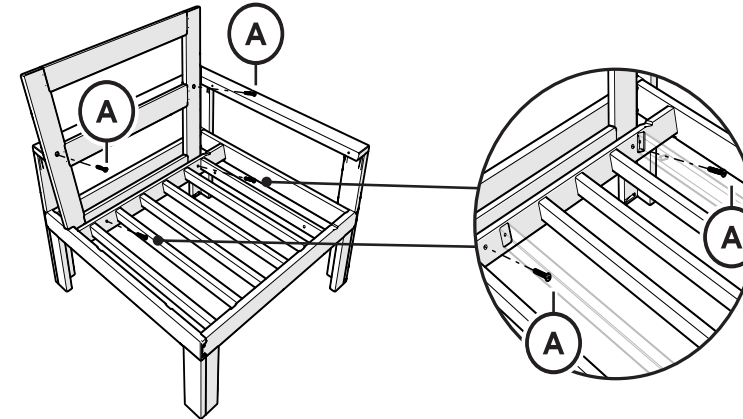


3

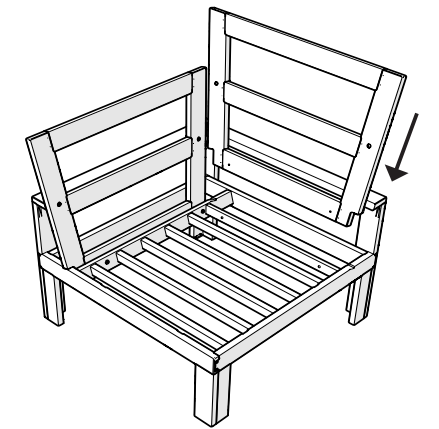


4

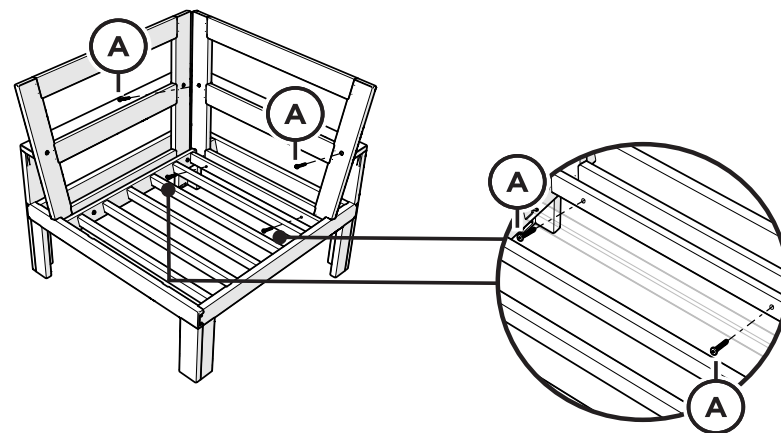

A x8




1.75" Screw — H.27X1.75

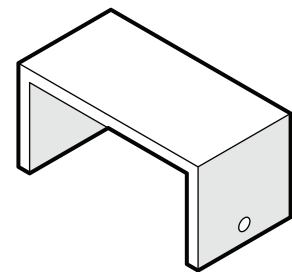


x2

Bracket — P13275-XX

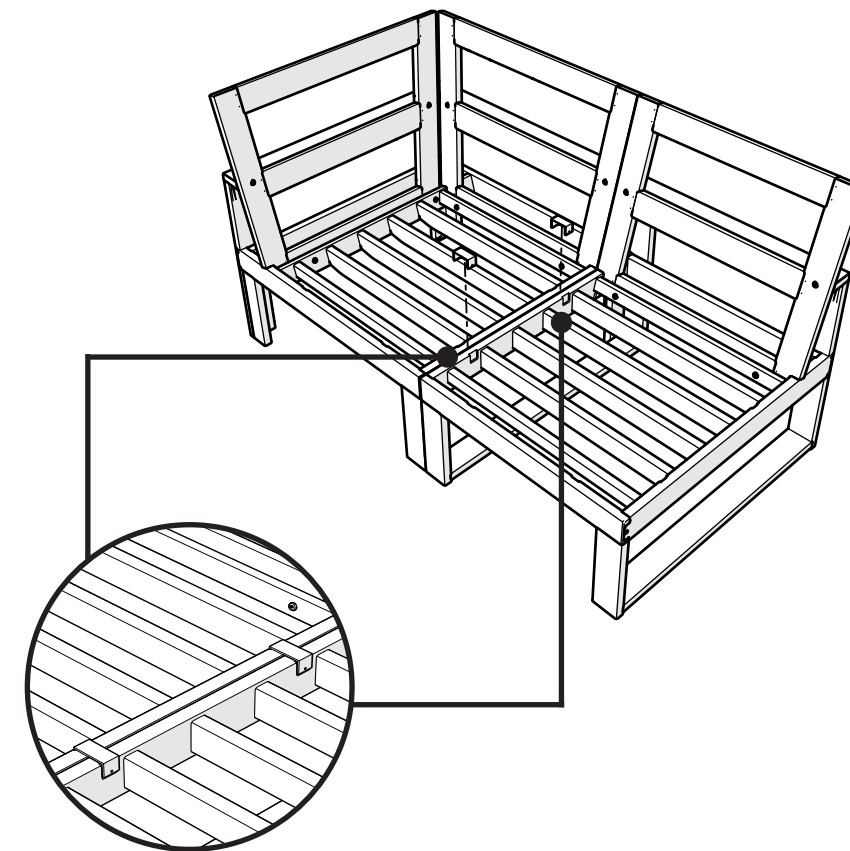

Brackets can be used to
connect furniture together

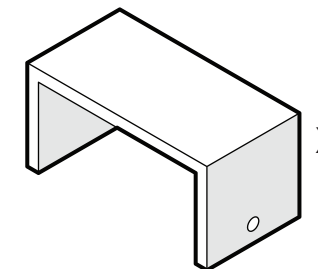

x2

Bracket — P13275-XX