



*contents/description*

- **Easy assembly**
- **Houses up to 20 Chickens**
- **Featuring:**
  - 3 Screened Windows
  - 6 Nesting boxes
  - 2 Vents
  - 2 Roosts
- **Size: 98" L. x 60" W. x 72-1/2" H.**
- **Sits off the ground**
- **Built by Amish-trained craftsmen**
- **One year warranty**

# **X-LARGE OverEZ Chicken Coop**

*Instruction Manual*

SKU# XLOEXCKCP

*happy*  
**with our product?**

Please help us spread the word  
by leaving a review at:  
[www.OverEZchickencoop.com](http://www.OverEZchickencoop.com)



**OverEZ**  
**Chicken Coop**®

Made in the U.S.A.

*for more information about all our products visit:* [www.OverEZchickencoop.com](http://www.OverEZchickencoop.com)

Please note: Actual product may differ slightly from instructional illustrations.



### step one

Place FLOOR in desired location.

Note: X-large floor comes in two separate pieces. Start with the piece that has 4 legs. Once you slide them together, drill the two screws in the floor board.

Important: Floor must be level in both directions.

Find the bag with drill bits, keys, and touch up paint (to repair any marks on pre-painted surfaces).



### step two

Place BACK WALL (A1), making sure wall is tight against floor and ends of wall line up with marks provided on floor.

Drive 4 pre-started screws on the bottom.

Once you have the first wall up, align the second back wall (A2), with the first and drill the screws into the floor and in the middle beams.



### step three

Place CHICKEN DOOR GABLE WALL (B).

Siding from BACK WALL will slide into cavity provided. Make sure wall is tight against floor.

Drive 3 pre-started screws on corners, then drive 4 pre-started screws into floor.



### step four

Place FRONT WALL (C1) and (C2), making sure wall is tight against lower support wall.

Slide the FIRST FRONT (C1), wall into the GABLE WALL. Make sure that the bottom of the nesting box lines up with the coop floor. Screw in FIRST WALL (C1) to the bottom of the coop. Slide SECOND FRONT (C2) wall into the FIRST FRONT wall.

Once you have the SECOND FRONT (C2) wall into place, SCREW the TWO FRONT screws into place, on the front of the nesting box. Then, Screw the two pieces together, then screw into the floor.



### step five

Install MAN DOOR GABLE WALL (D).

Siding from BACK WALL and FRONT WALL will slide into cavities provided.

Make sure wall is tight against floor.

Drive 3 pre-started screws on corners, then drive 4 pre-started screws into floor.



### step six


Install ROOF PIECE (E), (F), and (G).

When viewing coop from back, (E) is placed on left half of roof, (F) is in the middle, and (G) is on the right side.

Once you have (E) and (F) into place, drill them together in the middle beam, inside the coop. Once you put (G) into place, drill it together with roof piece (F).

They will overlap on the top of the roof. Make sure the back of the roof is flush with the paint line.

Drive the 8 pre-started screws that are in the top of the wall into the roof panel.

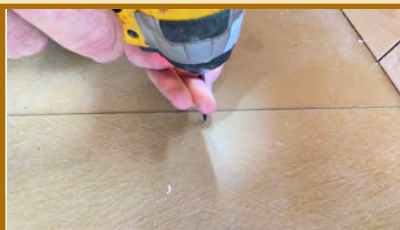

### step seven

Once you are finished installing the roof and your coop looks complete, there is still a few more screws we have to take care of. Take two black screws out of the bag and drill them into the floor board, next to the screws you drilled in Step 1.



### step eight

Put black screw in bottom hinge of door.

Drop ROOST BARS into slots provided on inside of gable walls.

Hook CHICKEN RAMP at bottom of chicken door.

NOTE: To loosen or tighten door latches, use supplied allen wrench. Loosen small screw on inside of latch with allen wrench, moving the latch in or out. Tighten screw and test.

Assembly is **OverEZ!**

Watch our assembly video here

