

Installation Guide

STEP 1

Cut a circular hole approximately 4 " in diameter in the countertop



STEP 2

Remove the base from the housing to expose screw terminals.



CAUTION: Before handling the cable, make sure the circuit is OFF.


STEP 3

Feed cable through the lock nut under the countertop, as this will secure the device later.



STEP 4

Fasten the metal jacket to the device base
A fitting will be required (not included).

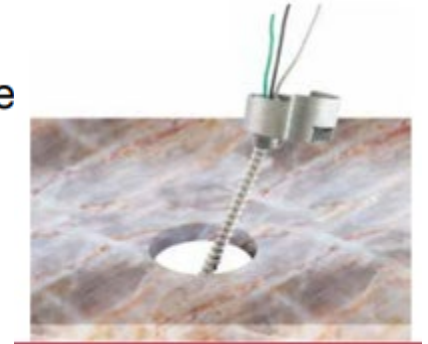

Installation Guide

STEP 5

Strip conductors to the correct length as shown on the device.

Ground the base by bonding the green or bare wire to the grounding screw on the base.

Terminate the green or bare wire to the green screw marked \perp .

Terminate the white or gray wire to the white screw marked "WHITE" and black or red wire to the brass screw marked "HOT".



STEP 7

Insert the device into the countertop opening and hand tighten the lock nut to secure the device in place.

Threaded collar adjusts to fit counters up to 2-1/8" thick



STEP 8

Terminate the device to the power source. Press the cover to pop up the receptacle to use, press again to close.