



Headboard Bracket Assembly

SKU 2300200

NEED HELP?

1-855-581-3095

warranty@rizehome.com

INCLUDED PARTS

2 pcs. headboard brackets

2 pcs. short bolts

6 pcs. washers

1 pc. wrench

2 pcs. support bars


4 pcs. long bolts

6 pcs. nuts



Remove all pieces from the carton.


NOTE: Example of included parts

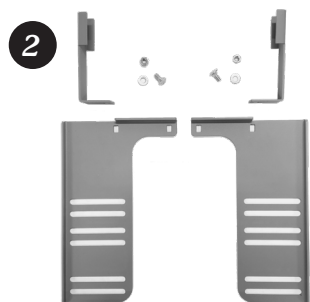

Lay out right and left headboard brackets and support bars as shown.



Attach the right and left support bars to the headboard brackets using a short bolt. Secure with a washer and nut. Tighten with wrench.

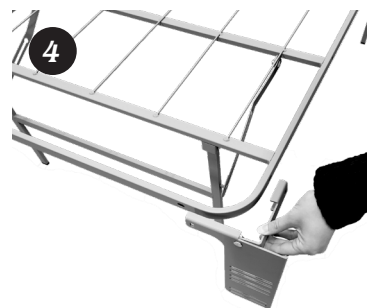

To attach the headboard brackets with support bars to the frame, start by aligning the bracket to the top of the head end of the base frame with slots towards the side of the frame. insert a long bolt into the hole on the top of the bracket, through the hole in the base frame. Use a washer and nut to secure. Tighten with wrench.

Repeat on other side.



To secure the support bar to the frame, insert a long bolt into the hole in the support bar and through the hole in the base frame on the side of the frame. Use washer and nut to secure. Tighten with wrench.

Repeat on other side.



You can now attach the headboard to the platform bed base.