



# 4 Leg Insta-Lock Bed Frame Assembly Instructions

Designed to be used for Twin, Full, or Queen Beds.


- 1 Swing out cross rails to 90° angles.

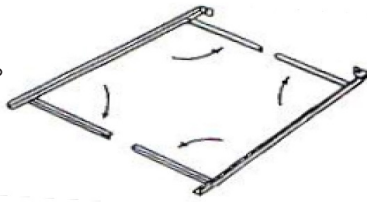

- 2 Install the glides **OR** the sockets & rollers on the legs.

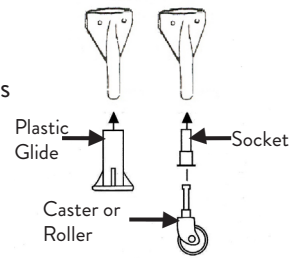


- 3 Find the keyholes on the cross arms that match the size of the bedding to be used. Overlap the cross arms and insert the rivet buttons on the cross arms into the keyholes you selected.

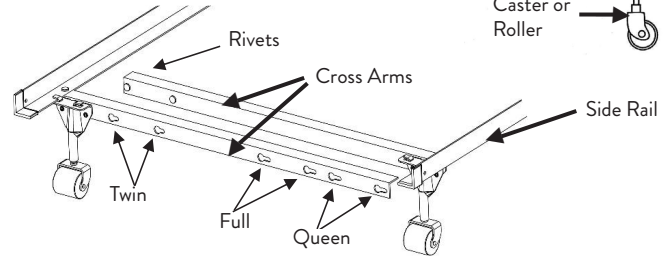

- 5 Slip end caps over the foot ends of the side rails. Your frame is now ready to use.

- 4 Slide the cross arms away from each other to lock the position. Repeat steps 3 & 4 at the other end of the bed.

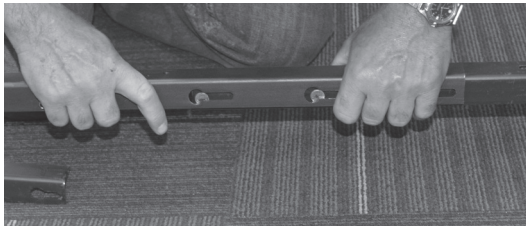


# 4 Leg Insta-Lock Bed Frame Assembly Instructions

Designed to be used for Twin, Full, or Queen Beds.


- 1 Swing out cross rails to 90° angles.



- 2 Install the glides or the sockets & rollers on the legs.

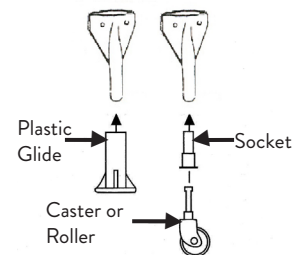

- 3 Find the keyholes on the cross arms that match the size of the bedding to be used. Overlap the cross arms and insert the rivet buttons on the cross arms into the keyholes you selected.

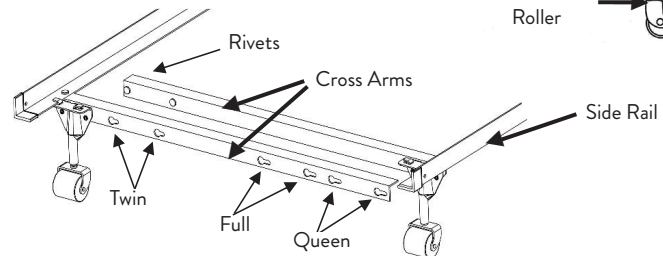

- 5 Slip end caps over the foot ends of the side rails. Your frame is now ready to use.

- 4 Slide the cross arms away from each other to lock the position. Repeat steps 3 & 4 at the other end of the bed.

