




Assembly Instructions: CS-379-AGFB

Queen or King Size Clamp Style Bed Frame with Bolt-On Headboard and Footboard Brackets

1.) Swing out cross rails to 90° angles.

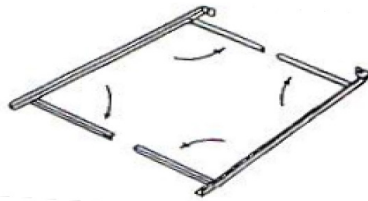


2.) Screw the threaded glide feet into each leg and tighten as much as possible.




3.) Lay the two sides on the floor so that the brackets on each end line up with the headboard/footboard. Slide one clamp over each of the 4 cross arms.

4.) Lay one middle connector (the short, separate rail with 3 holes) parallel to the headboard. Lay the other parallel to the footboard. Attach the center rail to the middle connector. Insert screws through the holes at the end of the center rail and into the first and third holes located in the center of the middle connector. Secure with thumb nut.

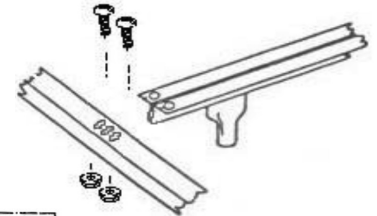

5.) Overlap the cross arms onto the middle connectors. Slide the clamps over both rails to hold them in place. Do not tighten yet. Repeat at both ends.

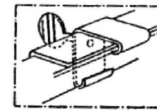

6.) Line up the headboard brackets with the holes in the headboard and attach securely with parts included with headboard. Do the same with the footboard. After both sides are attached, tighten the thumbscrews on the clamps on the frame to secure at the desired size. Unscrew the glide feet until they reach the floor.




Copyright 2018 Mantua Mfg. Co. Rev. 5/9/2018 • www.mantuabeds.com



Assembly Instructions: CS-379-AGFB

Queen or King Size Clamp Style Bed Frame with Bolt-On Headboard and Footboard Brackets

1.) Swing out cross rails to 90° angles.

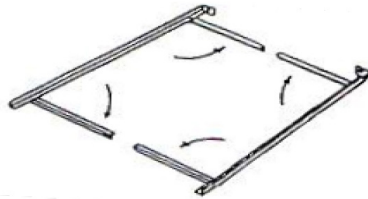


2.) Screw the threaded glide feet into each leg and tighten as much as possible.




3.) Lay the two sides on the floor so that the brackets on each end line up with the headboard/footboard. Slide one clamp over each of the 4 cross arms.

4.) Lay one middle connector (the short, separate rail with 3 holes) parallel to the headboard. Lay the other parallel to the footboard. Attach the center rail to the middle connector. Insert screws through the holes at the end of the center rail and into the first and third holes located in the center of the middle connector. Secure with thumb nut.

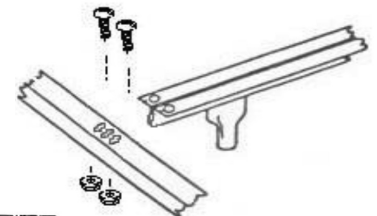

5.) Overlap the cross arms onto the middle connectors. Slide the clamps over both rails to hold them in place. Do not tighten yet. Repeat at both ends.



6.) Line up the headboard brackets with the holes in the headboard and attach securely with parts included with headboard. Do the same with the footboard. After both sides are attached, tighten the thumbscrews on the clamps on the frame to secure at the desired size. Unscrew the glide feet until they reach the floor.



Copyright 2018 Mantua Mfg. Co. Rev. 5/9/2018 • www.mantuabeds.com