




Rize Adjustable Beds: Headboard Kit Instructions (Fits Most Standard Rize models)

Headboard Kit Includes:

- 2 Inner Headboard Brackets
- 2 Outer Headboard Brackets
- 6 Screws
- 6 Washers
- 6 Nuts

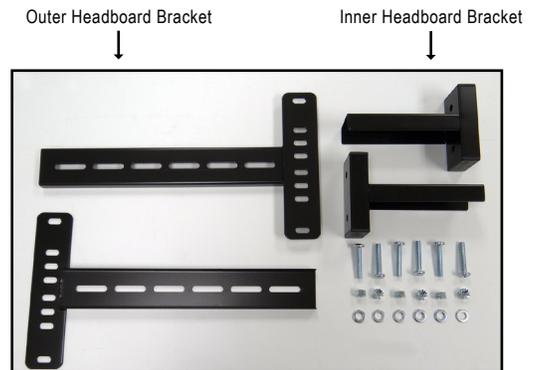

Comes standard with the Rize Relaxer, Contemporary, Contemporary II, Avante, and Cresta models.

Can be used with the Elevation, Edge, Summit, and Clarity (except the one-piece King and California King bases) models also.

Instructions



Step 1

- 1). Use the wireless remote and raise the head of the bed, so the bed base frame is reachable.



Step 2

- 2). Locate the channel c opening on the frame, above the leg. This is where the inner headboard bracket will be placed. Unscrew the retainer bolt from the bed base frame.



Step 3

- 3). Slide the inner headboard bracket into the channel c opening.



Step 4

- 4). Attach the inner headboard bracket to the channel c opening with the retainer bolt that was removed in step 2.



Step 5

- 5). Secure the inner headboard bracket by inserting a retainer bolt into the last pre-drilled hole and attaching with a nut and washer. Repeat on the other side.

- 6). Repeat on other side.

Instructions Continued



Step 7

7). Place the outer headboard bracket onto the inner headboard bracket and attach using 2 retainer bolts, 2 nuts, and 2 washers. Repeat on the other side.



Step 8

8). Attach your headboard to the vertical section of the outer headboard brackets by using a bolt, nut, and washer (**all attachment hardware should be included with your headboard and is not included with the adjustable bed**).

The slots of the vertical end of the outer headboard brackets should align with the slots on the leg of your headboard. If the slots are not aligning, you can adjust the width by unscrewing the outer headboard bracket to realign with your headboard's slots.

